


mizu

Mizu Mid & Ext Hob Swivel Outlet Lead Free

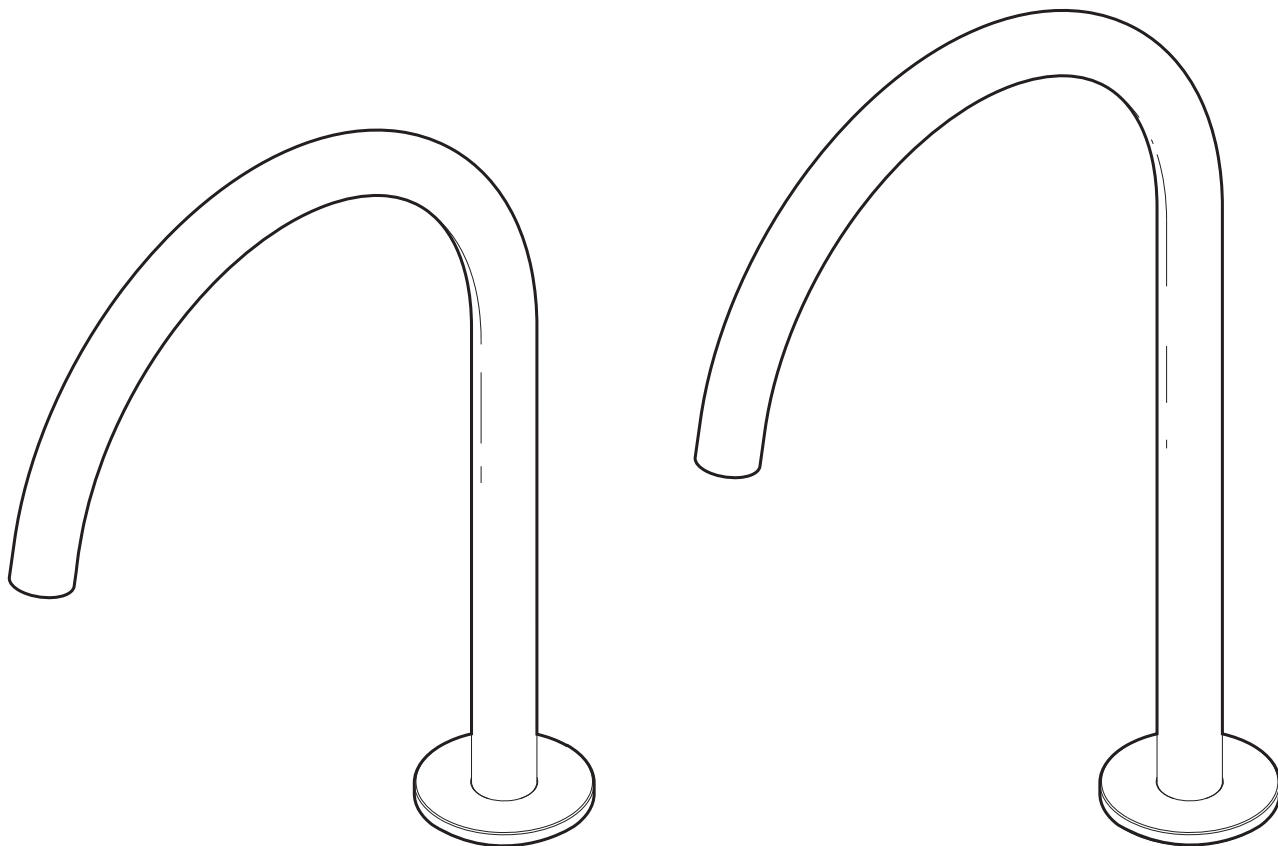

Installation Instructions



Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. The mixers comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give best performance.



In compliance with the lead-free requirements of the National Construction Code Volume 3.



Clean with mild detergent or clear liquid cleansers. Wipe dry with a clean soft cloth.



Do not use steel wool or any abrasive cleansers.



Avoid prolonged exposure to any chemical solution containing chlorides or acids. Surface damage caused by acids will void warranty.



Recommended pressure range 150 – 500kPa.




Max Continuous Working Pressure 1000 kPa.
Max Continuous Working Temperature 65c.

mizu

Mizu Mid & Ext Hob Swivel Outlet Lead Free

Diagram

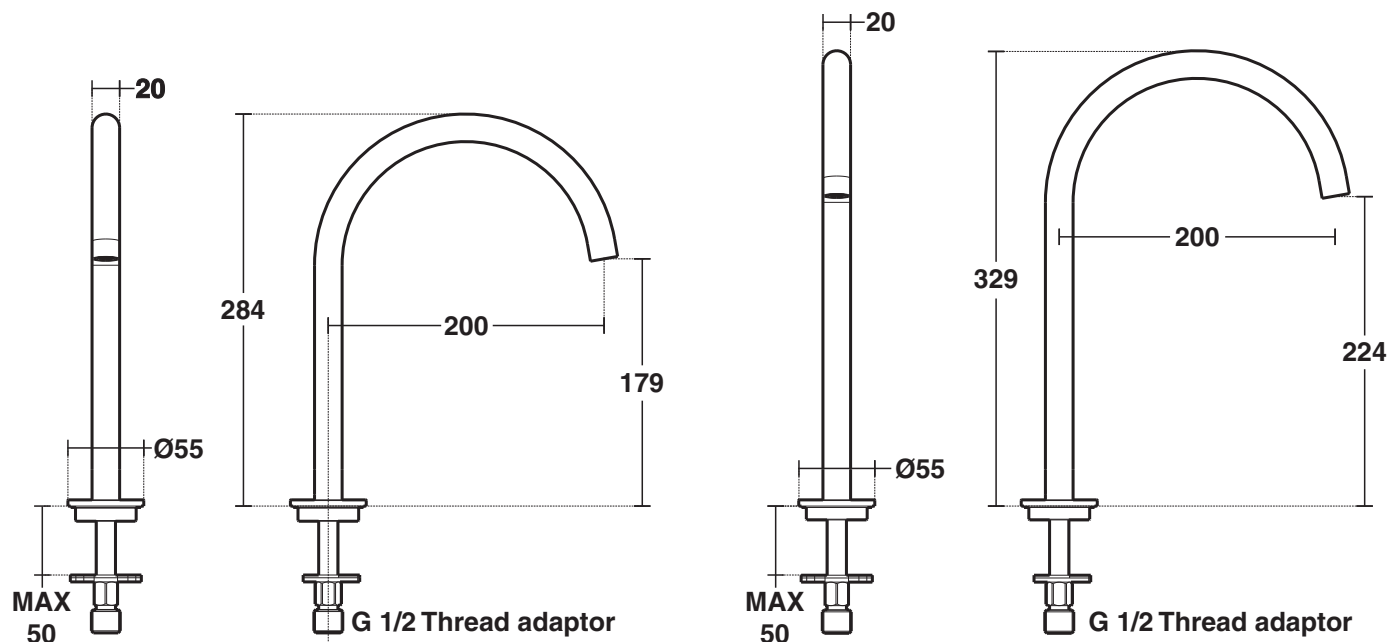

Mizu Hob Swivel Outlet Lead Free

Mizu Extended Hob Swivel Outlet Lead Free

Installation




Important Flush out new pipe work prior to connecting new mixer.



Important All mixers should be installed with isolating stop valves.


Note: Outlet is suitable for high pressure applications where both hot and cold water supply pressures are at 150kpa or above.

Note: This mixer set is not suitable for installation over baths.

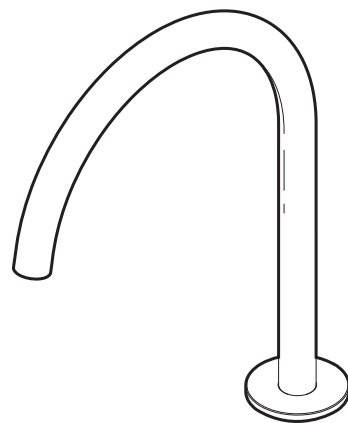

1. Place Outlet (A) into mounting hole.

Note: DO NOT use teflon tape on threads.

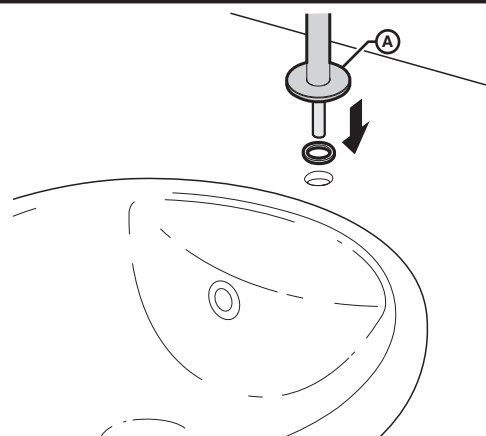

mizu

Mizu Mid & Ext Hob Swivel Outlet Lead Free

Installation

- From underneath, apply Horseshoe Washer (B) prior to positioning Horseshoe Plate (C).
- Lock mixer to basin or benchtop by tightening Lock Nuts (D).


Note: Hoses must have minimum bend radius of 30mm.



Check for water leaks after installation.

Note: Fit 1/2" Adapter (F) to Shank (D), ensuring rubber washer (G) is fitted to the adapter.

Note: To lock Outlet into position, use supplied allen key to tighten grub screw located at back base of Outlet.

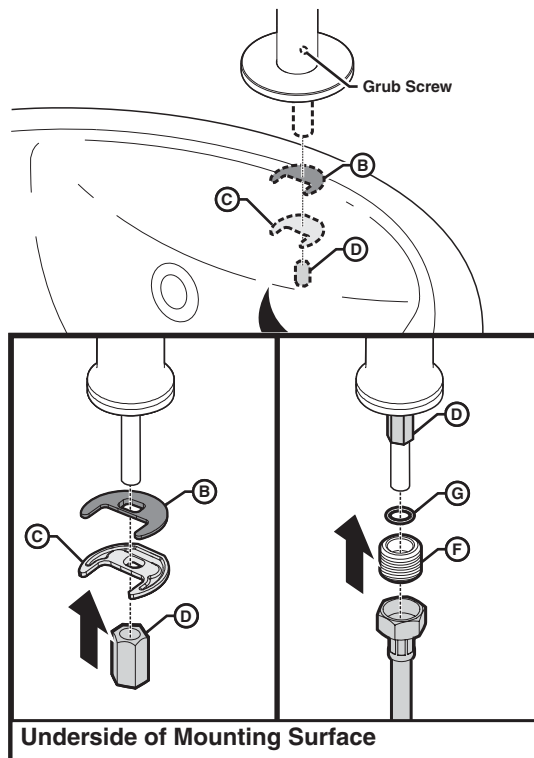


Servicing - Aerator Removal

- For removal of Aerator (E) to clean, use supplied Aerator Tool (F).

Note: Extended Outlet is supplied pre-fitted with 6 Star flow restricted aerator. To convert to 5 Star, a spare flow restricted aerator with tool is supplied which can be fitted once 6 Star aerator is removed.

Note: Aerator with flow controller must be tightened firmly using tool provided to prevent removal by hand.

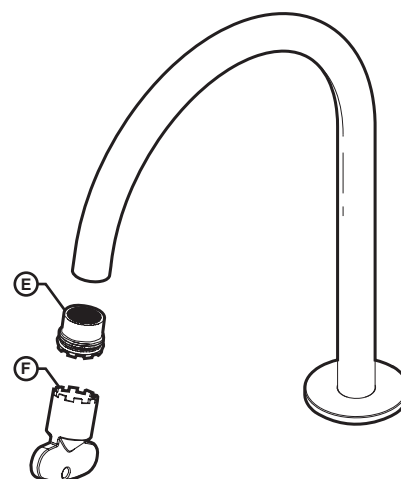

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

