


# POSH

## SOLUS MKII 5 FUNCTION HI-RISE SHOWER

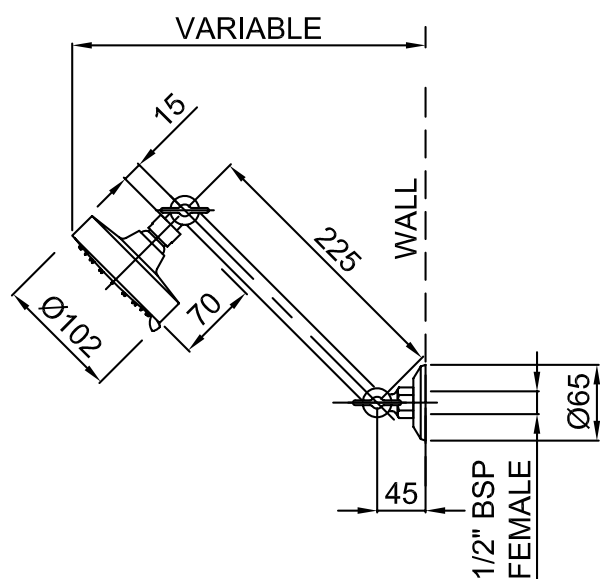

### SPECIFICATIONS


<b>Recommended use</b>	Domestic, hotel and commercial
<b>Colour availability</b>	Chrome
<b>Pressure rating</b>	Suitable for high pressure applications and has been WELS certified to the following: Minimum operating pressure 1.5 bar (150kPa) Minimum operating pressure 5 bar (500kPa)
<b>Temperature rating</b>	Maximum hot temperature 60°C (recommended 42°C) Minimum temperature 1°C
<b>WELS</b>	Stars: 3 Flow rate: 9L p/min
<b>Standards</b>	AS 3662:2005 Level 2



To see the complete Posh range go to [www.reece.com.au/bathrooms](http://www.reece.com.au/bathrooms)

### CLEANING RECOMMENDATIONS

This product should not be cleaned with abrasive materials eg. steel wool/scourers. Do not use any corrosive or abrasive cleaning agents containing acids or scouring agents. Bleaches can also discolour products and therefore should not be used. Damage caused by any improper treatment is not covered by the product warranty – refer to Warranty Conditions.

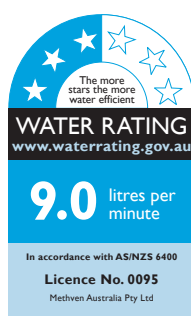

**Disclaimer:** Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 2

Posh

reece

# POSH

## SOLUS MKII 5 FUNCTION HI-RISE SHOWER

### INSTALLATION INSTRUCTIONS

#### IMPORTANT

##### Please Note:

1. Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
  - some instantaneous water heaters
  - some tempering valves
  - some thermostatic mixing valves
2. Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.

### INSTALLATION

The tools you will need: adjustable spanner.

1. Unscrew your old shower anti-clockwise.
2. Clean the exposed thread and bind clockwise with thread sealing tape.
3. All pipework must be thoroughly flushed prior to the installation of the shower.
4. Screw on your new shower (clockwise).