



Compressor Contactor
Electronic Overload

Compressor Winding
Temperature Sensors

INT 69 Protection Module

Electronic Overload

Crankcase Heater

Compressor Contactor Coil

LEGEND	
Field Wiring	-----
Terminal Number	②
Connection Number	43

WARNING
THE ELECTRICAL CONNECTION OF THIS UNIT
MUST BE PERFORMED BY QUALIFIED
PERSONNEL AND MUST COMPLY WITH LOCAL
ELECTRICAL STANDARDS

SHR (Q) D.O.L Series			
Diagram for 3 Phase 415 Volt 50 Hz			
Drawn By	Checked by : R. Stringer	7684506	Index B

Distributed by

ACTROL
Your best solution...

Last Update 28 Aug 2019