

Bristol Mk2 All Directional Shower (3 Star)

Important Installation Considerations

1. NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
 - _ some instantaneous water heaters
 - _ some tempering valves
 - _ some thermostatic mixing valves
2. Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
3. When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with AS/NZS 3500 1.12.

Operating Temperature:

Hot: Max 60°C*
Cold: Min 5°C

Inlet Connections:

All ½" BSP


Important
Recommended pressure range
150 – 500KPa.

Important
Max Continuous Working Pressure 500 Kpa.
Max Continuous Working temperature 60 Deg.


General:

- This product must be installed in accordance with the requirements of AS/NZS 3500.
- After installation all connections must be checked for leaks.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved.
- Exercise care when installing to avoid damage to fitted flow controller.
- Back flow prevention device fitted for hand held shower.

Hi-Rise Shower

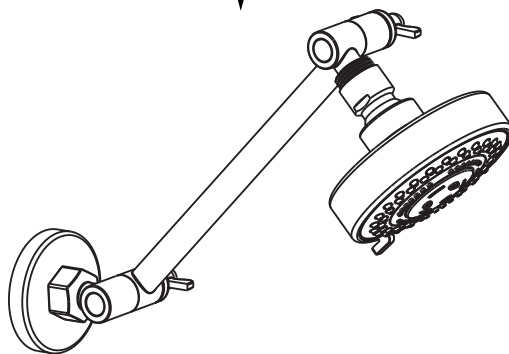


½" BSP Nipple
(Not Supplied)

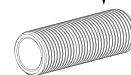 

IMPORTANT: Before you begin, turn off the water supply.


Step 1

- Wall lining hole should be cut or finished as per the dimension shown in the diagram on the right.
- Cut off the threaded nipple 18±1mm from the wall lining and apply thread seal tape to ensure a good seal.

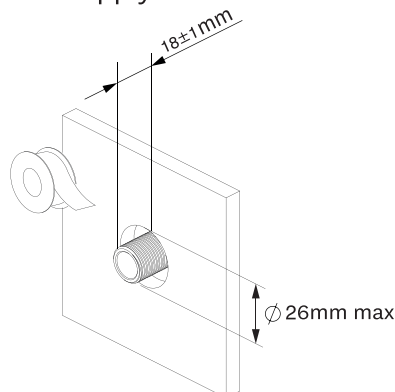


Step 2

- Screw the shower arm onto the nipple.

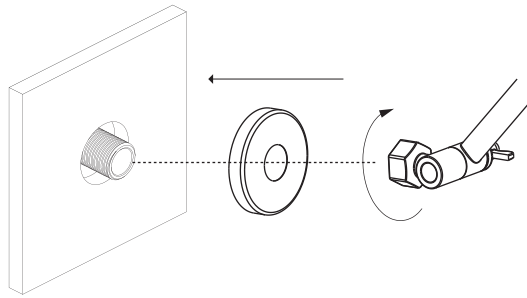

Step 3


- Ensure that the shower arm is oriented vertically.
- Wrenching flats.
- Ensure wrenching flats on shower arm are used to tighten onto nipple.
DO NOT USE ARM AS LEVER.
- Note: To reposition arm, loosen wing nut. Tilt arm into desired position and lock into place by re-tightening wing nut.

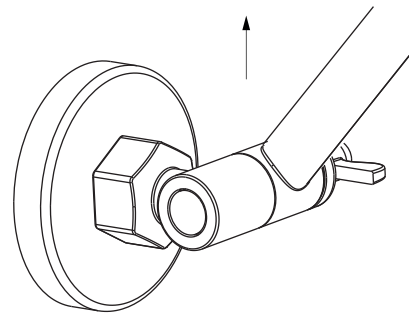

Care and Cleaning:

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

Clean filter washer located in the swivel joint periodically.

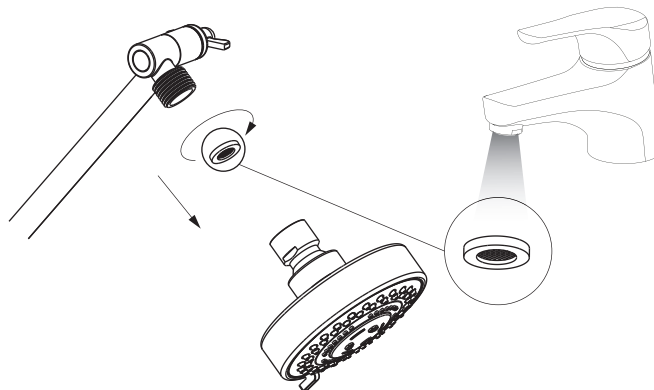

If shower performance is compromised by the build-up of lime-scale, soak in limescale remover for up to 10 minutes. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the shower. Always rinse the shower thoroughly after cleaning to remove cleaning products that can damage the shower.

Never insert objects into the spray nozzle or attempt to remove limescale with sharp objects or abrasives.



Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

