

AXON WALL BASIN OUTLET



SPECIFICATIONS

Recommended Use	Domestic, hotel and commercial
Finish Available	Chrome Outlet Black Outlet
Pressure Rating	Maximum continuous operating pressure 500 kPa. Note: For best performance and longer life we recommend 150-500 kPa.
Temperature Rating	Maximum continuous working temperature 75°
Suitable Hot Water	Storage Tank: No Continuous Flow: Refer to manufacturer of continuous hot water systems Gravity Feed: No



To see the complete MILLI range go to www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.



Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 2



AXON WALL BASIN OUTLET

INSTALLATION INSTRUCTIONS

Milli Axon Wall Basin & Bath Outlet INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1 : Measure and cut Elbow Thread to Max. 12mm from the wall surface.
Ensure the elbow is not recessed into tiled surface.
- 2 : Apply Teflon Tape to Elbow Thread.
- 3 : Ensure "O" Rings are fitted to Adaptor. Screw Adaptor to Elbow Thread firmly.
- 4 : Check if Gasket is fitted to the spout.
- 5 : Push Spout onto Adaptor. fasten Grub Screws.
- 6: **Test & Check for Leaks**

WATER SUPPLY REQUIREMENTS

**150 KPa Min.
550 KPa Max.**

Recommended Working Pressure

75°

Maximum hot water temperature

Note:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3300.1 or relevant local authority requirements.
- Showers may not be suitable for use with gravity-fed water heaters, low-pressure supply networks or some instantaneous water heaters.

NOTE: Some showers with nominal flow rates of less than 7.5lt/min may not provide an effective shower when used with gravity-fed water heaters, low-pressure supply networks or some instantaneous water heaters.

Failure to comply with the above may void all warranties.

Maintenance and Care

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not** use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

Removing The Aerator Retainer

Remove the screw. Place your hand underneath the aerator retainer. Turn on water gradually until the aerator retainer washes out onto your hand.