


# Nobili Balance Pull Out Sink Mixer Chrome (4 Star)

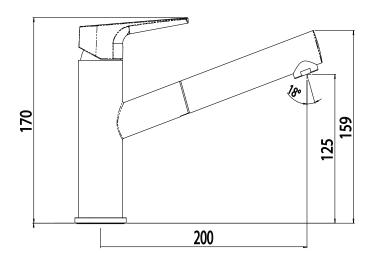

<b>SPECIFICATIONS</b>	
Recommended use	Domestic, hotel and commercial
Colour availability	Chrome
Pressure rating	Maximum continuous operating pressure 1000kPa.
	For best performance and longer life we recommend 150-500kPa.
	Hot and cold water inlet pressure should be equal.
Temperature rating	Maximum continuous working temperature 80°C
Suitable Hot Water Units	Storage tank: Yes
	Continuous Flow: Yes
	Gravity Feed: Not suitable
Water Efficiency	4 star, 7.5 L/min
Standards	AS/NZS 3718



### **CLEANING RECOMMENDATIONS**

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty - Refer to Warranty Conditions.









## Nobili Balance Pull Out Sink Mixer Chrome (4 Star)

### **INSTALLATION INSTRUCTIONS**

#### **Important Note**

Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer come to you already factory assembled and tested. We do not recommend the dismantling on any internal part of the miser. The mixers are factory tested to give the best performance

- Please flush out new pipe work prior to connecting the new mixer.
- All mixers should be installed with isolating stop cocks (Arco).
- 3. In some areas where the incoming water exceeds 500kpa, an approved pressure limiting device must be installed. Equal pressure for hot and cold water supply is required.
- 4. Mixers are recommended for use on mains pressure and instantaneous systems only.

- 5. Place the base washer into position (19).
- 6. Fit the tap body (9) into the basin hole making sure first that the flexible connectors (26, 27) are firmly tightened into base of the body.
- 7. Do not use teflon tape on threads.
- 8. From underneath apply your washer (21) prior to fitting the locking nut (22).
- Lock the mixer onto the sink or benchtop by tightening the locking nut (22).
- 10. Connect the flexible hoses to the hot and cold isolating stops, hand tighten plus half a turn of the nut to provide a watertight joint. Ensure that the hoses are not under tension, twisted or kinked and if bent have a minimum radius of 30mm.
- 11. Check for leaks.

### **EXPLODED VIEW**

Item	Description
1	Handle
2	Grub screw
3	Indicator button
4	Dome
5	Locking Nut
6	Thermal cap
7	Cartridge
8	Internal adaptor
9	Mixer body
10	Insert
11	Hose
12	Rubber washer
13	Spray handle
14	O-Ring
15	O-ring
16	Teflon o-ring
17	Friction o-ring
18	Mixer body internals
19	Base dress ring
20	Rubber washer
21	Rubber washer
22	Lock nut
24	Hose washer
25	Lead weight
26-27	Flex tails (hot and cold)
28	Check Valve and Housing

Check Valve

29

