 


FRANKE

DESIGNER DROP DOWN DOOR MICROWAVE

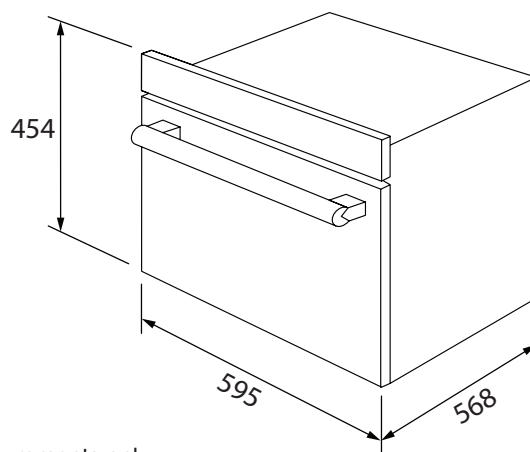

Dimensions are nominal measurements only.

SPECIFICATIONS

Recommended use	Domestic
Material	Black glass
Colour availability	Black
Weight	42kg
Dimensions	595 x 568 x 454mm
Capacity	44L
Voltage	230-240V - 50Hz
Fuse	15A hardwired
Door opening	Drop down
Turntable diameter (mm)	360mm
Auto menus	13
Cavity material	Stainless Steel
Electronic clock	Yes
Child safety lock	Yes



To see the complete FRANKE range go to
www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 1



FRANKE

DESIGNER DROP DOWN DOOR MICROWAVE

DETAILED CLEANING INSTRUCTIONS

- **Note:** Clean the microwave oven regularly.
- Remove any food residue (refer to the paragraph on Cleaning the oven). If the microwave oven is not kept clean, its surface may be damaged and the oven lifespan shortened as a result, causing a potentially hazardous situation.
- The door contact surfaces (the front of the cavity and the inside of the door) must be kept extremely clean in order to guarantee correct oven operation.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip – For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300 ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.
- Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

 
 
INSTALLATION INSTRUCTIONS

Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 100mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250cm² on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The filter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90°C
- Minimum installation height: 850mm

Ventilation openings

behind, min. 250 cm²

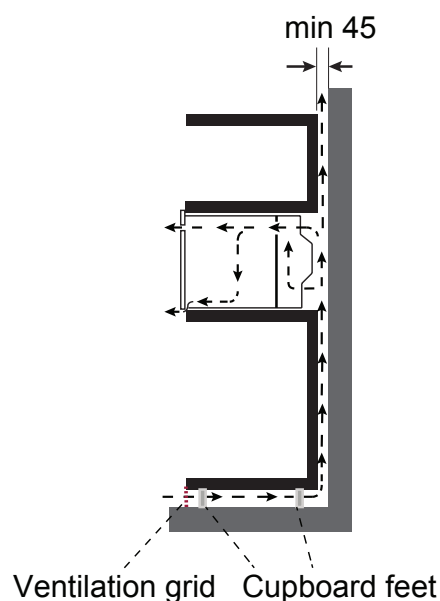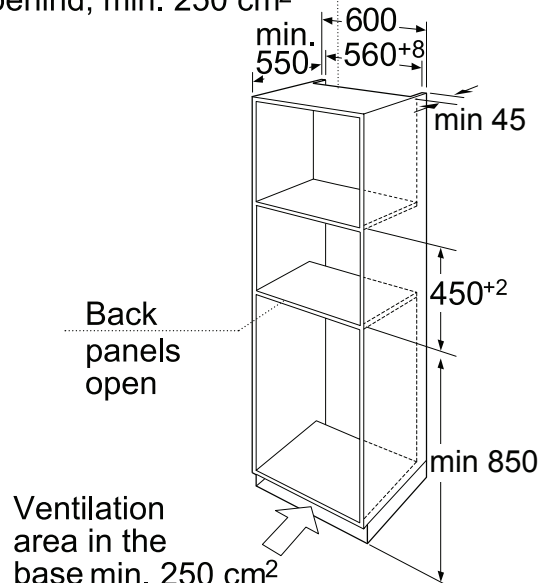

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE

 
reece

FRANKE

DESIGNER DROP DOWN DOOR MICROWAVE

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
- Carefully push the oven into the box, making sure that it is in the centre.
 - Open the door and fasten the oven with the screws that were supplied.

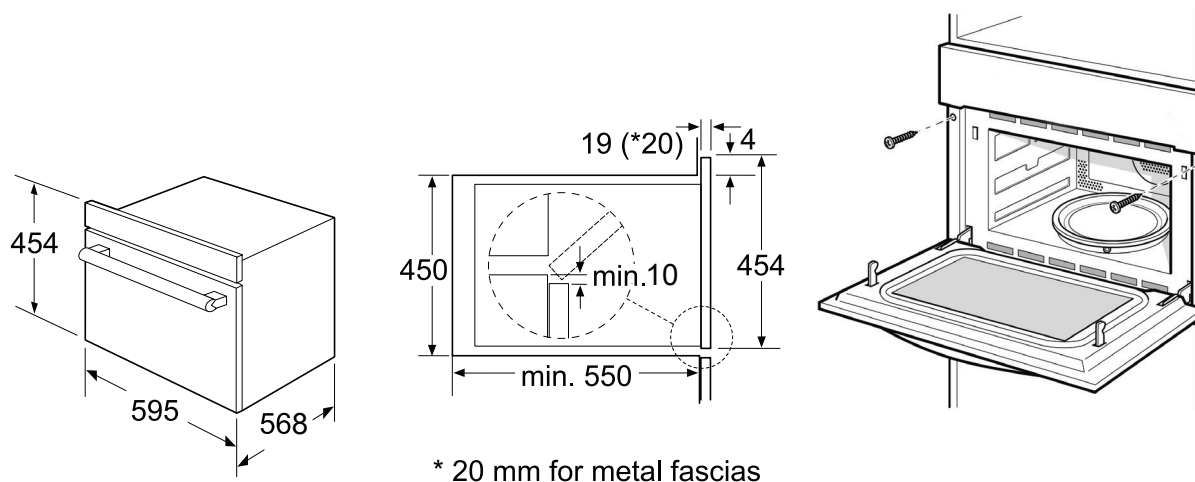

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

Important information

A means for full disconnection in all-poles under overvoltage category III conditions must be incorporated in the fixed wiring in accordance with the wiring rules.

The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.

If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3mm must be provided in accordance with the wiring rules.

Connect the wires of the mains power cord in accordance with the following colour coding:

Green and yellow	Earth wire (E)
Blue	Neutral wire (N)
Brown	Live (L)

Great Britain and Australia:

Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work. When the appliance is installed, protection must be provided against accidental contact in the future.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference