
# NOBILI NEW ROAD BASIN MIXER

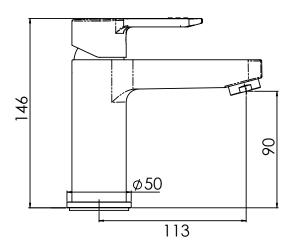

| SPECIFICATIONS           |  |
|--------------------------|--|
| Recommended use          | Domestic, hotel and commercial   |
| Colour availability      | Chrome or Black  |
| Pressure rating          | Maximum continuous operating pressure 1000 kPa.  |
|                          | As per AS3500 pressure must be limited to 500kPa on any new home, extension or renovation. |
|                          | For best performance and longer life we recommend max 150-500 kPa.                         |
| Temperature rating       | Maximum continuous working temperature 65°   |
| Suitable Hot Water Units | Storage tank: Yes<br>Continuous Flow: Yes<br>Gravity Feed: Not recommended                 |
| WELS                     | Stars: 4<br>Flow rate: 7.5 L/Min   |
| Standards                | AS/NZS 3718  |

# **CLEANING RECOMMENDATIONS**

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.





To see the complete Nobili range go to www.reece.com.au/bathrooms







# NOBILI NEW ROAD BASIN MIXER

## **INSTALLATION INSTRUCTIONS**

#### Note

Mixer must be installed by a licenced plumber.


#### **Important**

Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.

### SERVICING-Must be carried out by a licenced plumber

#### **INSTALLATION PROCEDURE**

- Please flush out new pipe work prior to connecting the new mixer.
- All mixers should be installed with isolating stop cocks (Arco).
- In some areas where the incoming water exceeds 500kpa, an approved pressure limiting device must be installed.
  Equal pressure for hot and cold water supply is required for this single lever mixer.
- 4. Mixers are recommended for use on mains pressure and instantaneous systems only.
- 5. Place the dress ring, washer & body into position (11, 12 & 9).
- 6. Ensure that the flexible hoses (17) are firmly tightened into base of the tap body (9).
- 7. Lock the mixer onto the basin by tightening the nut (16).
- 8. Check for leaks.

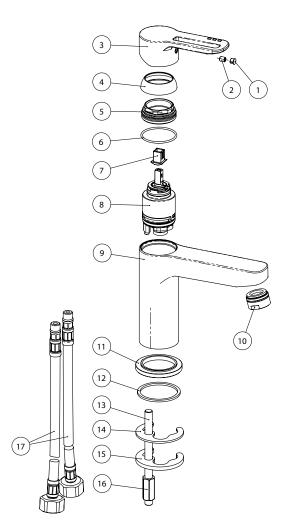

# **EXPLODED VIEW**

Description

Item

| 1  | Indicator Button             |
|----|------------------------------|
| 2  | Grub Screw                   |
| 3  | Handle                       |
| 4  | Dome                         |
| 5  | Lock Nut                     |
| 6  | O-Ring                       |
| 7  | Thermal Cap                  |
| 8  | Cartridge                    |
| 9  | Body                         |
| 10 | Aerator                      |
| 11 | Dress Ring                   |
| 12 | Rubber Sealing Washer        |
| 13 | Shank                        |
| 14 | Rubber Horse Shoe Gasket     |
| 15 | Horse Shoe Fixing Plate      |
| 16 | Nut                          |
| 17 | Flexible Hose (Hot and Cold) |
|    |                              |

