

mizu

Mizu Drift Floor Mount Outlet 32 x 960mm

IMPORTANT NOTE:

Outlet must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your product comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the product. The outlet is factory tested and sealed so as to give the best performance.

CLEANING RECOMMENDATIONS:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Water Supply Requirements

To ensure optimum performance and customer satisfaction, please adhere to the following:


- Maximum hot water temperature 75°C
- Recommended minimum working pressure 150kPa
- Recommended maximum working pressure 500kPa

If the water pressure exceeds or is likely to exceed 500kPa, an approved pressure limiting valve must be fitted.

- Flush out all pipe work prior to installation
- If the water temperature exceeds 75°C and approved tempering valve must be fitted
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements

Maintenance and Care

Do not use cleaning agents containing a corrosive acid or scouring agent. Do not use cream cleaners as they are abrasive. Surfaces should only be cleaned with a cloth and clear water or mild liquid detergent. Use of unsuitable cleaning agents may damage the surface.

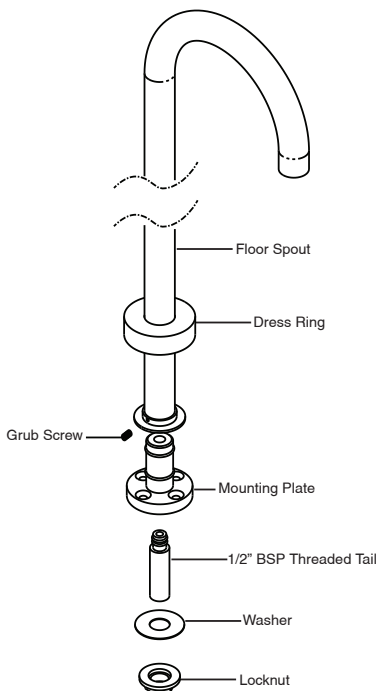

Wood Floor Installation

1. Drill a 25mm hole in the required position through the floor
2. Screw the locknut onto the 1/2" BSP threaded tail and place the washer on the locknut
3. Connect the 1/2" BSP threaded tail to the water supply and ensure that the tail protrudes above the floor between 21mm and 28mm
4. Tighten the mounting plate on to the threaded tail and mark the hole positions for the screw toggles. Remove the mounting plate and drill holes, now re-install the mounting plate using the masonry anchors provided
5. Install the floor spout and tighten with the grub screw
6. Remove the aerator with the key provided and flush system and the aerator separately to remove all debris
7. Re-install the aerator

Concrete Floor Installation

1. Create a 25mm hole in the required position through the floor
2. For installations where underfloor access is available, screw the locknut onto the 1/2" BSP threaded tail and place the washer on the locknut
3. Connect the 1/2" BSP threaded tail to the water supply and ensure that the tail protrudes above the floor between 21mm and 28mm
4. Tighten the mounting plate on to the threaded tail and mark the hole positions for the masonry anchors. Remove the mounting plate and drill holes, now re-install the mounting plate using the masonry anchors provided
5. Install the floor spout and tighten with the grub screw
6. Remove the aerator with the key provided and flush system and the aerator separately to remove all debris
7. Re-install the aerator

Installations with underfloor access

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference