

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

#### **MODELS RBA1055-SERIES**

RBA1055-510 Shower Valve - Short Run InWall RBA1055-530 Shower Valve - Long Run InWall







RBA1055-530











#### **Technical Data**

Inlet/Outlet 3/4" BSP (G3/4") Female

Operating pressure 200 – 500 kPa


Flow Time Long-run Tap - 30 seconds

Short-run Tap - 10 seconds)

Maximum Temp. 55°C Warranty 2 Years

#### **Dimensions**

**RBA1055-510 -** Short-run Tap Valve **RBA1055-530 -** Long-run Tap Valve

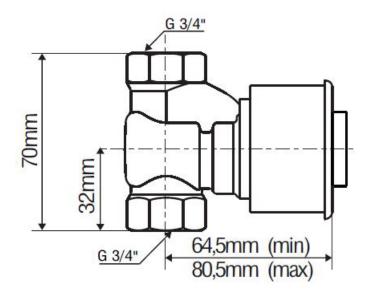

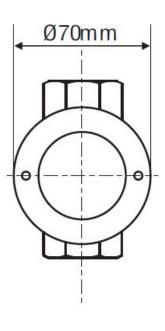


Figure 1


### **Description**


Self closing valves designed for public areas, available in bright chrome finish casted from dezincification resistant brassalloy. Single connection to water supply line, to either cold or mixed water.

RBA1055-510 Short-run Tap Valve 10 Seconds nominal RBA1055-530 Long-run Tap Valve 30 Seconds nominal



## **Spare Parts**

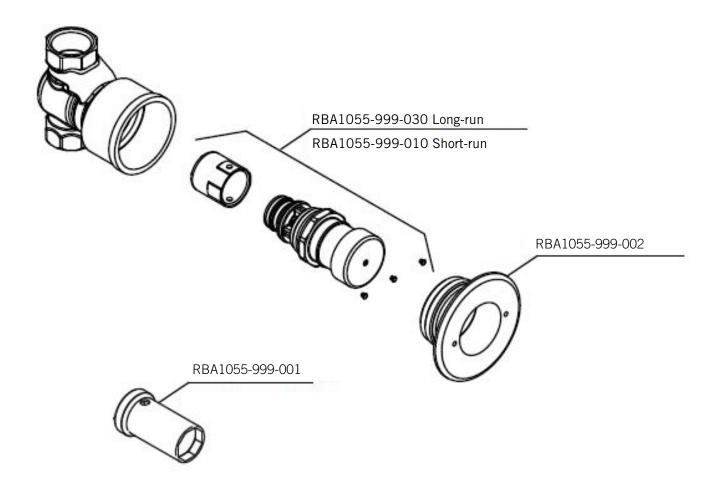

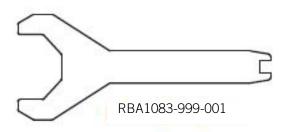

RBA Code No.	Description	
RBA1055-999-030	Long-run Cartridge with Coloured Plugs (30 Seconds)	
RBA1055-999-010	Short-run Cartridge with Coloured Plugs (10 Seconds)	
RBA1055-999-002	Escutcheon	
RBA1055-999-001	Special key	
RBA1083-999-001	Spanner key	



#### **Installation Below Outlet**


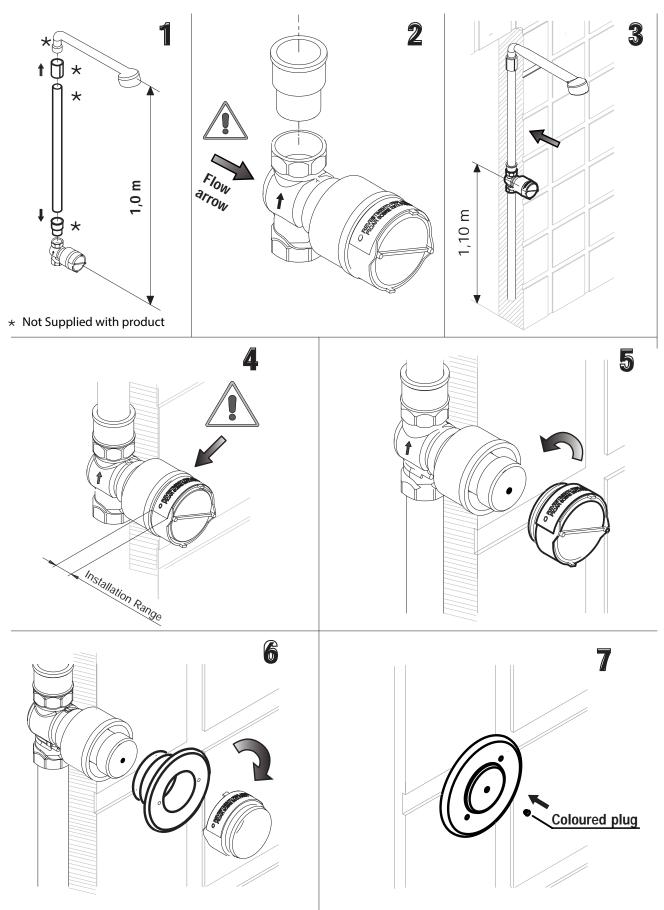


Figure 2

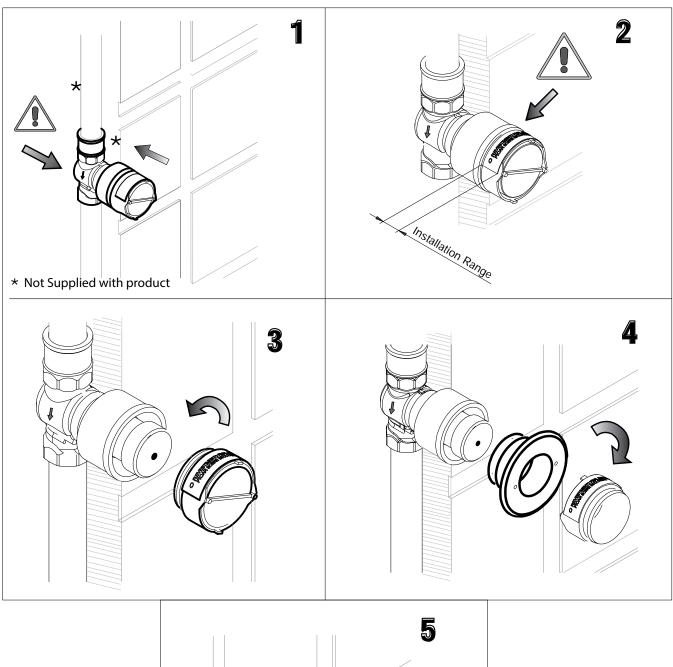

#### **Installation - Above Outlet**



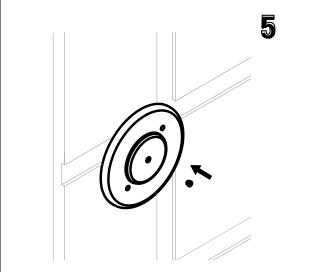



Figure 3




## **Troubleshooting**

Problem	Probable Cause	Solution
No flow or low volume	Water turned off Water outlet blocked	Turn on Remove the blockage
Water flows continuosly or Short/ long flow time	Cartridge blocked with dirt Cartridge damaged Valve direction incorrect	Remove and clean* Replace the cartridge*
Leak under knob	Cartridge damaged	Replace the cartridge*

## **Maintenance Keys**

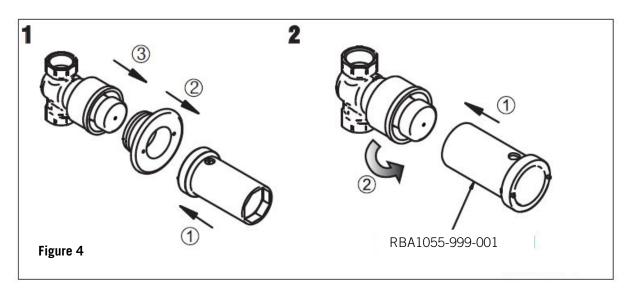

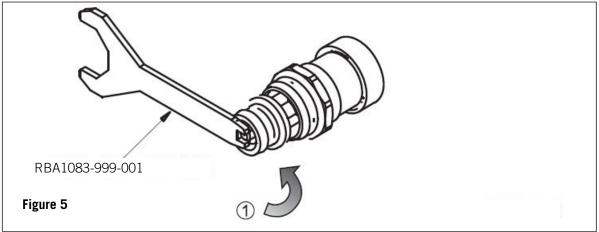



## **INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS**

**Note:** This product should be installed, by suitably qualified persons, in a fit for purpose application, to suitable materials, using suitable fixings and comply with any relevant codes. It should be inspected periodically for signs of wear and tear that may affect performance or safety.

Dimensions are subject to manufacturer's tolerance of +/-10mm. Rough-in should be completed with each fixture.

**Important:** Installation Instructions are subject to change without notice.

Please visit **Our websites** for latest revision.

