



INSTALLATION INSTRUCTIONS


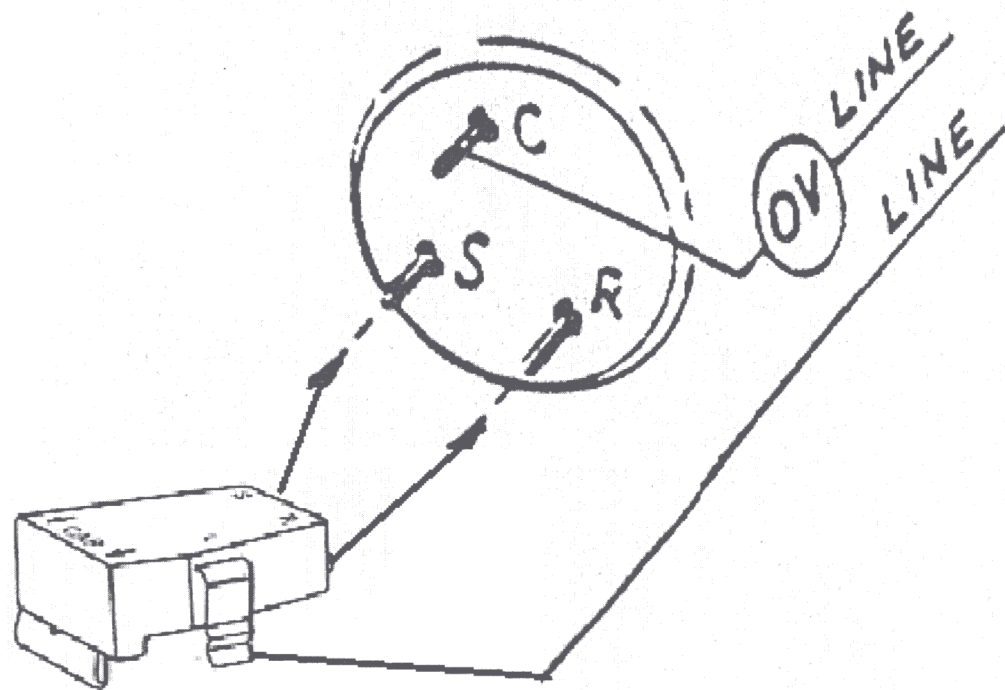


FOR COMPRESSORS
THAT DO NOT USE
START AND RUN CAPACITORS


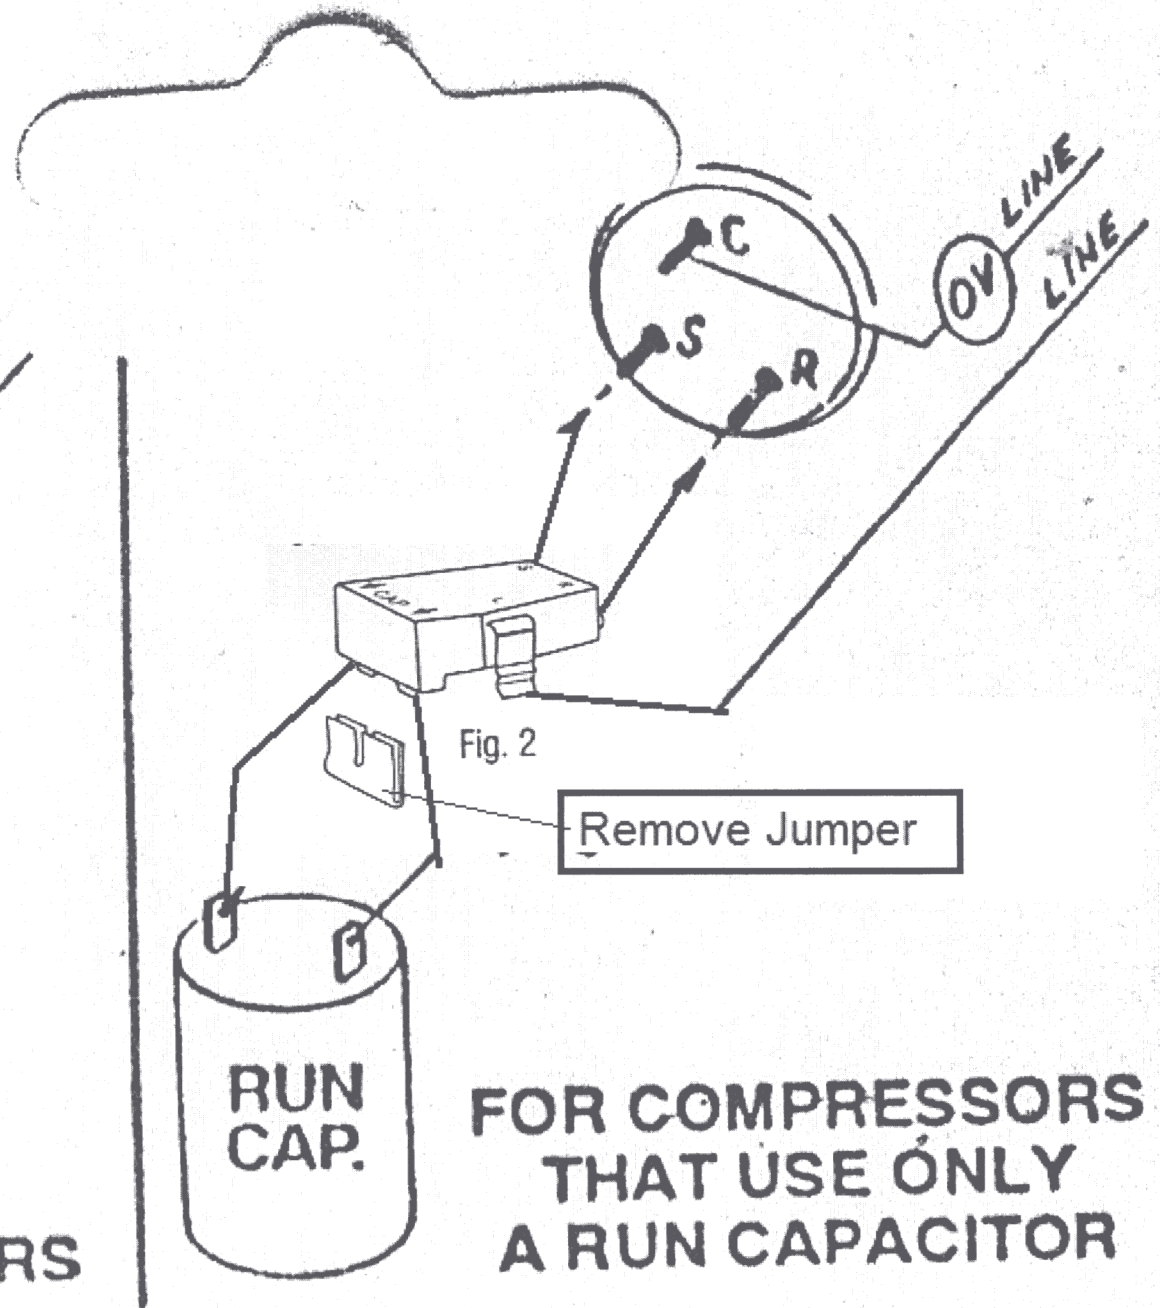


FOR COMPRESSORS
THAT USE ONLY
A RUN CAPACITOR



For Resistance Start Motors.

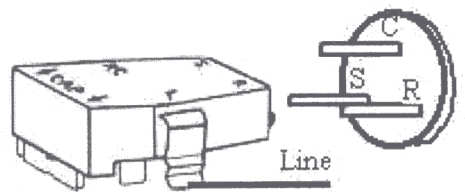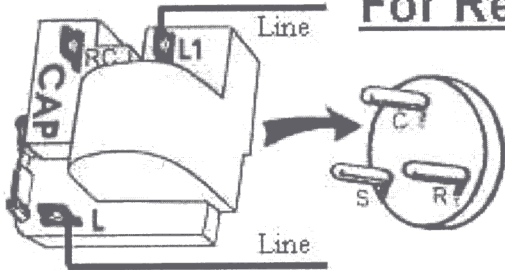

For Start Capacitor Motors.

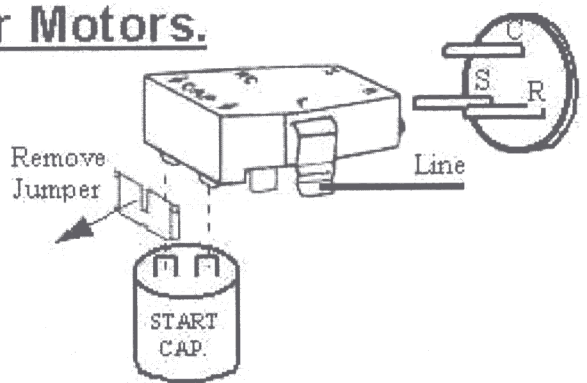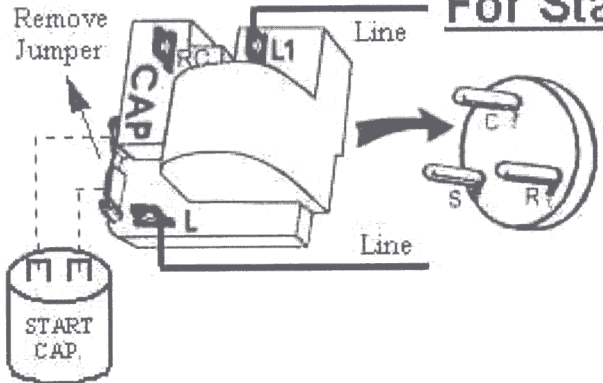

For RUN Capacitor Motors.

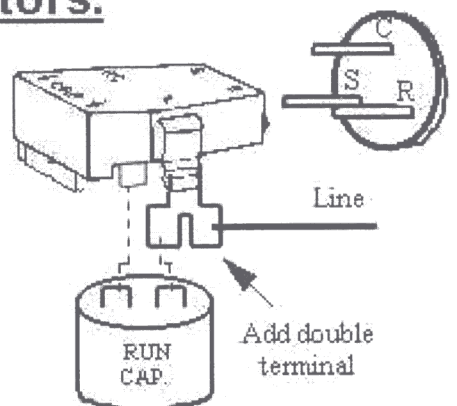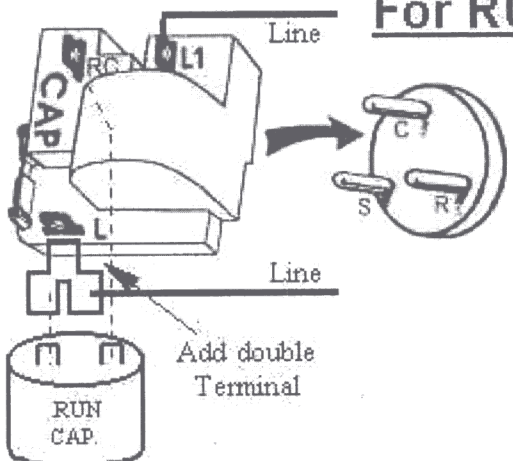

For Start and RUN Capacitor Motors.

