

Myzone 3 User Manual




Reece Pty Ltd reserves the right to change or modify the design, specifications, software, hardware, firmware or Apps at anytime without prior written or oral notice. Images and functions in this manual should be considered as indicative only and may differ from the actual Myzone touch screen or Apps

MYzone3™

System Initialisation

All new or modified systems must be installed prior to system configuration. There are two ways to initialise the system as follows:

- Press the rest button on the side of the Myzone touch screen (depending on screen orientation).
- Switch the power to the system off and back on.

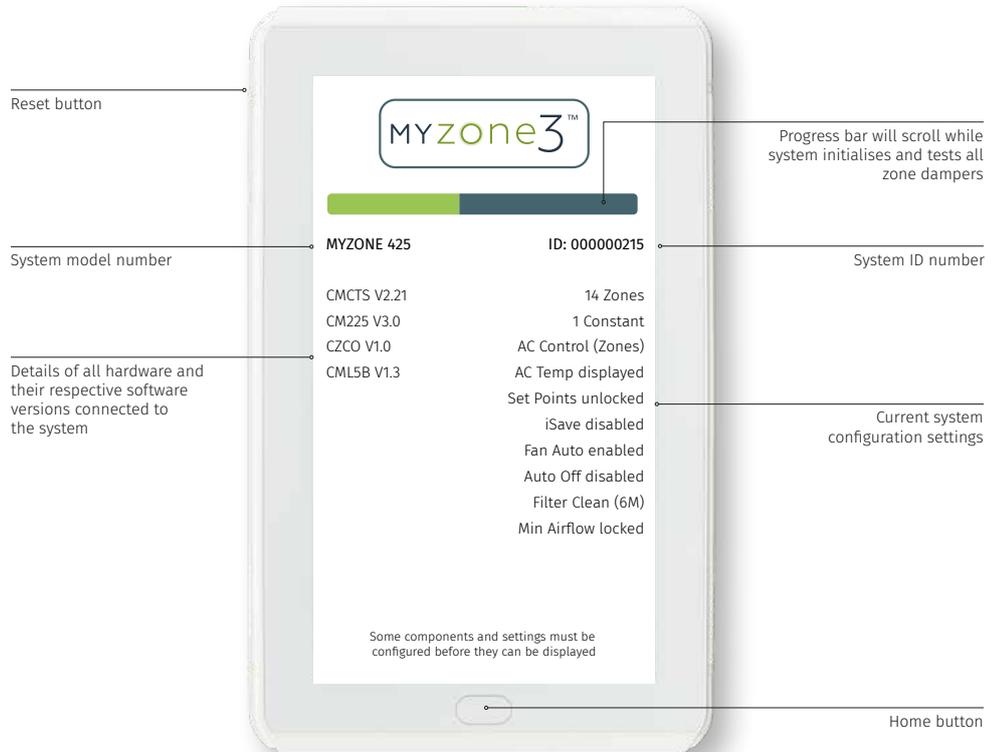


This image is an example only. Your screen may display differently depending on the system type, what options are selected and the configuration settings entered by your installing contractor.

Myzone 3 Main Screen

Press to enter the A/C
unit controls

Press to set the time
and date

Press to activate or
deactivate this screen
audio feed back (beep
on touch)

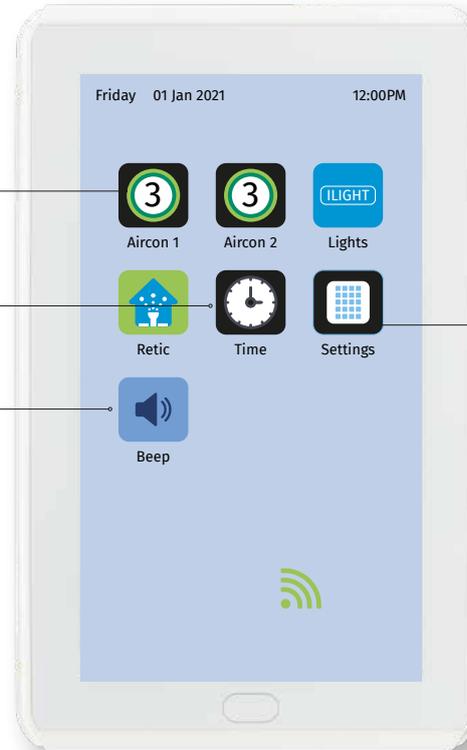

Press to enter the settings
for the tablet

Myzone 3 "Classic" Home Screen

- To get back to the Home screen at any time press: 
- When entering names or values using the keyboard it is easier to use a thin object such as a stylus. Do not use sharp, hard objects as they may damage the screen. The enter button must always be pressed to save the changes you have made. 
- Some functions may have been locked by your installer to ensure the commissioned values are not changed. To make changes to these values contact your installation company.




A/C Unit Control

Press here to increase the A/C unit set point.
(Not applicable if "A/C unit controlling sensor is set to Zones").
*Check with your installer on configuration settings.

Press here to decrease the A/C unit set point.
(Not applicable if "A/C unit controlling sensor is set to Zones").
*Check with your installer on configuration settings.

Press here to go back to the home page

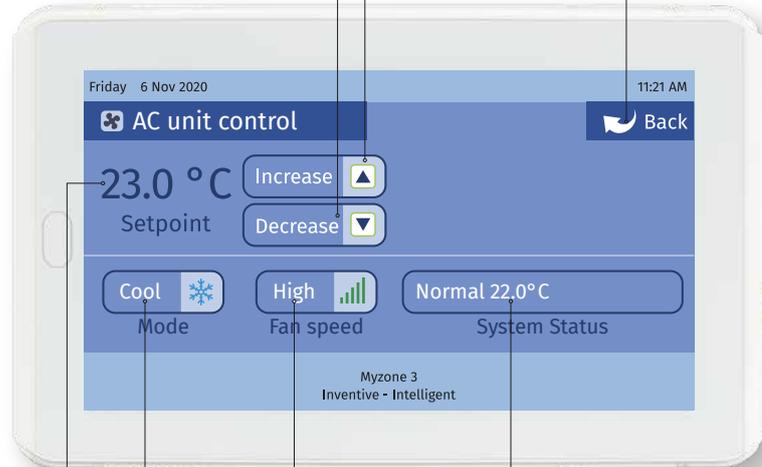

Current A/C unit set point (If unit is set to control from the Return Air). If unit is set to control from zones this will show the current zone controlling the outdoor unit. *Check with your installer to determine if unit is controlling from Return Air or Zones.

Press here to change the mode. Modes available are COOL / HEAT / VENT / DRY / AUTO

Press here to change the fan speed. Modes Available are LOW / MEDIUM / HIGH / TURBO / AUTO. (NOTE: Turbo is only available on certain A/C unit models).


A/C unit actual temperature. (Shows the temperature at the Return Air or the tablet depending on configuration).

Zone Control

Indicates this zone is open. Press here to close the zone.

Indicates this zone is in climate control mode.
Press here to change the Set point.

Press here to go back to
the home page

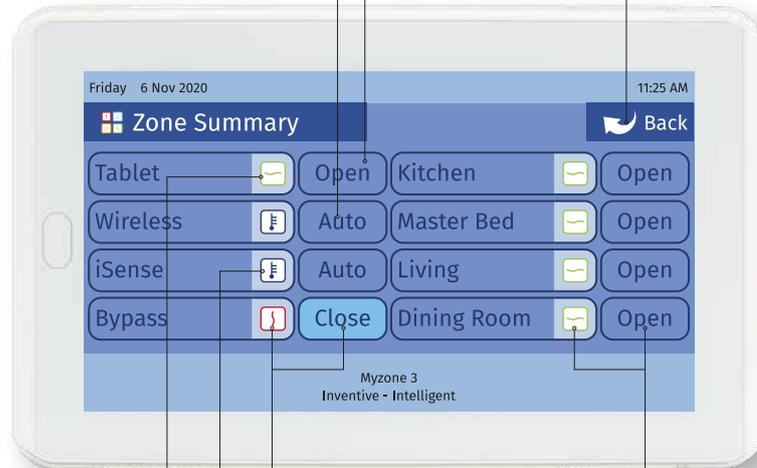


Press here to change zone name

Indicates this zone is currently in climate control mode

Indicates this zone is currently closed

Indicates this zone is currently fully open

Edit Zone Names and Settings

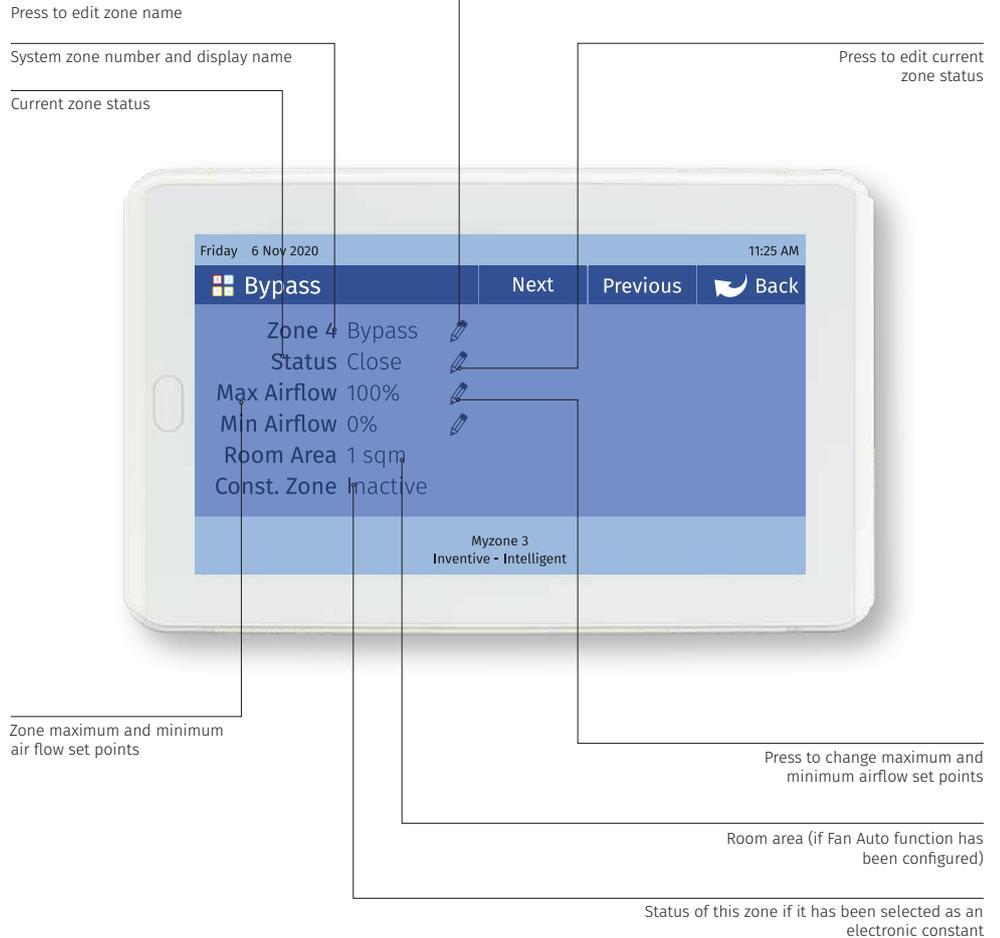

Adjusting Temperature Controlled Zones


Press here to increase the current zone set point temperature

Press here to decrease the current zone set point temperature

Indicates RF strength from sensor serving this zone is acceptable (only if RF sensor is installed)

Indicates battery life in the sensor serving this zone

Press here to go back to the zone summary

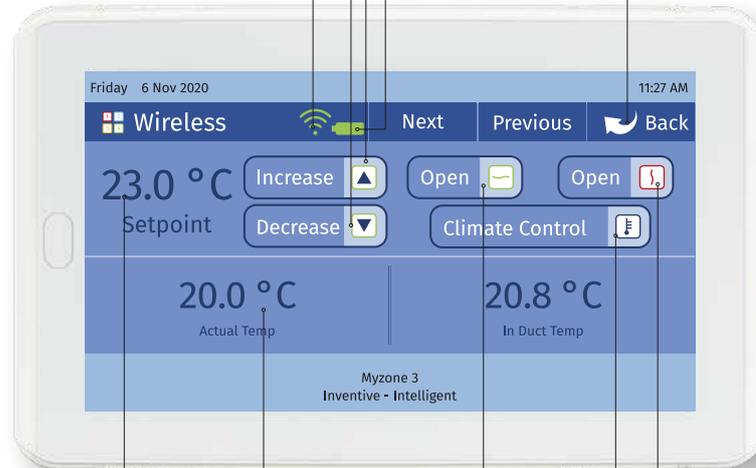

Indicates current temperature set point required for this zone

Indicates the actual temperature in this zone (as measured by Myzone)

Press here to close this zone

Press here to allow Myzone to automatically control the temperature in this zone

Press here to fully open this zone

Zone Airflow Summary

Indicates current maximum air flow settings to this zone

Indicates current minimum air flow settings to this zone

Press here to go back to the zone summary



Press here to change the zone air flow settings

Zone name


Changing Zone Airflows

Press here to increase the maximum airflow to this zone

Indicates current zone that you are changing the airflow to

Press here to go back to the airflow summary

Press here to increase the minimum airflow to this zone

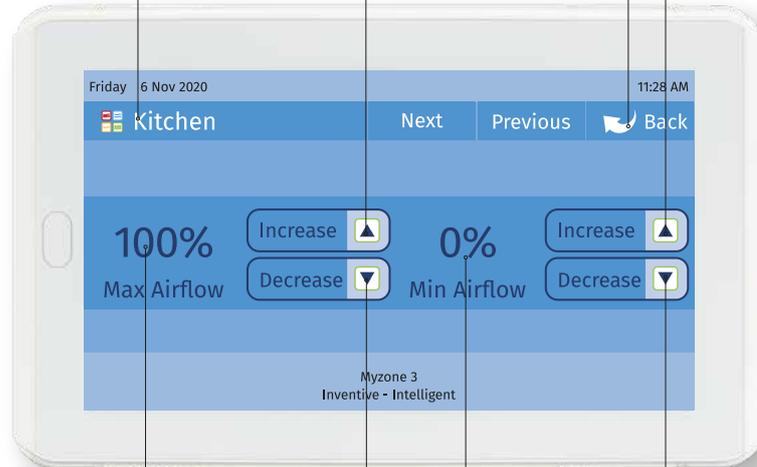

Indicates the current maximum airflow setting for this zone

Press here to decrease the maximum airflow to this zone

Press here to decrease the minimum airflow to this zone

Indicates the current minimum airflow setting for this zone


Note:

- It is possible to lock the maximum and minimum airflow settings in the configuration menus. If your screen does not display as indicated here and you require to make changes to airflows please contact your installer to activate your display.

Favourites

Press here to setup and edit Favourites

Press the Favourite you would like and Myzone will automatically change all the zones settings for this favourite

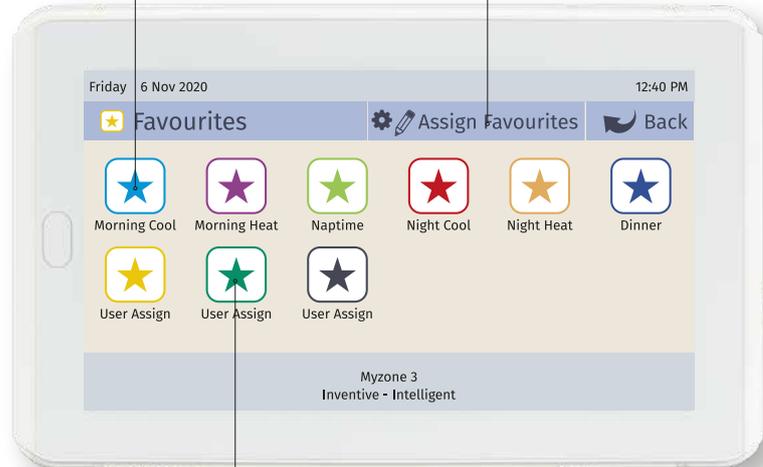

Indicates this favourite has not been configured


Assigning and Editing Favourites

Press here to change the name of this favourite

Indicates current favourite being changed

Scroll up or down to see more zones

Press here to go back to the favourites summary. Pressing the back button will save the favourite setting selected.

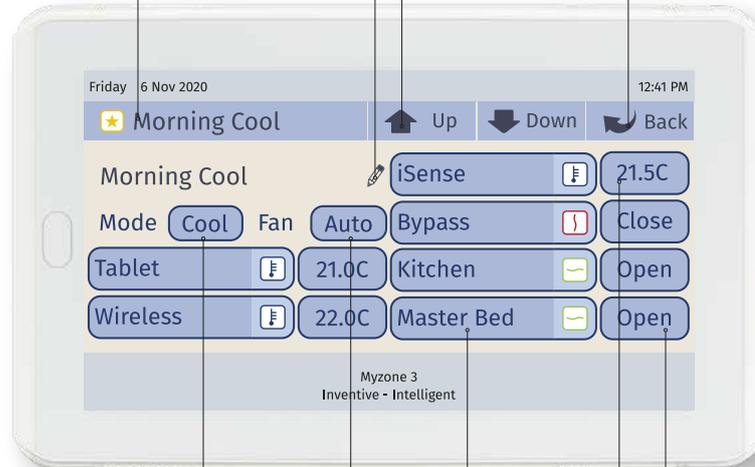

Press here to change the AC Unit Mode

Press here to change the Fan Mode

Zone names

Indicates what mode you want each zone to operate in when this favourite is used. Change each zone setting to suit your requirements for this favourite.

If you require a different temperature to that indicated, go to your zone and change it first


Schedules

Indicates an automatic time schedule has been enabled for this favourite

Any of your favourites can be set to automatically start at any time of your choosing. Press here to enable the time based schedule for favourite (Morning Cool).

Press here to set up or edit a schedule on any favourite

Press here to go back to the favourites summary. Pressing the back button will save the favourite setting selected.

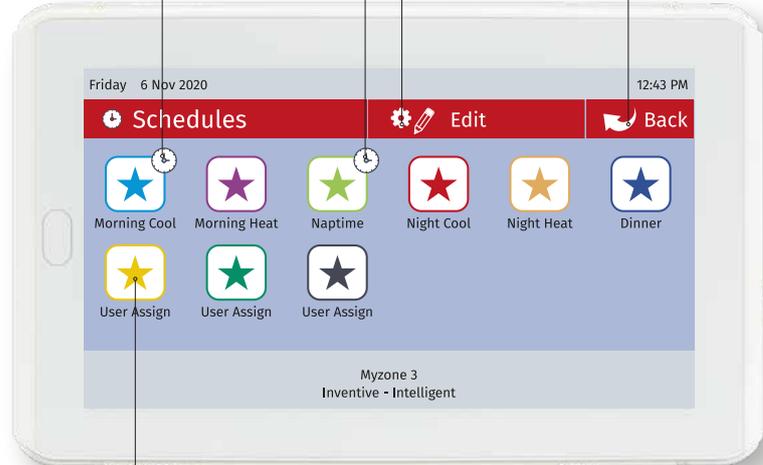

Indicates no automatic time schedule has been enabled for this favourite


Setting and Editing a Schedule

Indicates the start time for this schedule

Indicates current schedule that you are changing or setting

Press the key pad to change the time. Remember it is in 24 hour format so for 2:30 am type in 0230.

Press here to go back to the schedule summary

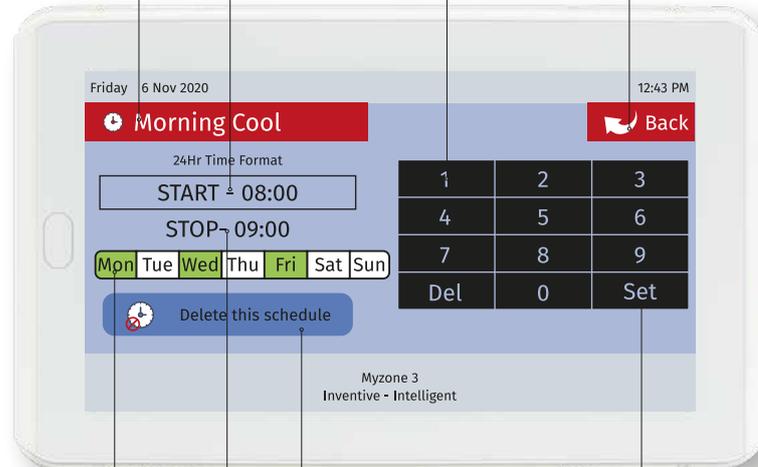

Indicates the days this schedule will apply. Press to stop the schedule running on this day.


Indicates the stop time for this schedule

Press here to clear this schedule

Press the Set button to save your new setting

Setting the Time


Current time

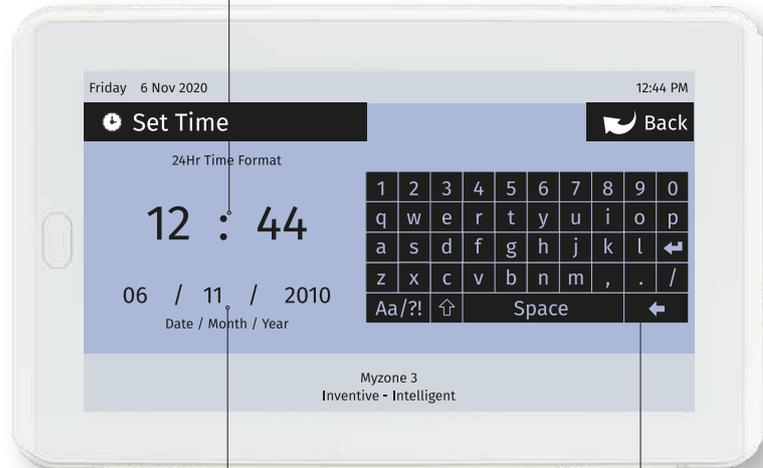

Current date

You must press the enter button to save the changes you have made

Changing the Home Screen Colour

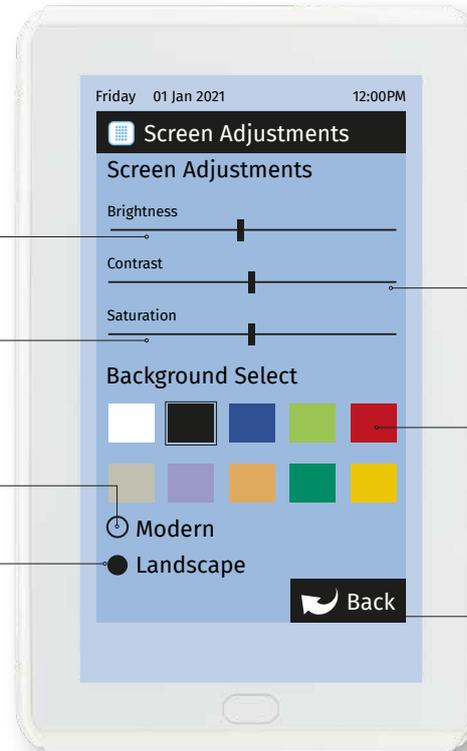

Slide left/right to adjust the screen brightness

Slide left/right to adjust the screen saturation

Press here to change from classic to modern graphics


Press here to change the graphics from Classic Portrait to Classic Landscape.

Slide left/right to adjust the screen contrast

Press the colour you would like for your home screen. Fine adjustments to the shade, tone, hue can be made using the brightness, contrast and saturation slides.

Press here to go back to the home screen

iSense Controller

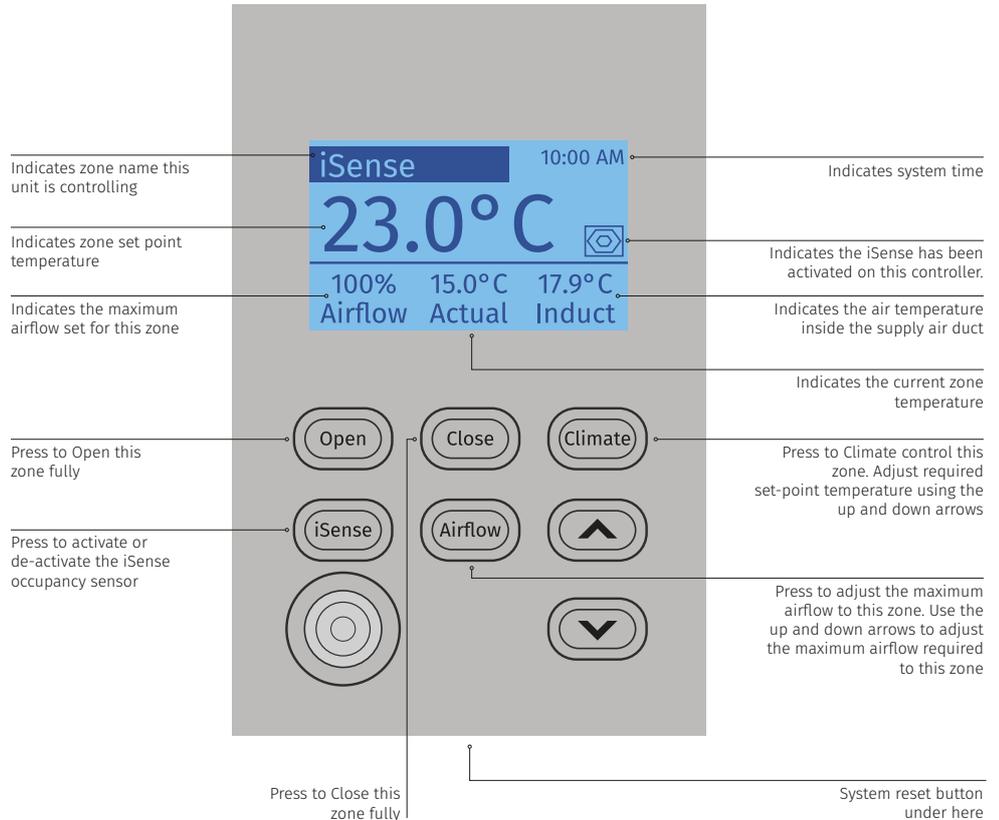

Note:

- When iSense has been activated movement is required in the range of the occupancy sensor to keep the zone operating. The use of the iSense feature in bedrooms, when occupants are sleeping, is not recommended.

Myzone 3 Modern Graphic Main Screen


Press here to change the fan speed.
Speeds available: LOW / MEDIUM / HIGH
/ TURBO / AUTO *Note Turbo mode only
available on some A/C Units

Press here
to enable
/disable
Favourites

Press here to enter
the Settings menu

Press here to turn the
system ON/OFF

Press here to see
System messages

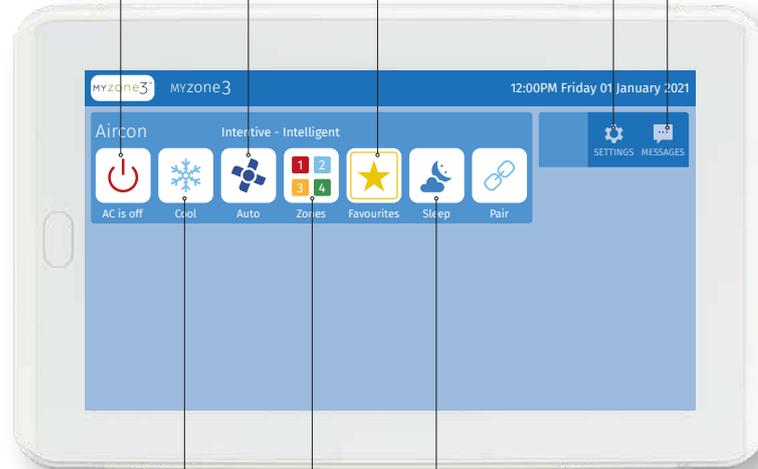

Press here to change the system
mode. Modes available
COOL / HEAT / AUTO / DRY / VENT

Press here to set a Sleep timer for the unit.
Available time options:
0.5H / 1H / 2H / 4H / 6H / 8H / 12H


Press here to view zones
and change individual
room temperatures

Myzone 3 A/C Unit Control – How to Change A/C Unit Mode

Press here to open the A/C unit Control menu and also change the A/C unit mode

Press here to enable /disable Favourites

Press here to increase the A/C Initial set point. (Not applicable if "A/C unit controlling sensor is set to Zones". *Check with your installer on configuration settings.

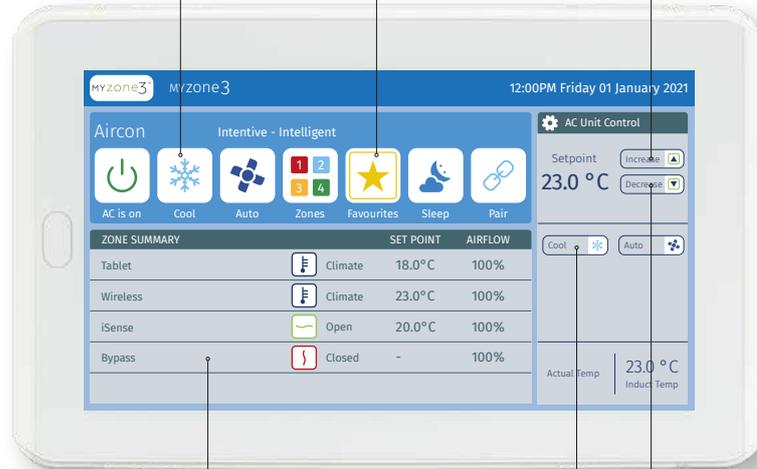


The zone summary provides an overview of the zone names, current setting for the zone and airflow for the zone

Press here to decrease the A/C unit set point. (Not applicable if "A/C unit controlling sensor is set to Zones". *Check with your installer on configuration settings.

You can also press here to change the A/C unit mode

Myzone 3 A/C Unit Control – How to Change Fan Speed

Press here to open the A/C Unit
Control menu and also change the
Fan Speed

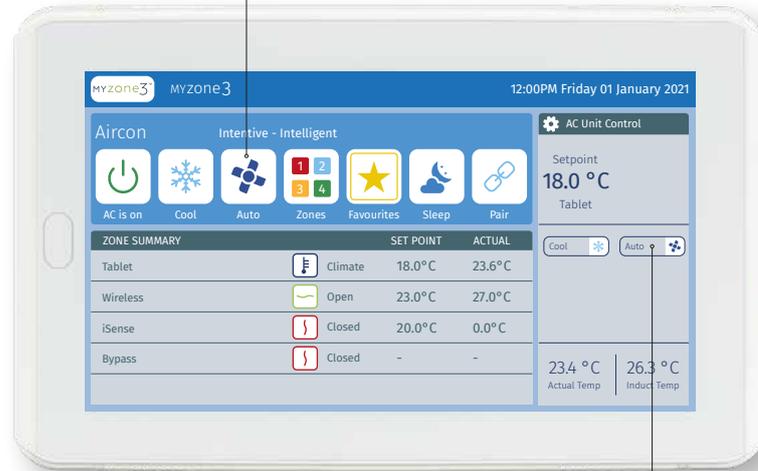


You can also press here to
change the Fan Speed

Myzone 3 A/C Unit Control – How to Set Individual Room Temperatures

Press here to open the Zone
Summary menu

Press here to Increase
the set temperature for
the zone

Press here to Decrease
the set temperature for
the zone

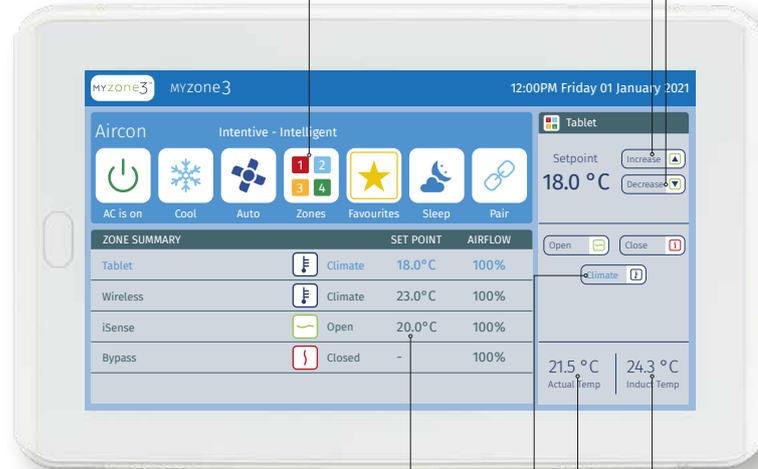


Press here to open the Zone Set Point menu

Press here to control the zone, options are
OPEN / CLOSED / CLIMATE
NOTE: Climate is only available if room
temperature sensors have been installed

This shows the air
temperature coming off of
the indoor unit

This shows the Actual Temp
in the zone

Myzone 3 A/C Unit Control – How to Change Airflow

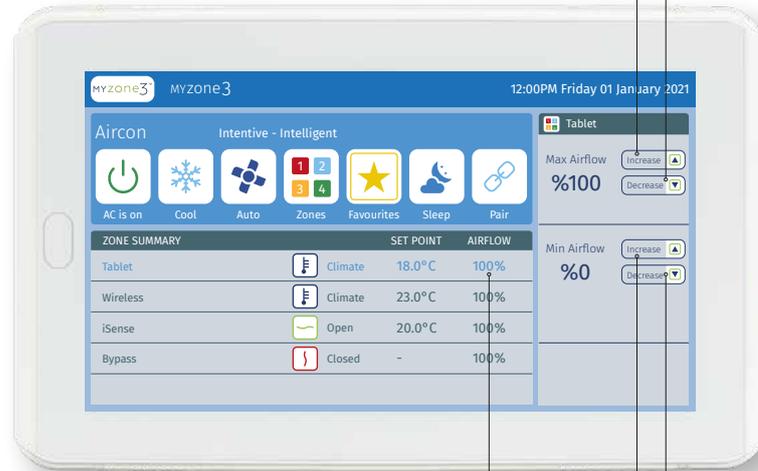

Press here to increase the Maximum Airflow for this zone

Press here to decrease the Maximum Airflow for this zone

Press here to open the airflow set menu

Press here to decrease the Minimum Airflow for this zone

Press here to increase the Minimum Airflow for this zone.

NOTE: Minimum Airflow is locked as a factory setting and can only be unlocked by the installer.

Note:

- Always seek advice from your installer before making airflow changes to the system. Incorrect settings may cause damage to the unit.

Myzone 3 A/C Unit Control – How to Set a Favourite

Press here to open the Favourites menu

Press here to set the Favourite mode

Press here to set the Favourite Fan Speed

Press here to change the Favourite name

Press here to activate the Favourite

Press here to configure the Favourite

Indicates what mode you want each zone in to operate in when this favourite is used. Change each zone setting to suit your requirements for this favourite. NOTE: if you require a different temperature to that indicated, go to zone summary, change the temperature before configuring the Favourite.

Myzone 3 A/C Unit Control – How to Set a Schedule

Press here to open the Favourites menu

Indicates the days this schedule will apply. Press to stop the schedule running on this day.

Use the Up and Down arrows to set a start and stop time for the schedule

Press here to activate the schedule

Press here to configure the schedule

Press here to save the schedule

NAME	FAVOURITE	EDIT	SCHEDULE	EDIT
Favourite 1	★			
Favourite 2	★			
Favourite 3	★			
Favourite 4	★			
Favourite 5	★			

REPEAT						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>				

START: -- : -- PM

STOP: -- : -- PM

SAVE

Installing the Myzone 3 App

Hardware Requirements

- Smartphone or Tablet. The following platforms are supported: Apple & Android.
- Myzone 3 Wi-Fi Bridge.
- Modem/Router.

Software/Systems Requirements

iOS SOFTWARE REQUIREMENTS

- Compatible with iPhone, iPod touch, and iPad. iOS 6.0 and higher.

iOS SOFTWARE REQUIREMENTS

- Requires Android: 2.1 and higher.

INTERNET REQUIREMENTS

- Active Internet Service.

Download the Myzone 3 Home App

- You will need an account with the manufacturer of your phone to enable you to download Apps from their respective store.
- Apple — Apple App Store.
- Android — Google Play Store.
- Login to the respective store.
- To search for the Myzone 3 App type “Myzone3 Home” into the stores search menu.
- Select and download the Myzone3 Home App.


Worldwide Service Registration

World Wide Service

You can only have access to the system from outside your local Wi-Fi range after you have successfully registered your system on the World Wide Service.

To register your system you must:

- Be inside the Wi-Fi area your system is connected to.
- On the App Press worldwide and then press Register Now.
- Complete all the fields making sure you get the Suburb, State and Postcode 100% correct to ensure the correct weather data is displayed on your Nexus screen (if fitted).
- The App will display all the systems/devices it finds in the Wi-Fi area and will simultaneously register all system/devices displayed. Choose a name for your system.
- You must agree to the Worldwide Terms. Once you click submit, a verification email will be sent, to complete registration, check you email and verify your account.
- Make sure you remember your password as you will need it when you login via World Wide
- When you login to World Wide there is an option to save your username and password (Login and Remember Me). We recommend you select this option to make it faster and easier to login to your system remotely.
- To reduce the data usage there may be a slight delay between changing a setting on your phone, and the system updating, when using World Wide.
- Do not use World Wide when you are in your Wi-Fi zone unless you have turned off the Wi-Fi on your smart phone or tablet.

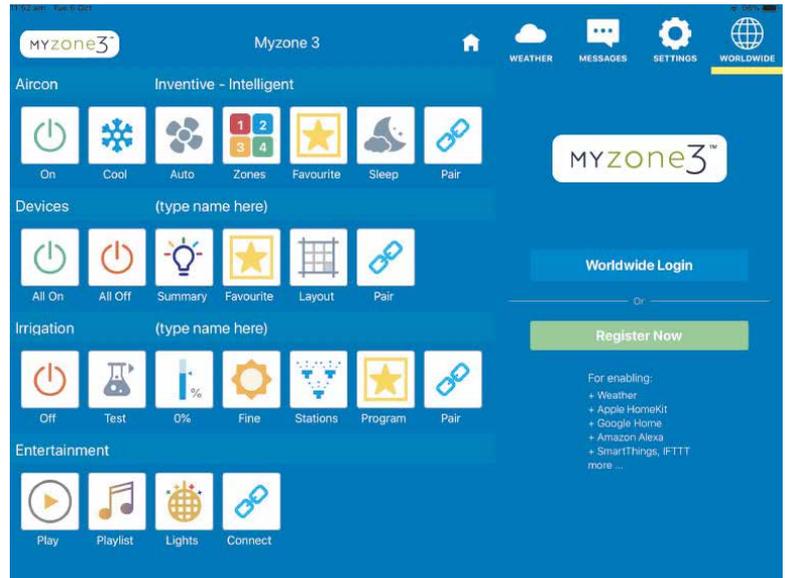

Home Automation Integration

Myzone systems can be integrated into almost any home automation system that has an Ethernet interface, including Google Assistant, Amazon Alexa, Control 4, IFTTT, Apple HomeKit*

For interface specifications please contact Reece Pty Ltd.

Your home automation integrator will need to write suitable code to control your A/C system. This service is not provided by Reece or Myzone.



*Apple Homekit requires an Open Connection "COCB" Bridge to be compatible

Further Assistance

1. If you require warranty or maintenance on your air conditioning system or your Myzone system you should contact your installation company.
2. To lodge a warranty claim please call Reece Customer Care – 1800 080 055.

MYzone3™

Rev 10 – 12/05/21

Reece Pty Ltd
118 Burwood Highway
Burwood Victoria 3125
Australia
Tel: 1800 080 055
Made in China