
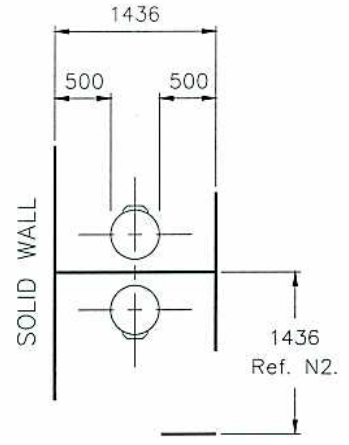
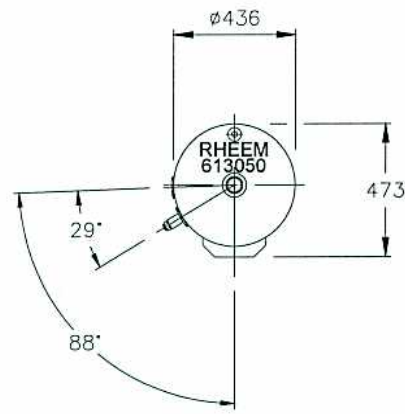
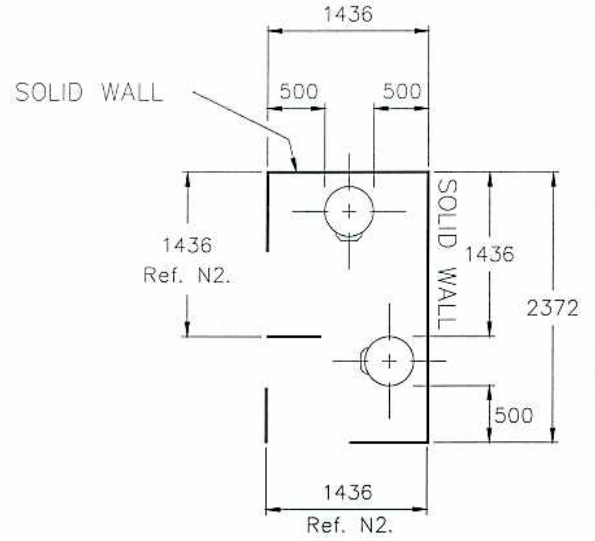
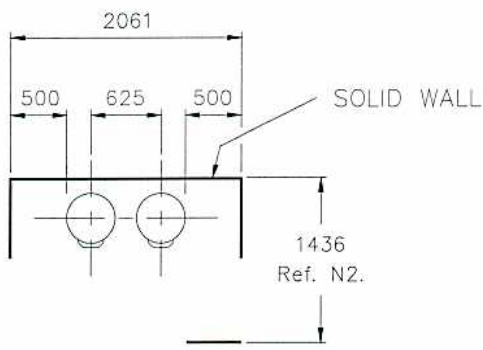


INDOOR AND OUTDOOR MODEL

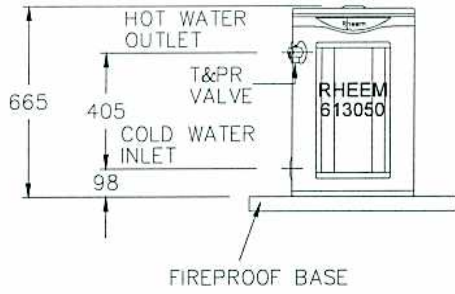


LEGEND

- ⊥ STOP COCK
- ⊗ NON RETURN VALVE
- ⊠ PRESSURE LIMITING VALVE (IF REQUIRED)
- ⊞ COLD WATER RELIEF VALVE
- ⊘ GATE VALVE
- ⊙ CIRCULATOR
- ⊗ FIXTURES
- ➔ DIRECTION OF FLOW
- || UNION
- Y TUNDISH

INLET OUTLET CONNECTIONS: -
 RP 1 1/4 / 32
T&PR VALVE CONNECTIONS: -
 RP 3/4 / 20
T&PR VALVE SETTING: -
 1000 kPa

NOTES:

- IN. MINIMUM SPACE BETWEEN WALL AND BACK OF WATER HEATER IS MM.
- N2. A MINIMUM OF 900mm SHOULD BE LEFT IN FRONT OF THE WATER HEATER FOR ACCESS, SERVICING AND WATER HEATER REMOVAL.
- N3. EXTERNAL WATER HEATERS MUST BE INSTALLED WITH THE BACK OF THE WATER HEATER AGAINST A SOLID WALL.

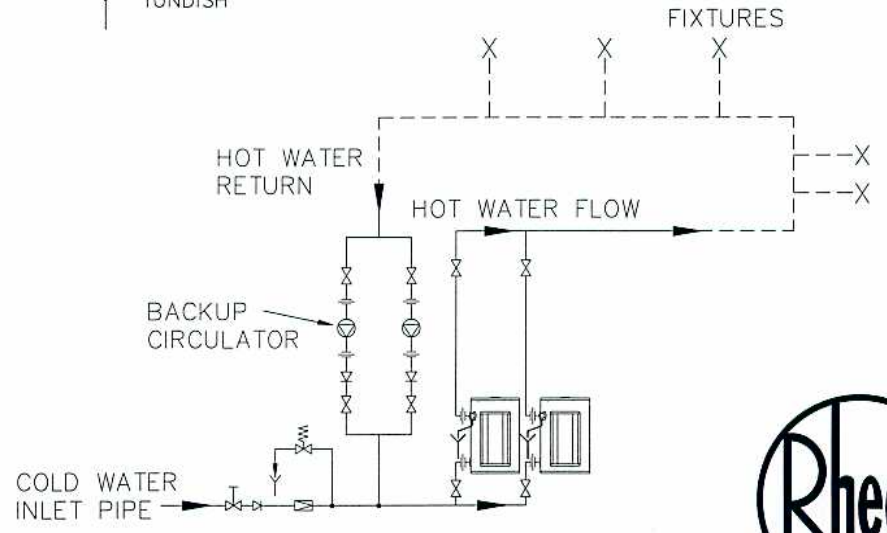

RHEEM WATER HEATERS HEAVY DUTY ELECTRIC 2 x 613050