

1909271 BWT Bewamat 75A Water Softener Spare Parts

Pos.	description	TRS code	remark
1	BWT 75A CONTROL VALVE AUS	1910965	incl. controller
2	BWT 75A INJECTOR LEFT COMPL. G2	1910906	incl. elbow
3	BWT 75A UPPER DISTRIBUTOR BAJO	1910912	
4	BWT 75A TANK BWC-0835 GREY W. BASE	1910904	
5	BWT 75A RISER PIPE 1ZOLLX1950M	1910905	
6	BWT 75A BRINE VALVE 1/4"X300X427X240	1910963	
7	STRONG CATION ION EXCHANGER RESIN NA		24 lit.
8	BWT 75A BRINE SHAFT PVC	1910902	
9	BWT 75A SIEVE BASE BRINE TANK	1910901	
10	BWT 25A/75A PROTECT CAP GPN690/0090	1910903	
11	BWT 25A/75A BRINE SOLENOID VALVE	1910909	
12	BWT 25A/75A ELECTROLYSIS CELL	1910907	
13	BWT 25A/75A BLENDING MANUAL FLAT SEALING	1910955	
14	BWT AQA SIMPLEX V BAIL 23X3 PA 3PCS	1910914	
15	BWT AQA SIMPLEX V ELBOW D8 WITH O-RING	1910913	incl. bail
16	BWT AQA SIMPLEX V MOTOR WITH GEAR 1 1NM I=150	1910915	
17	BWT AQA SIMPLEX V BYPASS SOLENOID VALVE 6115 N.B	1910918	
18	BWT AQA SIMPLEX V CLOSURE PIN SUIT	1910908	incl. bail
19	BWT AQA SIMPLEX V CONTROLLER SUM1 AS/NZS 3112	1910966	incl. housing
20	BWT AQA SIMPLEX V TRANSFORMER AS/NZS3112	1910967	
21	BWT AQA SIMPLEX V RESISTOR 15 OHM/50W	1910956	
22	BWT AQA SIMPLEX V CONNECTOR O-RING 27X3	1910910	
23	BWT AQA SIMPLEX V LATCH PPE	1910911	
24	BWT AQA SIMPLEX V WM COVER W. REED	1910919	incl. spindle
25	BWT AQA SIMPLEX V IMPELLER CPL	1910920	
26	BWT AQA SIMPLEX V WM O-RING 42.52X2.62	1910921	
27	BWT AQA SIMPLEX V CHECK VALVE W/THREAD	1910922	inlet connection
28	BWT AQA SIMPLEX V PISTON STANDARD	1911307	1910917 fit up aid needed for assembly
29	BWT AQA SIMPLEX V CAGE SEAL	1911330	1910917 fit up aid needed for assembly
30	BWT AQA SIMPLEX V FIT UP AID	1910917	no illustration
31	BWT AQA SIMPLEX V B.BRACKET ROTALINK GB	1910916	

