


MODEL TFH SINGLE FAN (TRI) WITH SINGLE PHASE TEM FAN

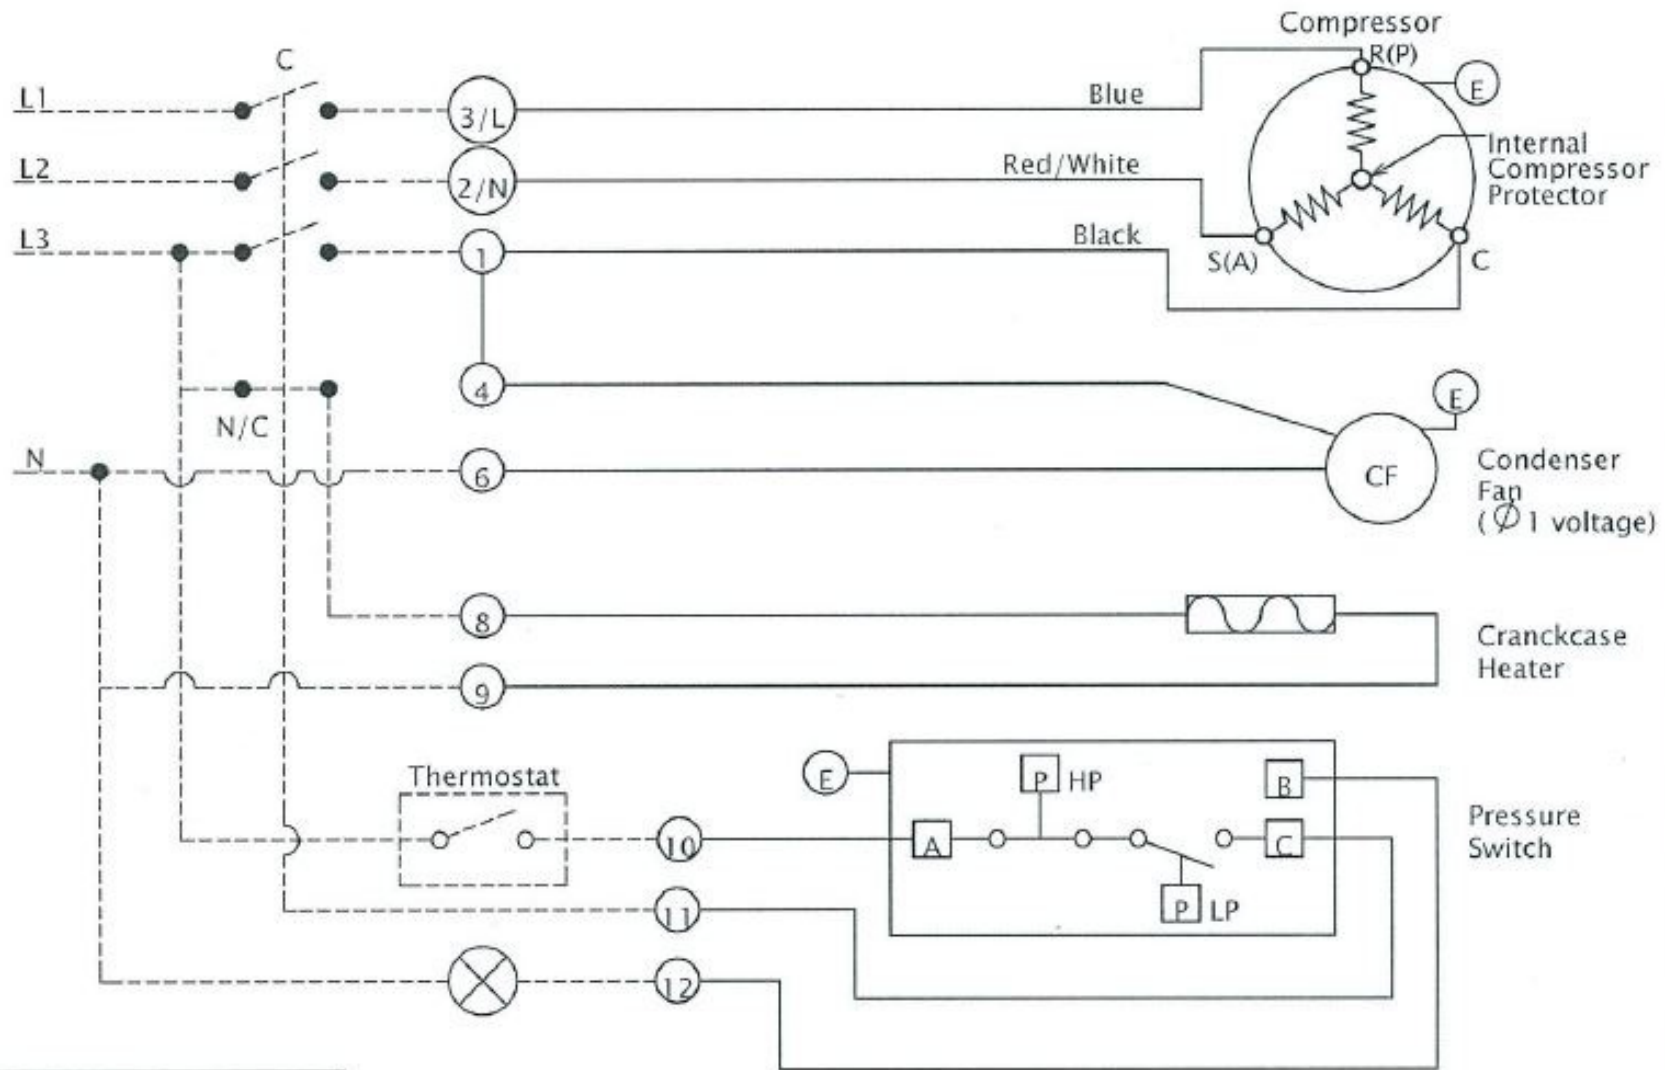

- - Terminal Number
- - Suggested Field Wiring
- C - Contactor
- ⊗ - Fault Lamp

Note :

Crankcase heater is self regulating so switching off during compressor operation is not mandatory. Condenser fan supply with single phase voltage.

7684148 Ind. A