

Progressive Wall Mixer Set

<p>1</p> <p>NOGGING</p> <p>TILE</p> <p>ADJUSTMENT RANGE 60mm-72mm</p>	<p>2</p> <p>Screw the Mixer Breach onto Nogging to dimensions shown in adjustment range.</p> <p>Ensure that the mixer body is level.</p>
<p>3</p> <p>Plumb all connections to Mixer Body.</p> <p>Ensure wall outlet fitting is capped. Perform PRESSURE TEST and check for leaks.</p>	<p>4</p> <p>Centre distance of the breach assembly is 120mm. Create a 25mm hole and a 50mm holes on the sheet and tiles, as shown.</p> <p>Apply waterproofing membrane up to Waterproofing Sleeve.</p>
<p>5</p> <p>After Tiling use Knife to Trim Waterproofing Sleeves flush to Tile face.</p> <p>Remove both protective covers as shown.</p>	<p>6</p> <p>Trim Outlet Thread ensuring a maximum of 15mm from tile face</p>
<p>7</p> <p>Push on Dress Plate apply Teflon Tape. Tighten Outlet Adaptor as shown.</p> <p>Double Backplate</p> <p>Single Backplate</p> <p>OR</p>	<p>8</p> <p>Push on Outlet and tighten Grub Screw to secure.</p> <p>For BATH applications. Remove pre-installed aerator. Install provided max flow with key as shown. Bath Basin</p>
<p>9 a FINE HANDLE ADJUSTMENT</p> <p>b</p> <p>c</p> <p>d</p> <p>e</p>	

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:

- Gravity-fed water systems
- Some instantaneous hot water systems

Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

