

Mizu Soothe Square Gooseneck Sink Mixer (4*)

IMPORTANT NOTE:

Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.

INSTALLATION INSTRUCTIONS:

- 1. Flush out new pipe work prior to connecting the new mixer.
- 2. All mixers should be installed with isolating stop cocks (Arco).
- 3. This tap is suitable for high pressure applications where both hot and cold water supply pressures are at 150kpa or above. Equal pressure for hot and cold water supply is required for this mixer.
- 4. Fit fixing rods (15.3) into the mixer body (5).
- 5. Place the mixer body (5) into the sink hole making sure that the flexible hoses (16 & 17) are firmly tightened into the base of the mixer body and the base washer is in position.
- 6. Do not use Teflon tape on threads.
- 7. From underneath, apply the plate seal (15.1), horse shoe plate (15.2) and the hex nut (15.40.
- 8. Lock the mixer onto the sink by tightening the hex nut (15.4).
- 9. Clean the aerator (11) at regular intervals, particularly if you notice a drop in pressure.

SERVICING - REPLACEMENT OF CARTRIDGE:

- 1. Lift cover (1.3) and unscrew the grub screw (1.2) using an allen key.
- 2. Remove sink mixer handle (1.1), cartridge dome (2) and unscrew the lock nut (3).
- 3. Pull out the cartridge (4) and replace with the new one, ensuring that the cartridge sits properly into the mixer body.
- 4. Replace the lock nut (3), cartridge dome (2) and sink mixer handle (1.1).
- 5. Tighten the grub screw (1.2) and push in the cover (1.3).

CLEANING RECOMMENDATIONS:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

