
METHVEN

AIO AURAJET OVERHEAD SHOWER



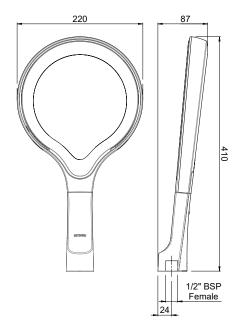

SPECIFICATIONS	
Recommended Use	Domestic, hotel and commercial
Colour	Chrome, and
	Chrome with white face
Pressure Rating	Suitable for high pressure applications and has been WELS certified to the following:
	Minimum operating pressure 100kPa
	Maximum operating pressure 500kPa
Temperature Rating	Maximum continuous working temperature 70°C (recommended 38°C - 42°C)
	Minimum 5°C
Suitable Hot Water Units	Storage Tank: Yes Continuous Flow: Yes
	Gravity Feed: Not recommended
Spray Patterns	Aurajet Spray



AOOSCPWHAU 2299912

To see the complete AIO range go to www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by improper treatment is not covered by the product warranty - refer to warranty conditions.










IMPORTANT: Please read all of the instructions and turn off water supply before installation.

INSTALLATION INSTRUCTIONS


Step 1

- Recommended installation height is 2100mm from the ground.
- Wall lining hole should be cut or finished as per the dimension shown in the diagram on the right.
- Cut off the threaded nipple 13±2mm from the wall lining and apply thread seal tape to ensure a good seal.

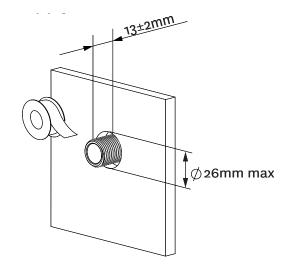


Step 2

- Ensure o-ring is located on the inlet connector.
- Screw the inlet connector onto the nipple ensuring that the o-ring is sufficiently compressed to create a watertight seal.

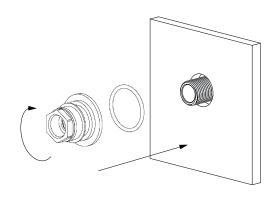

Step 3

- Push the overhead shower onto the inlet connector.
- Ensure that the overhead shower is oriented horizontally
- Secure in place by tightening the grub screw firmly using the hex key provided

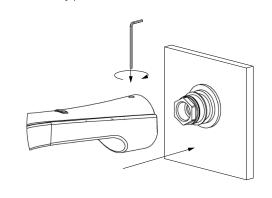

Care and Cleaning

Run hot water through shower for 2 minutes before first use.

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

Clean filter washer located in the shower head waterway periodically. To access filter washer, push down on release button, hold the wall arm and pull shower head away from it.

Remove filter washer from the shower head waterway by gently levering out with a small screw driver.

