
mizu

Bloc Swivel Bath Outlet

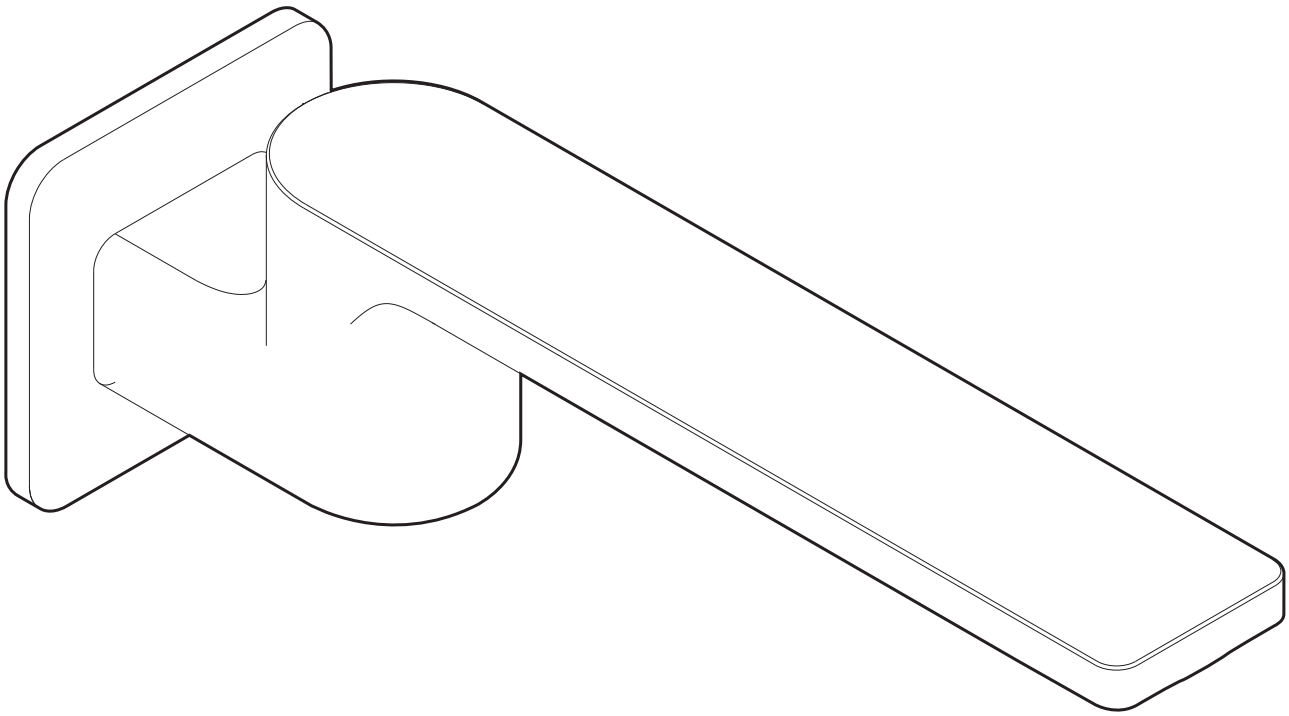

Installation Instructions

Important

Outlet must be installed to the requirements of AS/NZS 3500 by a qualified Plumber. Your outlet comes to you already factory assembled and tested. We do not recommend the dismantling of any internal parts of the outlet .The outlet s are factory tested and sealed so as to give the best performance.

Important

Installation shall comply with Australian Standard AS3500.1 or relevant local authority requirements.

Note: The water supply lines need to be 'flushed out' prior to installation.


mizu

Bloc Swivel Bath Outlet

Note: For wall mounted Outlets, consideration should be made to installation height and length of outlet in relation to height and positioning of bath.

- Use a suitable sealing Compound **(1)** (plumbing Teflon Tape or Pipe cord) on exposed Wall Thread **(2)**.
- Fit Cover Plate **(3)** onto rear of Outlet **(4)**.
- Assemble Outlet **(4)** to Wall Thread **(2)**.


Note: Ensure outlet is correctly aligned

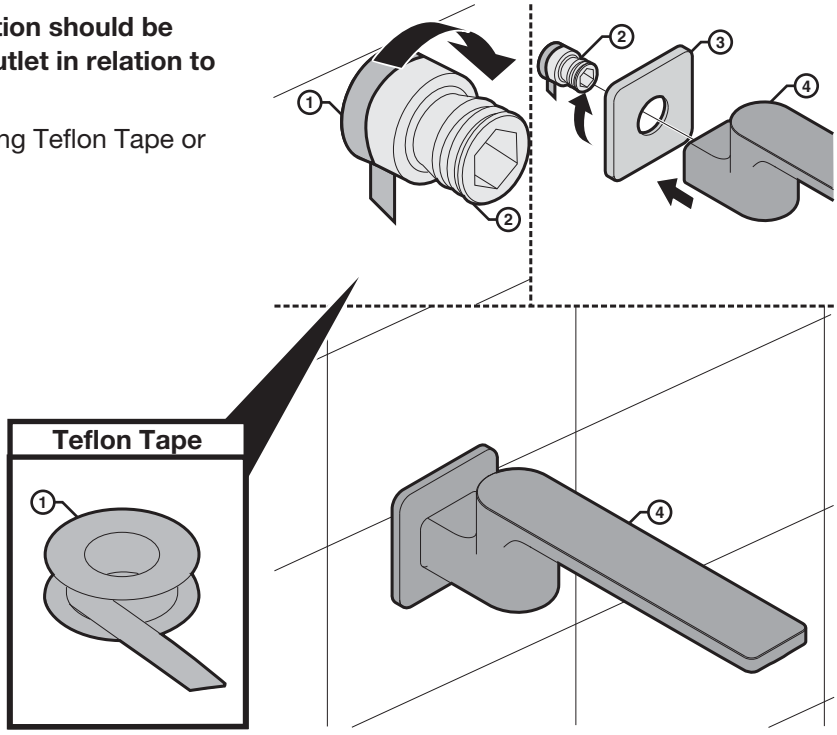

- To remove Aerator use coin shaped object or flat head screwdriver to remove from Outlet.
- To fit or remove Bath Aerator use key.
- Test and check for leaks.

Important

Leaking joints are not covered by the warranty.

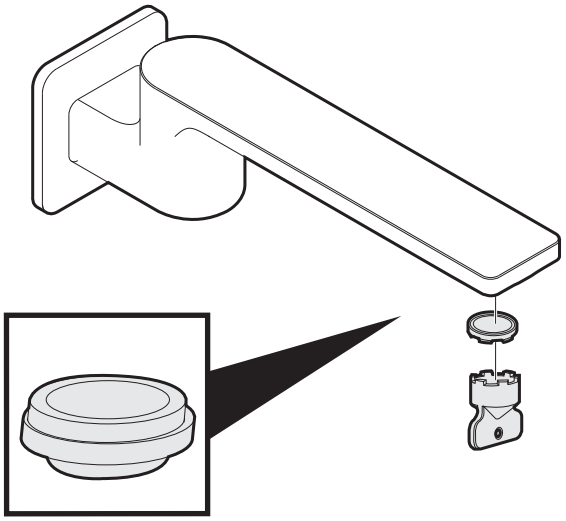

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

reece