
Installation Instructions

Bloc Wall Straight & Ceiling Shower Arm

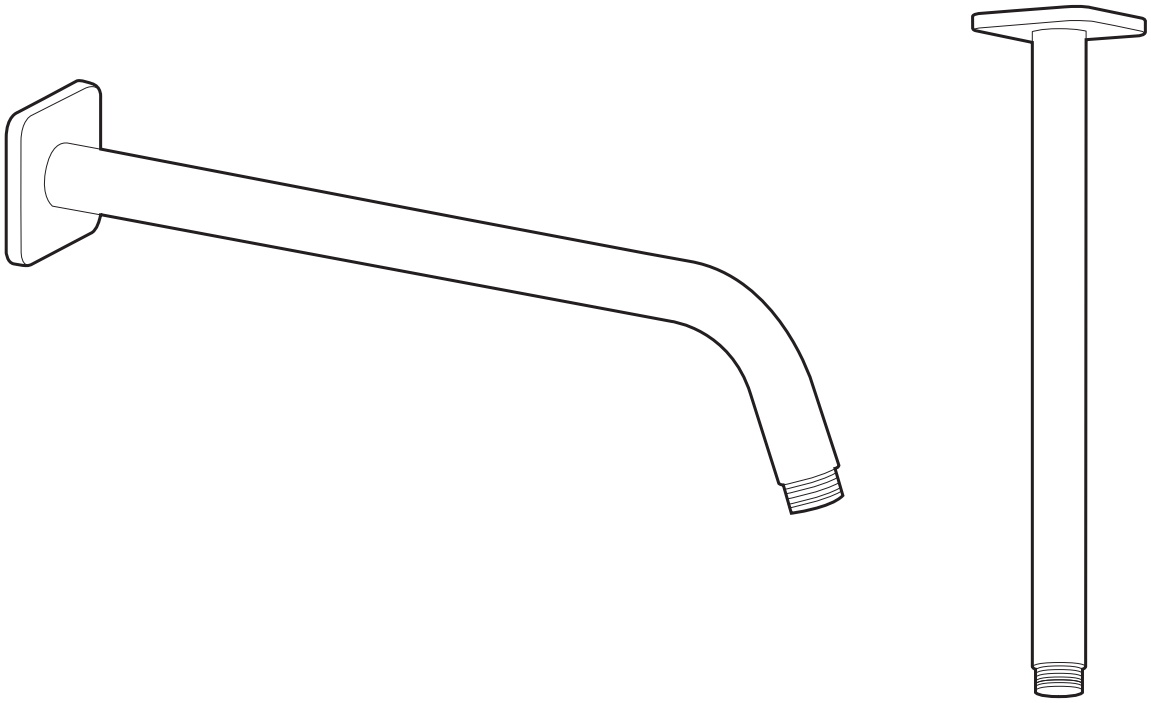

Installation

Important


The Mizu Bloc Shower Arms must be installed to the requirements of AS/NZS 3500.1 by a qualified plumber.

1. The water supply lines need to be 'flushed out' prior to installation to avoid any foreign materials blocking the flow regulator and reducing the water flow.
2. Push back plate over 15mm BSP thread protruding from wall.
3. Apply thread sealant/tape to thread protruding from wall and screw on shower arm. Ensure it is level.
4. Fit selected shower head.
5. Turn on the main water supply and check for leaks.


Bloc Wall Straight & Ceiling Shower Arm

Diagram

Mizu Bloc Wall Straight Shower Arm 340mm

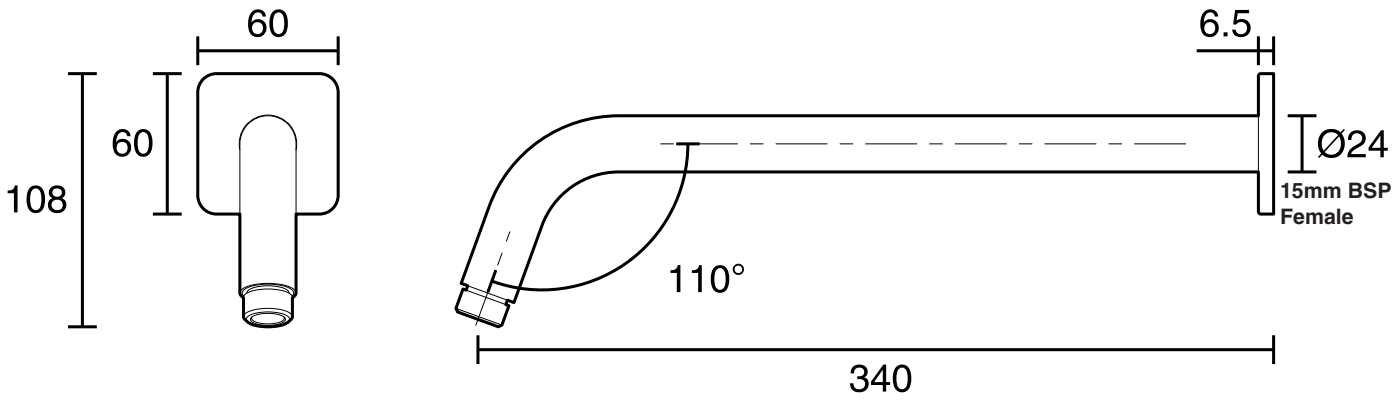

Mizu Bloc Ceiling Shower Arm 300mm

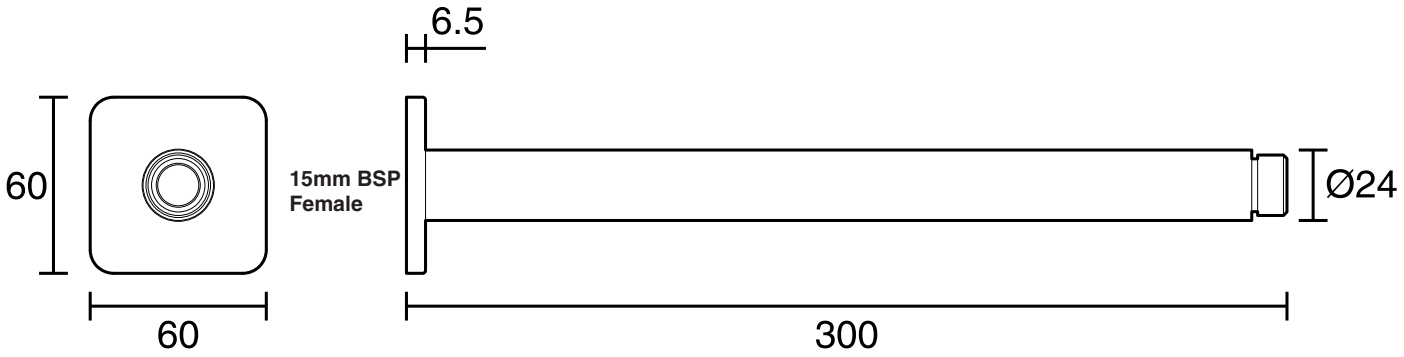

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.