


Posh Solus Back To Corner Freestanding Bath with Overflow

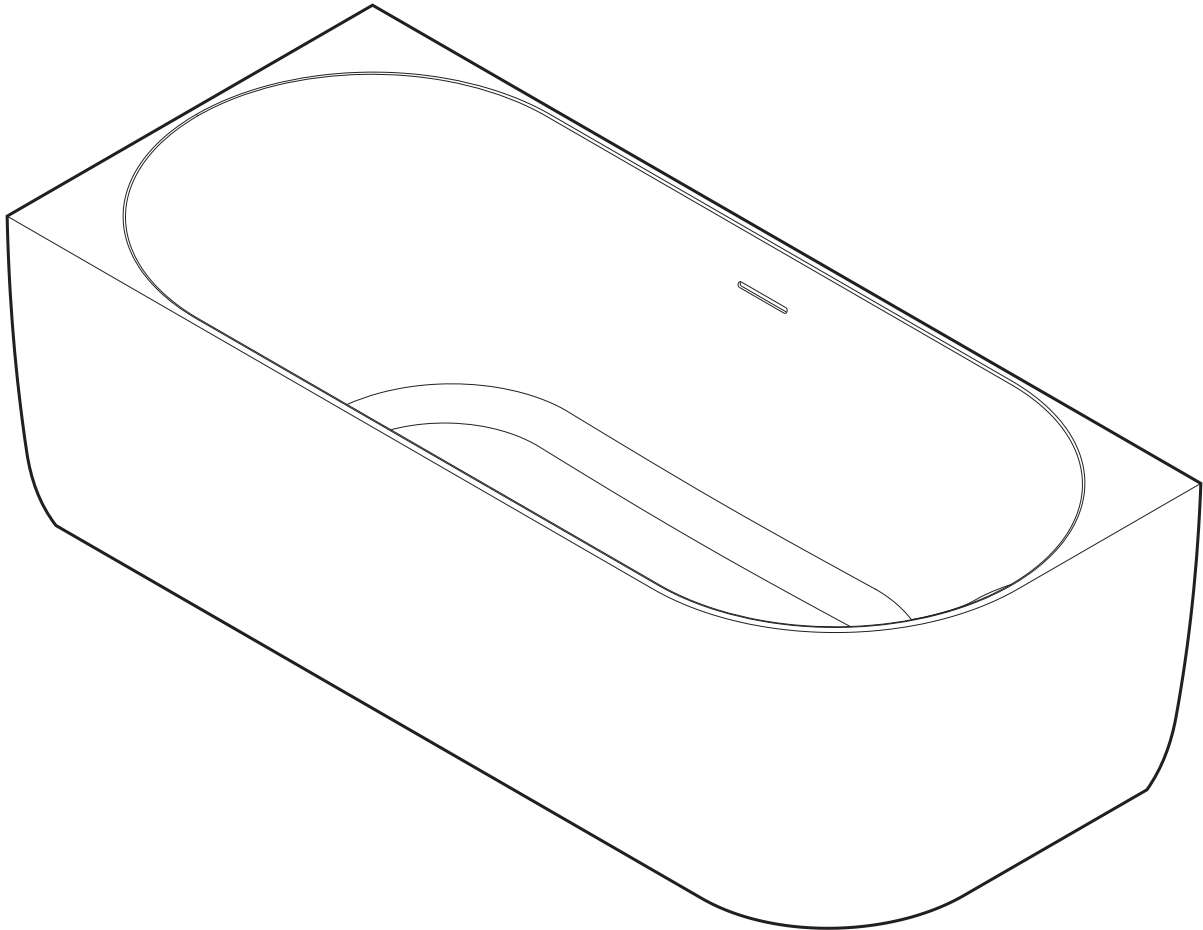

Pre-Installation Check

Important



Please unwrap the bath and check carefully to ensure it has not been damaged in handling or transport. Installation of damaged or defective bath will be deemed as acceptance and no claim will be accepted after installation. Ensure bath is well protected before, during and after installation.

Important



Bath must be installed to the requirements of AS/NZS 3500 by a qualified plumber and in accordance to the National Construction Code.

Important




There are various methods of installation and will depend on site condition type of bath and available access to plumbing /drainage. This installation guide does not include details of waste fitment to main waste connection. The final decision about installation of the waste connection and cutout allowance in the floor for connection should be taken by a suitably qualified person.


Posh Solus Back To Corner Freestanding Bath with Overflow

Diagram

Posh Solus Back To Corner Freestanding Bath with Overflow 1700 x 750 x 600 Left

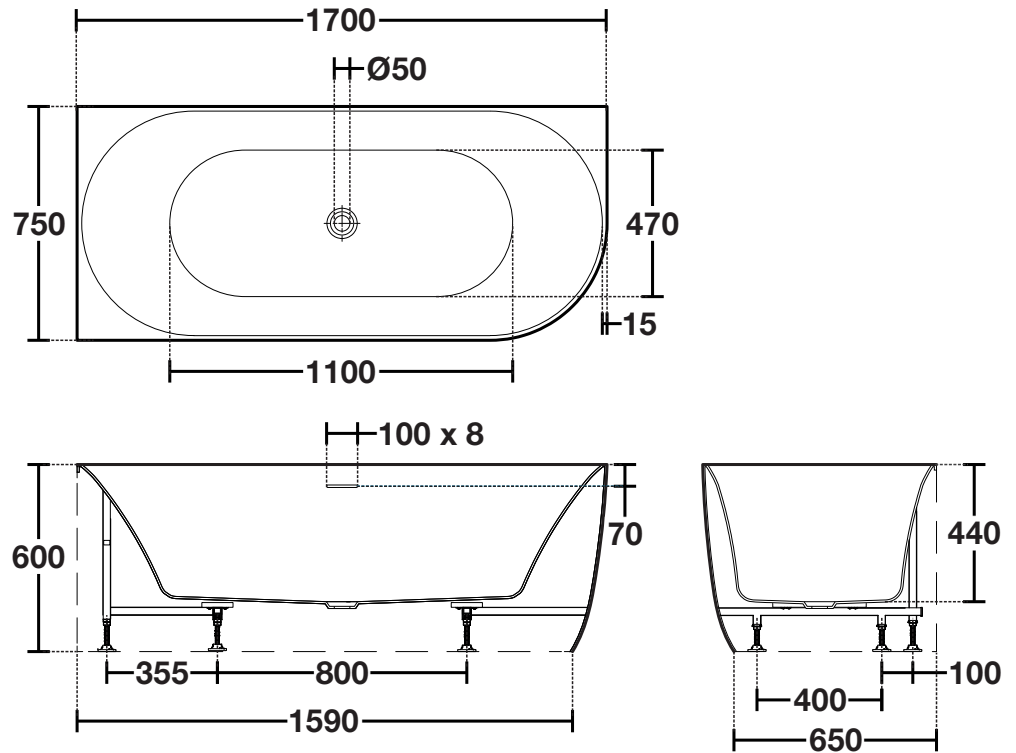


Posh Solus Back To Corner Freestanding Bath with Overflow 1700 x 750 x 600 Right

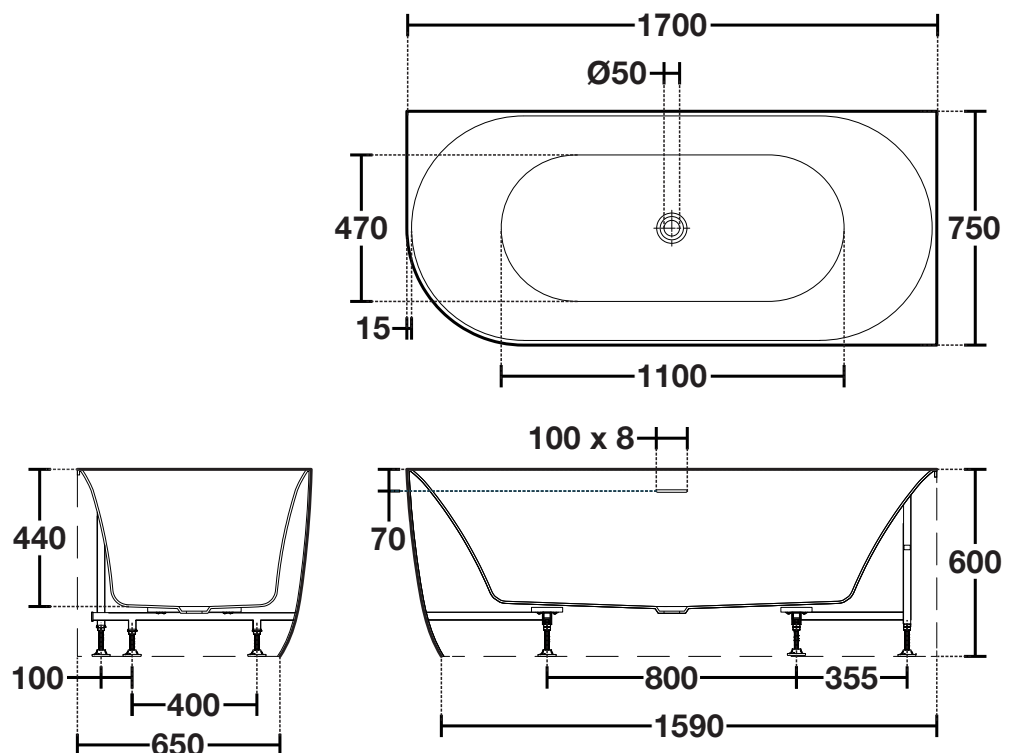


Posh Solus Back To Corner Freestanding Bath with Overflow

Diagram

Posh Solus Back To Corner Freestanding Bath with Overflow 1500 x 750 x 600 Left

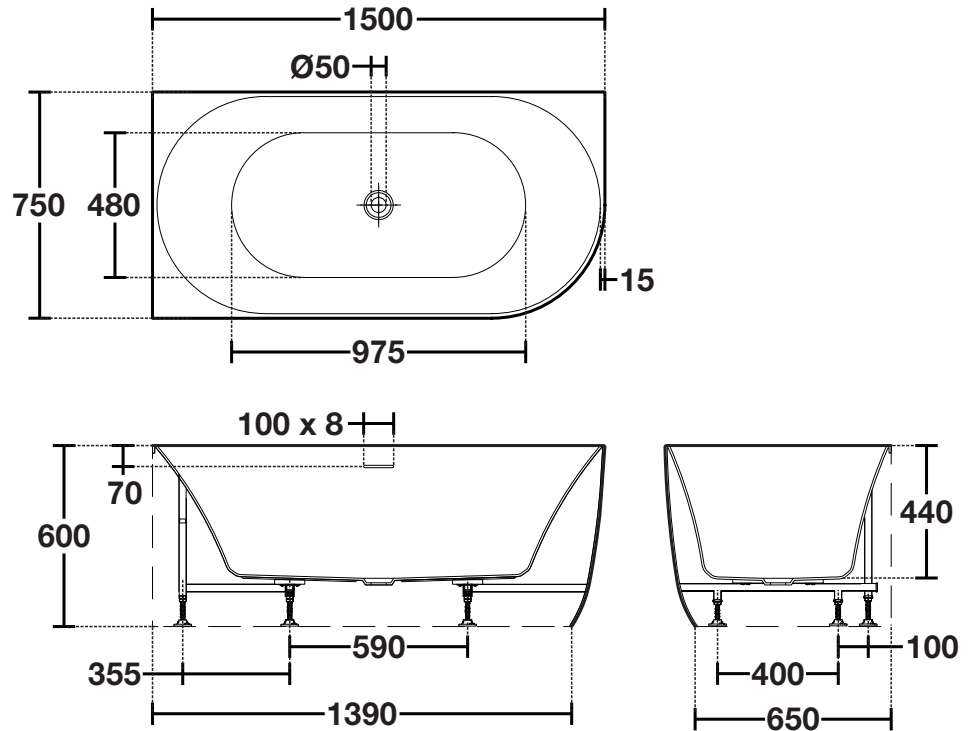


Posh Solus Back To Corner Freestanding Bath with Overflow 1500 x 750 x 600 Right

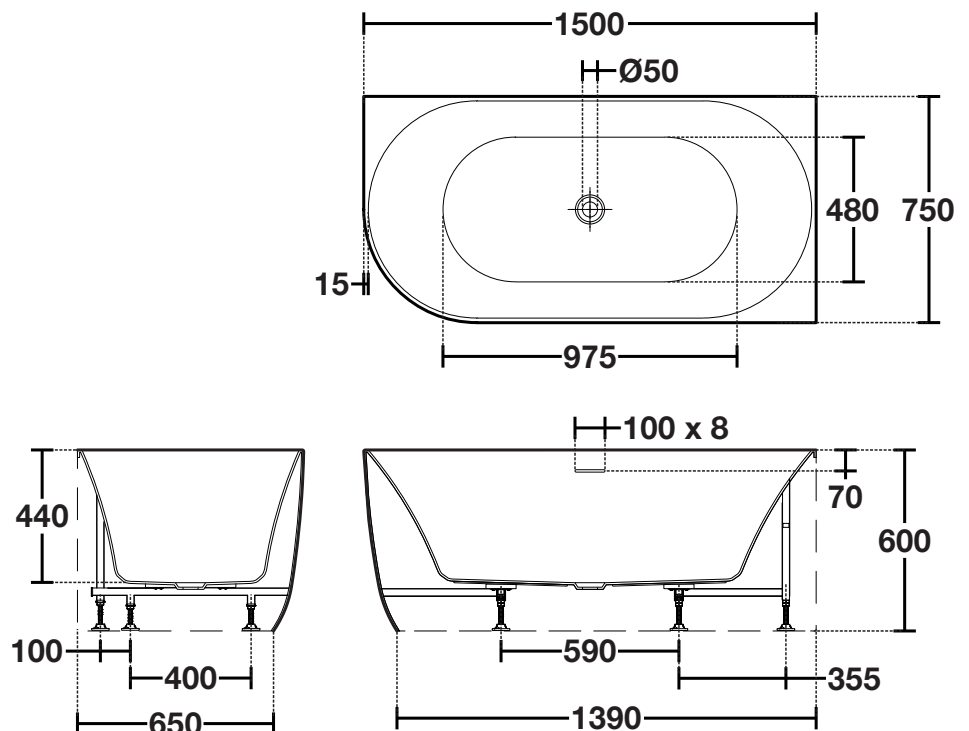


Posh Solus Back To Corner Freestanding Bath with Overflow

Diagram

Posh Solus Back To Corner Freestanding Bath with Overflow 1300 x 750 x 600 Left

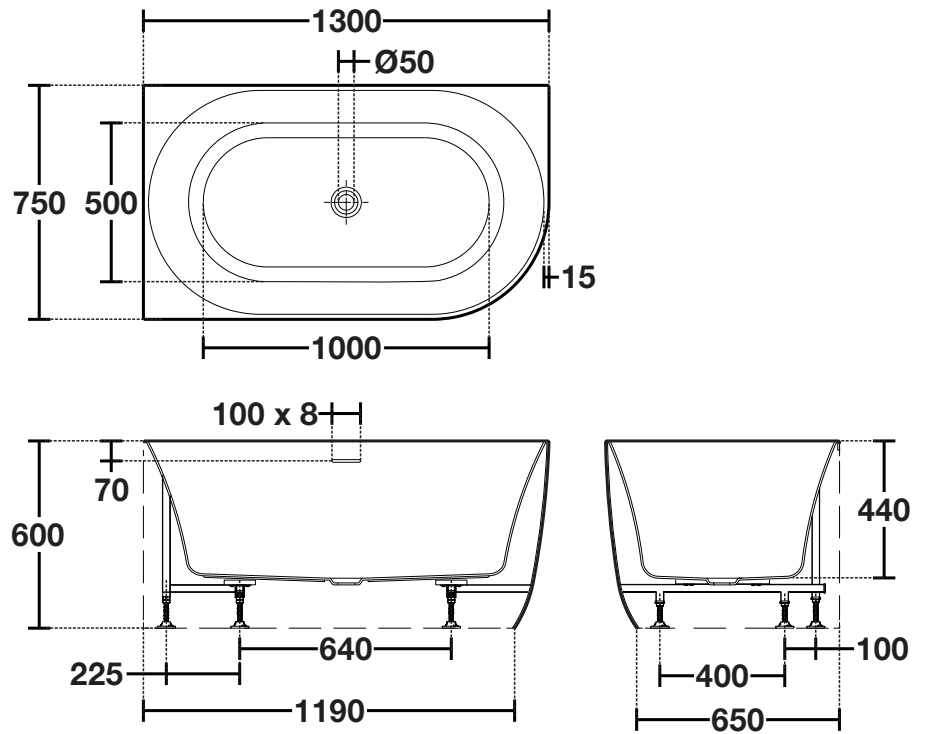


Posh Solus Back To Corner Freestanding Bath with Overflow 1300 x 750 x 600 Right

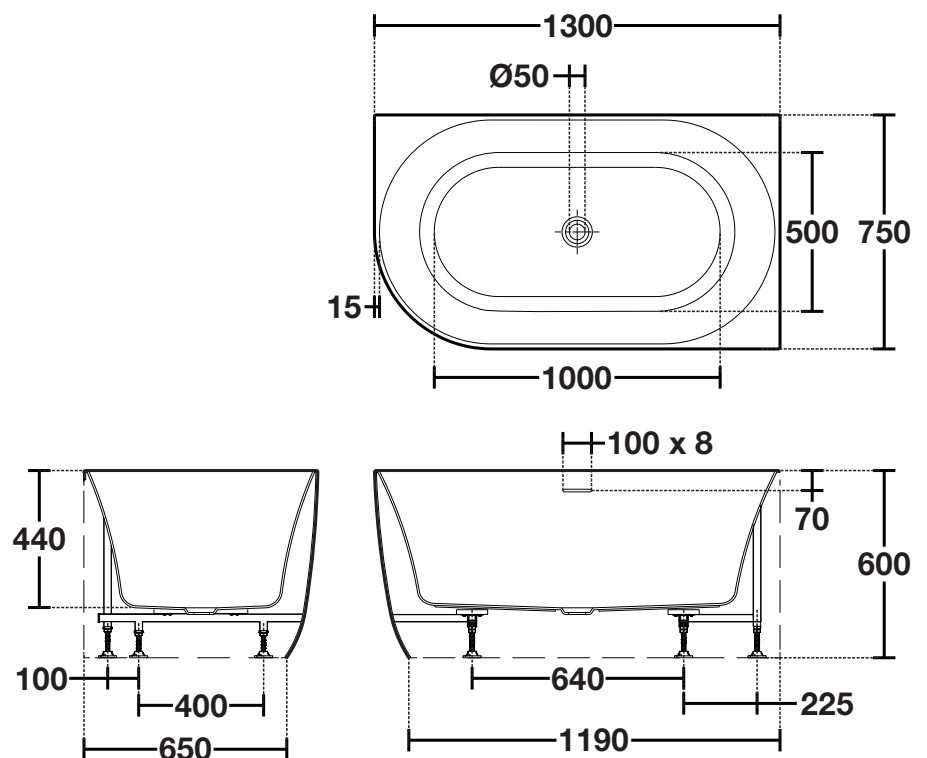

Posh Solus Back To Corner Freestanding Bath with Overflow


Bath Waste

1. Fit 40mm overflow pop up pull out waste (not supplied) to bath.
2. Ensure the slotted side in waste aligns with overflow slot in bath.

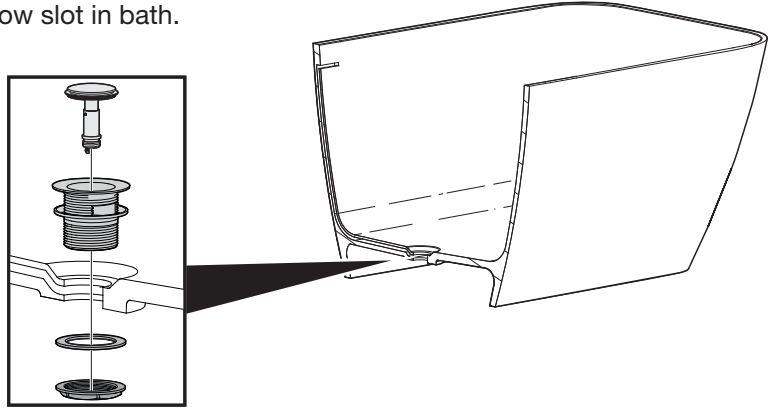


Leak Check

3. Place Bath on two wooden blocks over the waste connections.
4. Fill Bath with water and check for leakage.
5. Fill bath with water and flush through overflow checking for leakage.

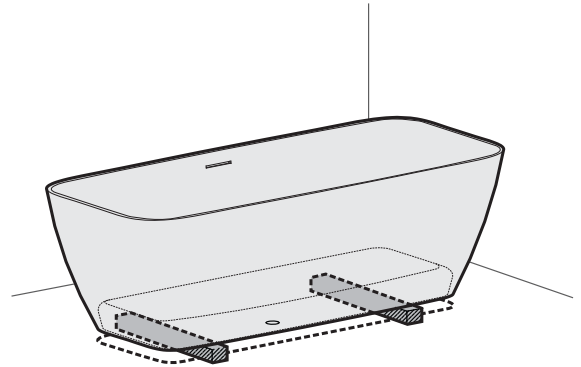

Installation


6. Use adjustable feet to ensure bath is levelled.

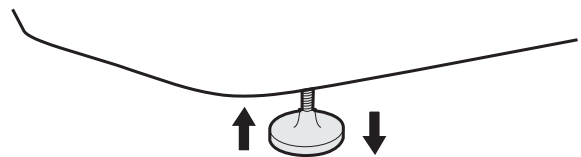

Posh Solus Back To Corner Freestanding Bath with Overflow

Installation

7. Apply silicone sealant to where bath meets wall and floor surfaces.
8. Allow to dry for 24 hours.

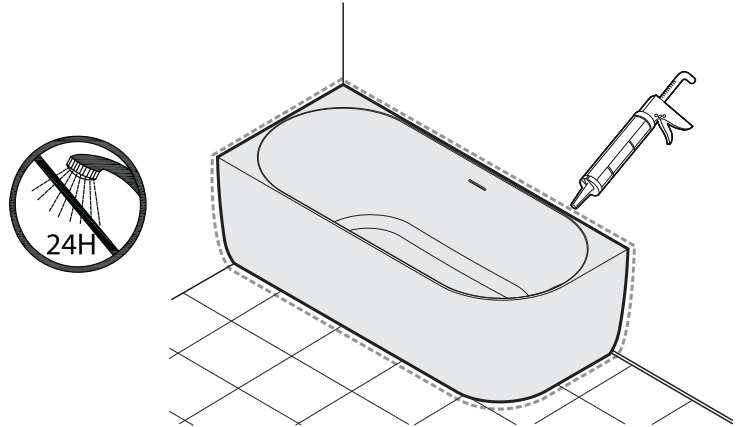

Care Details

Care and Maintenance:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

Disclaimer: Products in this Installation manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification, manufacturer/distributor takes no responsibility for printing errors.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.