
ACRYLIC WALL LINER
INSTALLATION GUIDE

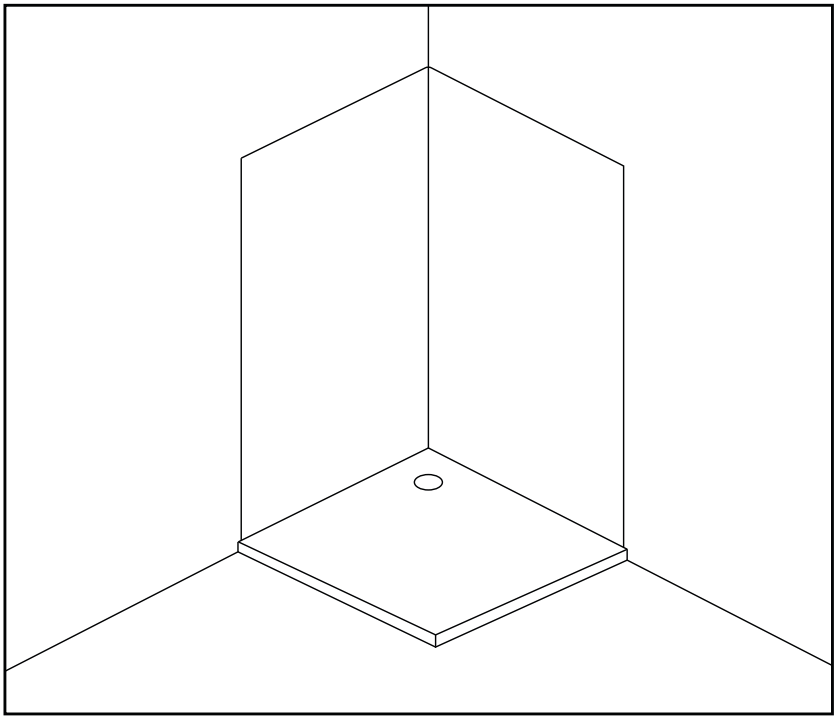

Components Supplied

Liner
3-4x Tubes Liner Adhesive
1x White Silicone

Other Equipment Required

Caulking Gun
Drill
Hole Saws
Pencil
Tape Measure

DO NOT INSTALL DAMAGED OR DEFECTIVE PRODUCTS

It is the installers responsibility to check for any defects prior to installation. Atlantis will not be held liable for any damage incurred after installation.

UNDERSTANDING THE PRODUCT

IMPORTANT: WALLS BEHIND LINER ARE TO BE POROUS AND UNPAINTED. FAILURE TO COMPLY WILL VOID WARRANTY.

Ensure framing is located behind where wall glazing channels are to be fitted.
Further information can be found on the product technical specifications. We recommend downloading the product technical specification to familiarise yourself with the product before proceeding.

NOTE: It is your responsibility to ensure the walls are plumb. Pack walls to suit if out of plumb. Liners should not be stored for longer than two weeks in a folded position. If the liner is overbent due to prolonged storage, please contact us for suggested solution.

In some installations, the shower base may feature a hob that extends beyond the length of the wall liner. This can result in the upstand also projecting past the liner edge. In these situations, the exposed upstand should be finished appropriately – for example by plastering, tiling, or by running skirting board over it to achieve a tidy finish.

WALL PREPARATION

1. Begin by ensuring the walls are correctly set up – square, plumb and a flush transition between tray to wall lining (Fig. 1). The surface on which the liner is to be installed must be dust free and unpainted. Wipe upstand and rear side of liner free of any dust. Measure and drill all tap penetrations (Fig. 2). If the Shower Base has a Glazing Channel fitted, you will need to check the liner OVER the glazing channel as shown.

FIG. 1


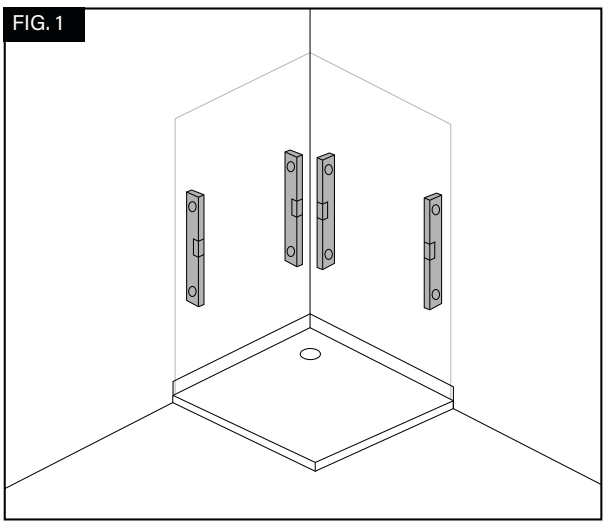


FIG. 2

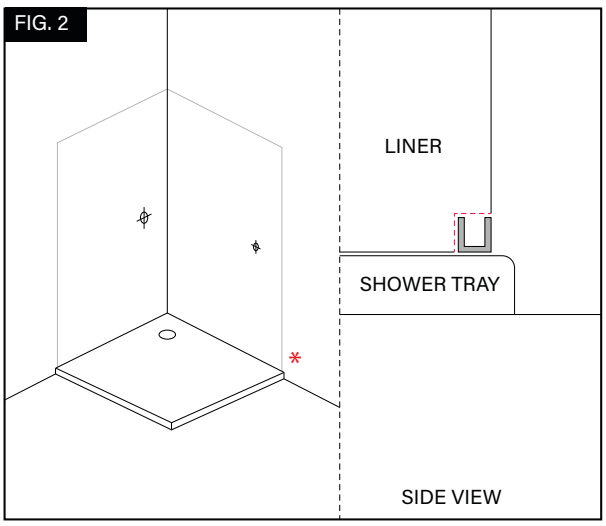

3. Measure and mark 20mm smaller than the wall liner for glue application area (Fig. 3). Dry fit Wall Liner to check it fits correctly on base and around tapware. Use a small wood plane to trim bottom edge of the wall lining if necessary.

FIG. 3


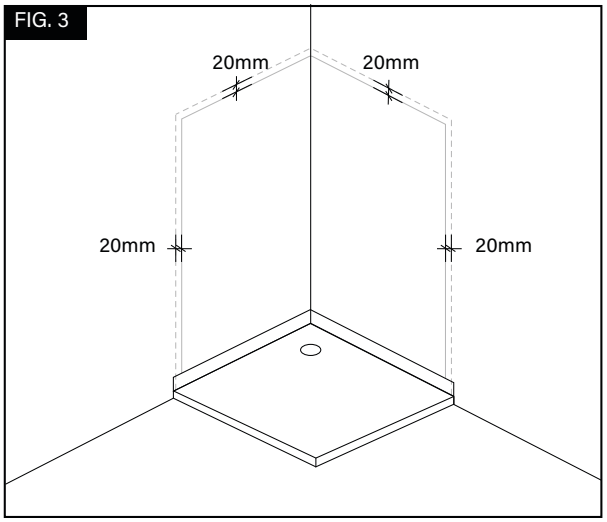


FIG. 4

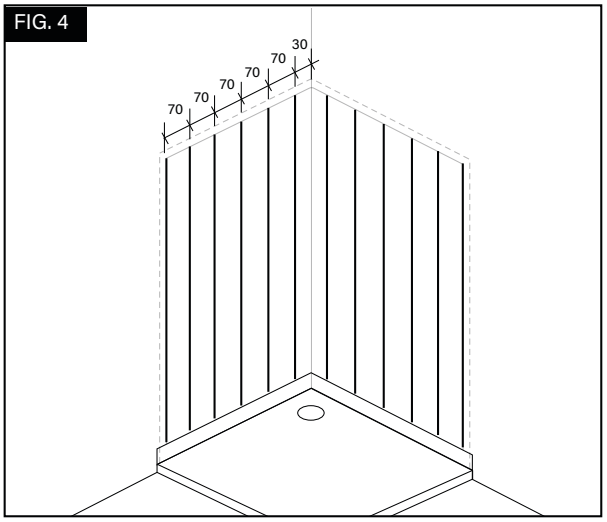

4. Start first vertical line 30mm from internal corner(s). Apply wall lining adhesive in 6mm beads vertically at 70mm centres to the lined wall area. DO NOT CREATE A CROSS PATTERN OR LOOPED PATTERN.

*** DO NOT APPLY WALL LINER ADHESIVE TO THE BASE UPSTAND.**

5. Apply a continuous 10mm bead of white silicon horizontally 15mm below the top of the upstand and return it down to the edge of the liner and shower tray at each end (Fig. 5).

FIG. 5


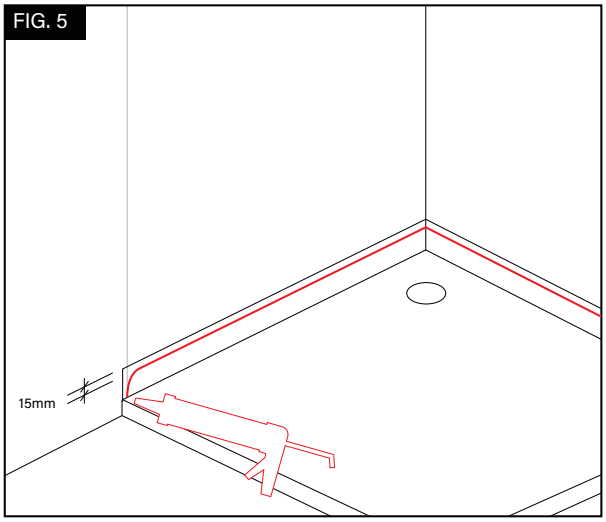


FIG. 6

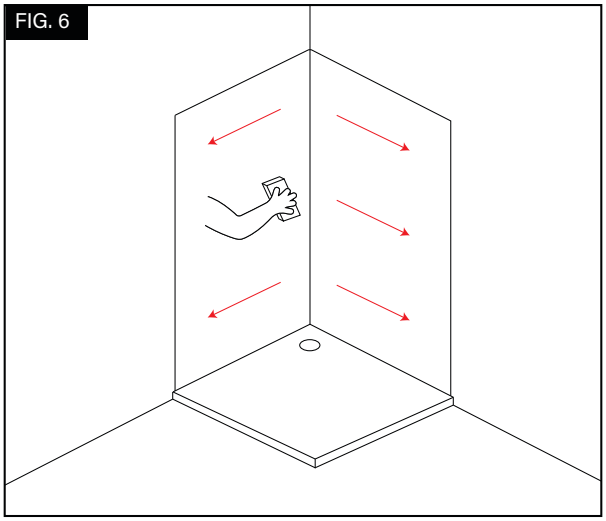

6. Fit Wall Liner carefully in position. Ensure protective film is intact. Smooth air out from behind lining with a padded block, rubber roller or similar (Fig. 6). Work from the internal corner out towards the sides. Prop liner in place if necessary. 100% contact should be achieved to the wall and base upstand. When complete, wipe off any excess silicon below lining. Peel back the protective film clear of the sides for the wall channels.

Z FLASHING/SPINE FITTING INSTRUCTIONS

1. Refer to Screen Fitting Instructions for Glazing Channel Fitting instructions. Once fitted, apply a small bead of silicone to the outside of the glazing channel and to the edge of the Wall Liner (Fig. 7). Trim Z Flashing to length if required. Deburr any cut edges.

   NOTE: IN SOME INSTANCES Z FLASHING MAY BE STAINLESS STEEL. TRIM USING GRINDER WITH 1mm CUT OFF DISK. USE GOGGLES, EAR PROTECTION AND ENSURE GRINDER IS FITTED WITH A GUARD.

2. Remove double sided tape backing and carefully adhere Liner Cover (Z Flashing) to Wall Channel, covering exposed Acrylic Liner edge as shown.

FIG. 7


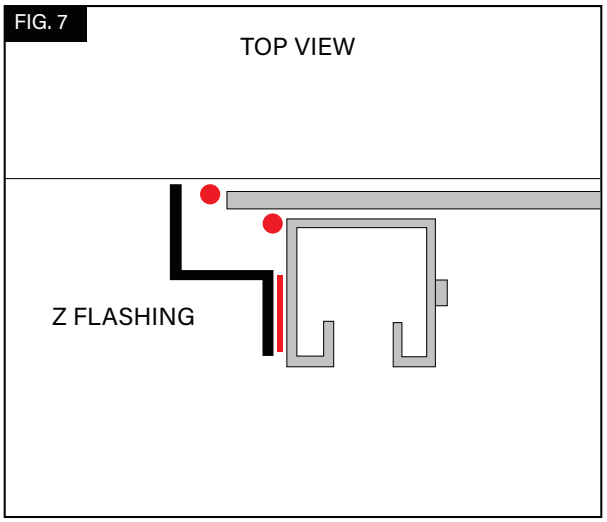


FIG. 8

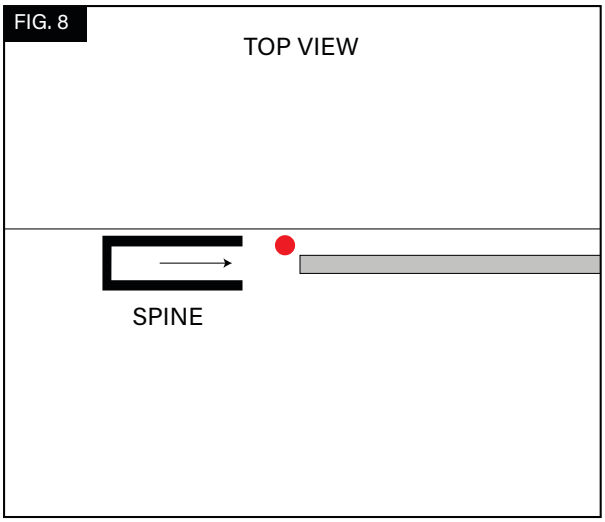


3. In some instances, a Glazing Channel is not required on one side of your shower. In this instance an Aluminium 'Spine' is supplied to cover the exposed edge of the Acrylic Liner. If required, notch the bottom of the Spine to suit your the profile at bottom of the Liner (Fig. 8).

FINISHING THE INSTALL

Clean the wall linings and ensure there is no visible silicone or wall lining adhesive anywhere on the walls, glazing channels or shower tray. If you are installing an EasyNiche, refer to instructions supplied with the product.

FIG. 9

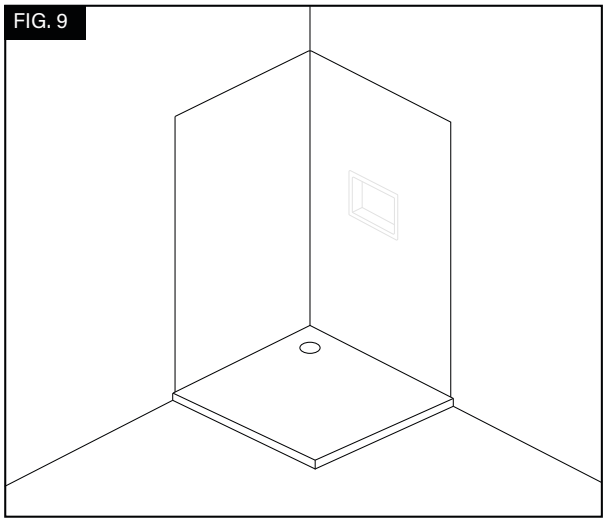

Thank you for taking the time to carefully install this Acrylic Wall Liner.

If you have any questions regarding your install, call us on 0800 428 526 or email us at support@atlantis.co.nz