


Pure High-Rise Shower Curved/Square

SUSSEX

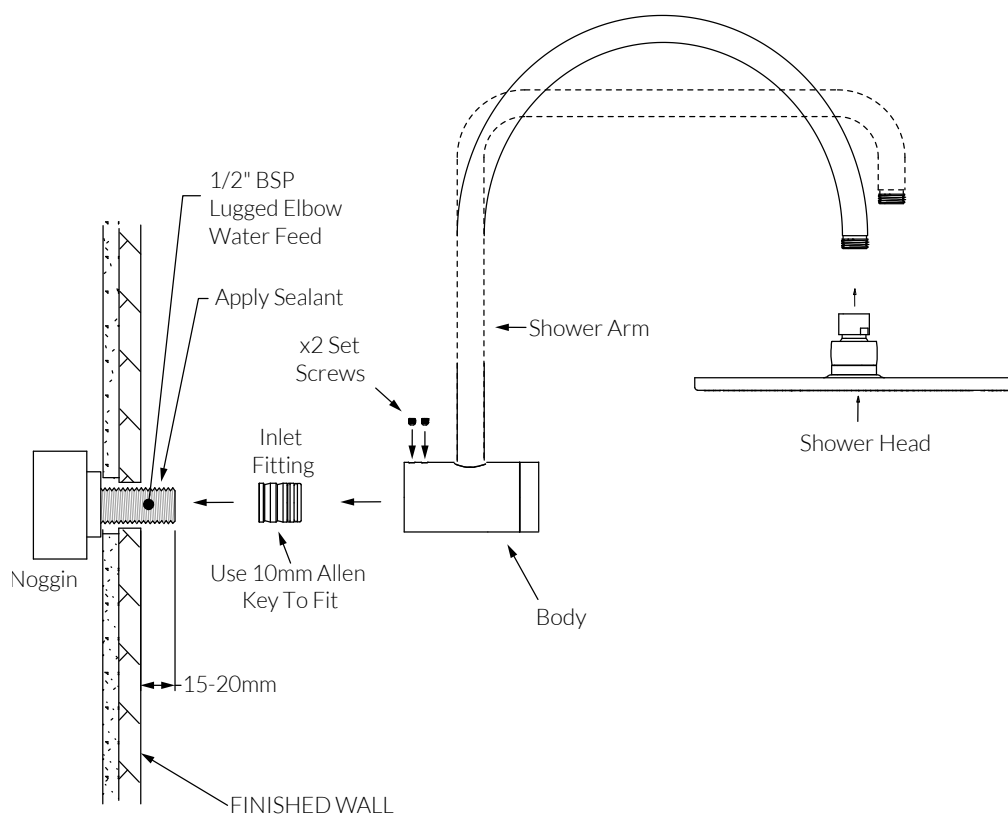

Product codes:

MPHRSC
MPHRSQ

Install Preparation:

- Ensure all parts are accounted for.
- A flow controller has been incorporated within the shower head, care is to be taken during installation not to damage the flow controller when fitting the shower.
- This shower is suitable for High Pressure applications. This shower may not be suitable for use with Gravity-fed water heaters, low and unequal pressure supply networks.

Fit Off:

- Remove Inlet Fitting by loosening the Set Screws.
- Ensure the wall penetration is sealed prior to connecting any fittings.
- Apply thread tape or appropriate sealant to Water Feed Thread and attach Inlet Fitting using 10mm Allen key.
- Fit the Hi-Rise Curved Arm as assembled onto the Inlet Fitting, secure by tightening the Set Screws.
- Attach Shower Head.
- Test function and water flow.
- Check for water leaks.

Plumbers note:

- Product is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2021
- Recommended working water pressure 300 - 500 Kpa. Maximum water temperature is 65°C
- After installation, ensure that product functions correctly without leaks.
- Please ensure a copy of the Installation Instructions are left with the end user for future reference.



www.reece.com.au



While we aim to ensure the specifications shown are correct at time of printing, Sussex Taps reserves the right to make modifications without prior notice. Always use the physical product for accurate measurements. Dimensions are subject to change without notice. All measurements are shown in millimetres. This product complies with lead free requirements.

Copyright © Sussex Taps