


Posh Domaine Rectangle Semi Inset Basin Overflow 450mmx310mm

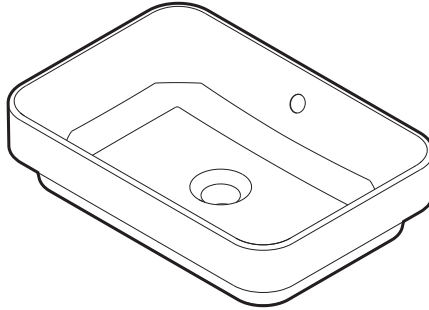

Installation

Important




Check product thoroughly prior to installation for any damage

Note: If wall mounted tapware is to be used, consideration should be made to length of outlet and positioning of the basin on bench top.
If tapware is to be bench mounted allow suitable top width for fitting tapware.

1. Cut out benchtop as per template supplied.
2. Fit selected tapware and waste to basin. Ensure waste is siliconed around the rim.
3. Apply waterproof sealant (not supplied) to the rim of the basin and to the bench top.
4. Fit basin onto the bench top and press firmly all around to achieve good seal.
5. Remove surplus sealant.

Diagram

Posh Domaine Rectangle Semi Inset Basin Overflow 450mmx310mm

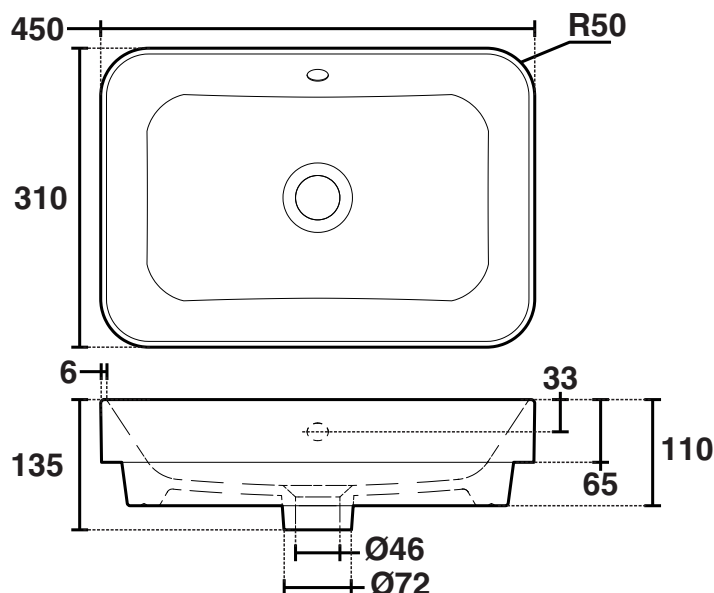

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.