
mizu

Bloc Waterfall Outlet

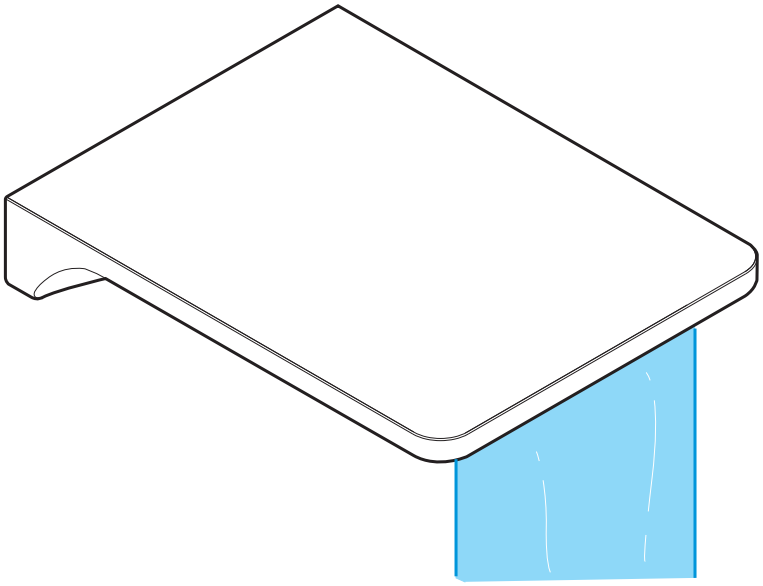

Shower Kit Installation

Important

The Mizu Bloc Waterfall Outlet must be installed to the requirements of AS/NZS 3500.1 by a qualified plumber. It comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the product. The Mizu Bloc Waterfall Outlet is tested and sealed so as to give the best performance.

Important

When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with 'AS/NZS 3500.1' recommendation.

Installation

1. Please flush out new pipe work prior to connecting the new outlet.


   Note: At rough-in stage, consider height and projection of outlet in conjunction with bath that will be installed.

2. Screw adaptor onto 15mm bsp thread (1/2 inch) using a 12mm allen key. Use PTFE tape to seal the thread.

3. The back of the adaptor needs to finish flush against the finished wall.

4. Push the outlet onto the adaptor.
   Note: ensuring it is level.

5. Secure into position by tightening the grub screw using 2.5mm allen key.

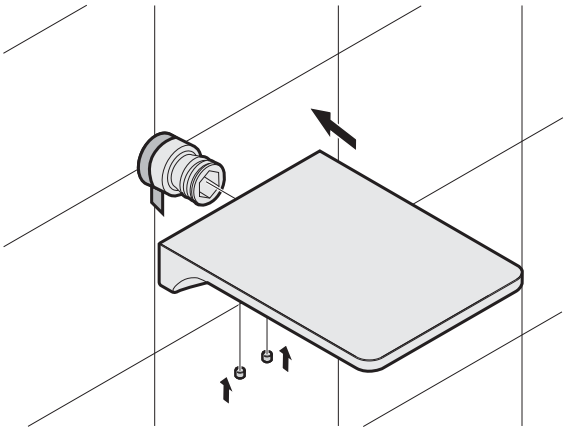

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions at: https://www.reece.com.au

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.