
ISSY//

Ballerina Vanity Unit

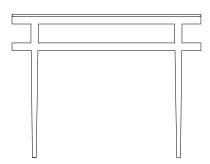


Vanity Fitting Instructions

- Prior to installation it is important to inspect the vanity to ensure no damage has occurred in transit. If damage
 has occurred, or a visible defect exists, do not proceed with the installation and advise supplier immediately. No
 warranty claim for damage will be accepted if the vanity is installed.
- Prior to installation check wall/tile surface where unit will be fitted is flat and even. Installing on uneven wall will
 result in the unit twisting DO NOT PROCEED.
- It is recommended that the Corian top is protected during installation.

PLEASE NOTE: MANUFACTURER WILL NOT BE LIABLE FOR THE COST OF INSTALLATION OR REMOVAL OF THE VANITY & THE WARRANTY WILL BE VOIDED IF DAMAGE OCCURRED DURING INSTALLATION.


1. Check that the unit will fit into the location. On timber studded walls, mark the positions of the studs, so to be able to fix the unit to these later.



2. Waste plumbing should align with the centre of the unit where the cutout will be located.



3. Mount unit by pre-drilling through any part of the back panel of the unit to fix to wall ENSURING CONTACT TO STUDS. Drill into the timber wall studs and screw/ bolt unit onto wall.

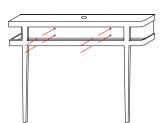



Vanity should be installed by a qualified, licensed trade person.




Installation Instructions


ISSY//

Ballerina Vanity Unit

4. Ensure the vanity is installed level, the unit MUST SIT FLUSH with wall when in contact with the ground.

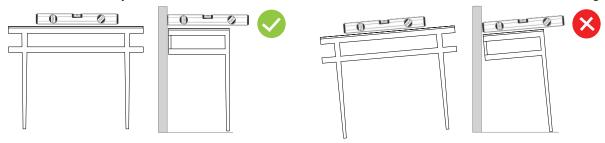

5. Ensure the corian is right way up to align with the waste cutout, as well as edge detail. Silicone needs to be applied to secure and mount onto the vanity permanently. Silicone all the way around the top edge of the cabinet where the unit meets any wall surface to ensure a proper protective seal.

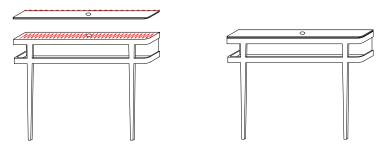

^{**}Recommendation for Plumbing

Waste should not be over tightened to avoid stress on basin and top.

