


# PURE PROGRESSIVE WALL BASIN MIXER

## Installation Instructions

Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300 - 500 Kpa. Maximum water temperature is 65 deg.C.

#### **ROUGH IN**

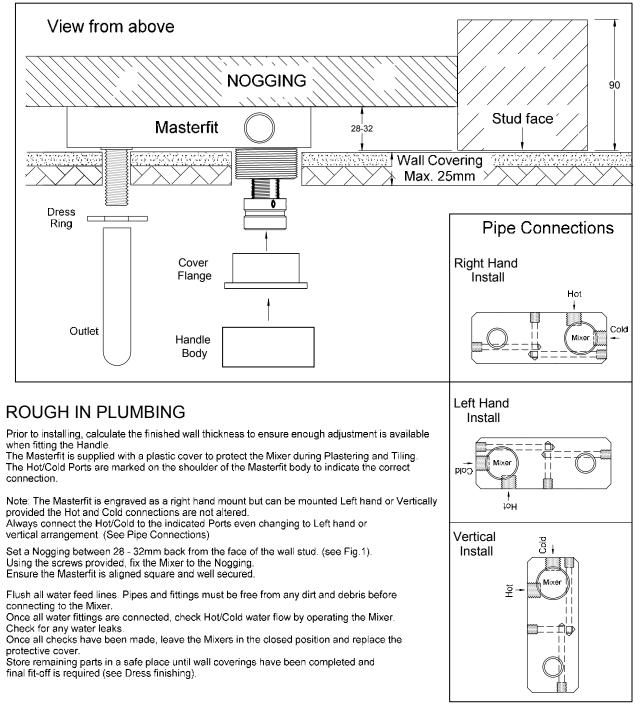

#### Plumber please note:

On-site high pressure line testing must be conducted with the Mixer in the closed position. (STATIC TEST ONLY) Under no circumstances is the Mixer to be opened when exceeding the maximum stated water pressure. At the completion of the testing, do not relieve any high pressure by opening the Mixer. Exposing the internals of the Mixer Cartridge to higher than specified water pressures, will void the manufacturer's warranty.


## Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference



# **PURE PROGRESSI\ BASIN MIXER**

Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300 - 500 Kpa. Maximum water temperature is 65 deg.C.

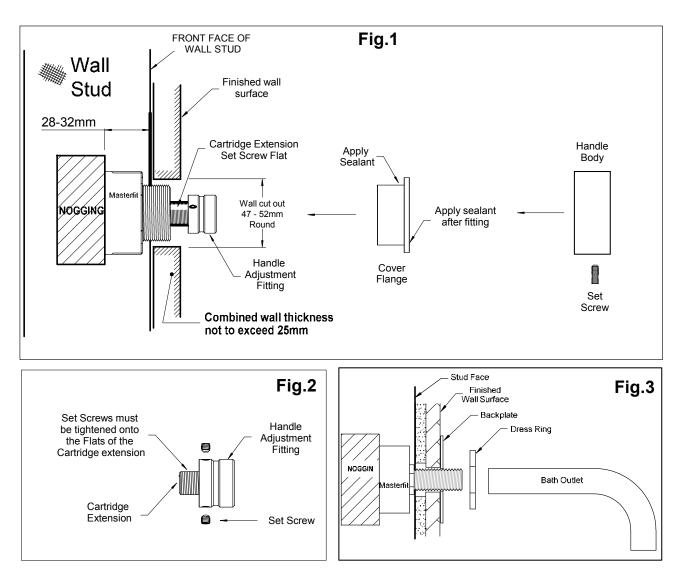

### DRESS FINISHING AND HANDLE ADJUSTMENT

Prior to fit off ensure the correct size cut out around the Mixer has been achieved.(see Fig.1) Apply sealant to the Cover Flange and fit to the Mixer until the shoulder meets the wall. Once the Cover Flange has been fitted, apply a small amount of sealant to the inside of the Cover flange to water prove the installation.

Fit the Handle onto the Adjustment Fitting. If adjustment is required, remove the Handle and loosen the Set Screws of the Adjustment Fitting.

Wind the Adjustment Fitting to reduce or increase the gap between the Wall and the Handle. (see Fig.2)

Once the gap from the Wall to the Handle is between 2-3mm, remove the Handle and tighten the Set Screws of the Adjustment Fitting When securing the Handle adjustment Fitting, ensure the Set Screws are tightened onto the flats of the Cartridge Extension. (see Fig.2) Do not tighten the Set Screws on the threads of the Cartridge Extension. Fit the Handle so the Set Screw is positioned at the bottom.(tighten well) Note the Set screw must engage in the grove of the Adjustment Fitting

OUTLET FIT OFF (see Fig.3)

Apply sealing tape (Teflon) to male thread. Place Dress Ring over prepared male thread. Fit and align the Outlet.

To complete installation, operate the Mixer(s) checking the flow of both hot and cold water from the Outlet. Check all fittings and fixtures for water leaks

