



Posh Bristol Mk2 Square Overhead Shower 200mm (3 Star)

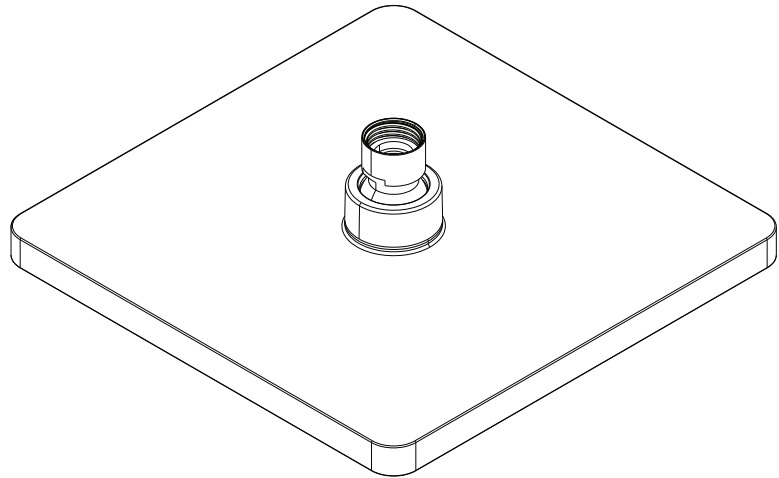

Shower Kit Installation

Important

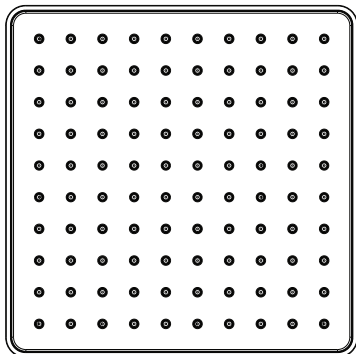

The Posh Bristol Overhead Shower must be installed to the requirements of AS/NZS 3500.1 by a qualified plumber. It comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the product. The Posh Bristol Overhead Shower is tested and sealed so as to give the best performance.

Important



When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with 'AS/NZS 3500.1' recommendation.

Important



This shower may not be suitable for use with gravity-fed water heaters, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.



Installation

1. Ensure Sealing washer is fitted into swivel ball joint section.
2. Screw shower head onto horizontal or vertical shower arm in anticlockwise direction. Tighten sufficiently to achieve watertight seal. If using wrench to tighten protect surface from possible damage.

Note: Do not use any thread sealant.

3. Once fitted tilt shower head to correct position. Open water Turn on water supply and check for any leaks.

Note: Exercise care when installing to avoid damage to pre-fitted flow controller.

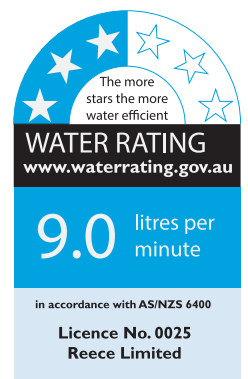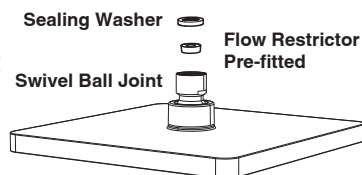

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions at: www.reece.com.au.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

