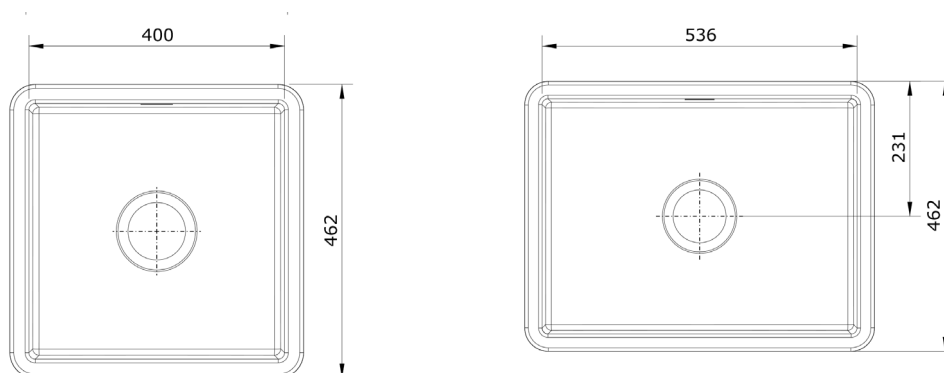


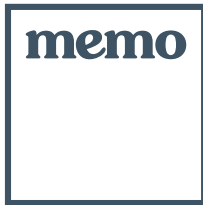
Memo Harper Butler Inset/Undermount Sink Fine Fireclay

IMPORTANT NOTE

- Read these instructions carefully before you begin this installation.
- Observe all local plumbing and building codes.
- Due to the various cut out sizes possible, and natural variation in fireclay, a template is not supplied.
- Prior to installation, unpack the new sink and inspect it for damage. Return the sink to its protective carton until you are ready to install it.
- Due to the variety of installations possible with this sink, you may need to use procedures other than those described.
- It is very important that proper high-quality materials and silicones are used with your sink.
- The cabinet and frame shown in these instructions are generic and may not represent the actual design or structure.
- Due to the nature of undercounter installations, it is recommended that undercounter sink installations be performed by trained and experienced installers.
- To ensure a safe and damage-free installation, two people should install the sink.
- All information in these instructions is based on the latest product information available at the time of publication.




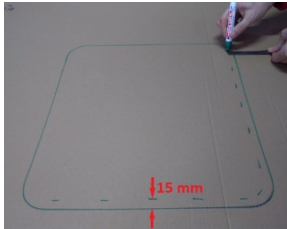


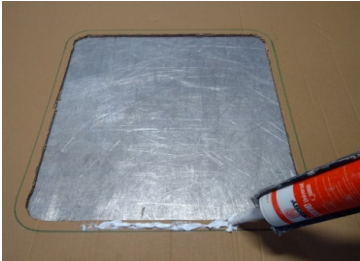

**Plumbers, please ensure a copy of the Installation
Instructions are left with the end user for future reference**

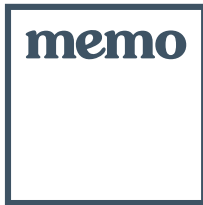


Memo Harper Butler Inset/Undermount Sink Fine Fireclay

1. INSET




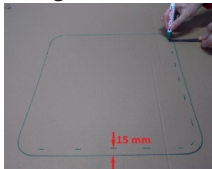


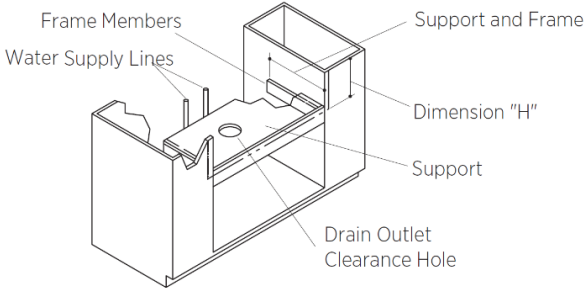
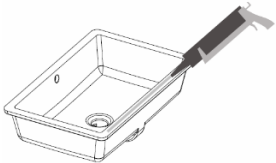
<p>1. Place the sink upside down on the bench top. Trace around the outer edges on the bench top.</p> 	<p>2. Draw a second line the correct distance inside the marked line based on the sink you have.</p> 
<p>3. Cut out the bench top on the inside line</p> 	<p>4. Install the waste in the sink, using silicone between the top flange and the sink</p> 
<p>5. Apply silicone around the edge of the bench top</p> 	<p>6. Place the sink into the benchtop, wipe away excess silicone, and leave to cure for 24 hours before use</p> 



Memo Harper Butler Inset/Undermount Sink Fine Fireclay



2. UNDERMOUNT

<p>1. Place the sink upside down on the bench top. Trace around the outer edges on the bench top.</p> 	<p>2. Draw a second line the correct distance inside the marked line based on the sink you have. Allow for a 5mm internal overhang.</p> 
<p>3. Cut out the bench top on the inside line, and polish inside edge.</p> 	<p>4. Install the waste in the sink, using silicone between the top flange and the sink</p> 
<p>5. Measure the overall height of the sink (Dimension "H") and install a shelf or supporting beams the same distance down the inside of the cabinet, place the sink on this shelf</p> 	<p>6. Apply some approved flexible watertight silicone to the top of the sink. DO NOT USE EPOXY OR ANY OTHER SOLID ADHESIVE AS THIS MAY CRACK THE SINK OVERTIME AND WILL VOID THE WARRANTY, then place the benchtop over the top of the sink. wipe away excess silicone, and leave to cure for 24 hours before use</p> 

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference