


mizu

Mizu Wastes

ASSEMBLY INSTRUCTIONS

1. Disassemble components and locate the upper waste body, fitted with top washer, into the basin/bath outlet.
2. Introduce lower waste body fitting with silicon washer to basin/bath underside and align components with retaining screw.
3. Tighten waste assembly and slide push plug insert inside waste body fully.
4. Check operation of push plug seal and ensure waste is fully sealed into basin/bath top and bottom.

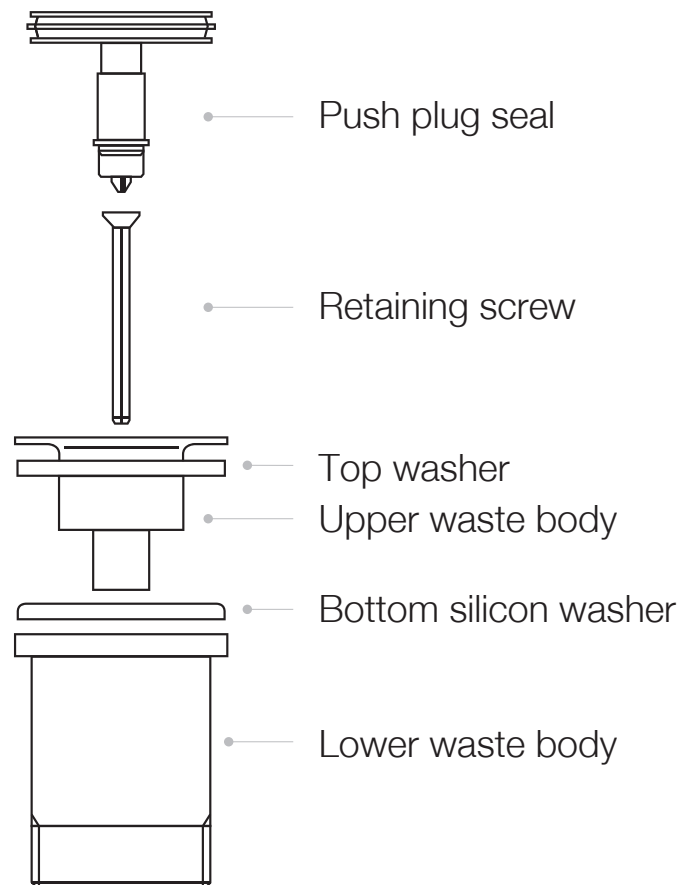

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.