


### Posh Solus Bath Outlet 210mm Chrome



Outlets must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Please ensure all pipework is thoroughly flushed out prior to installation.

#### Installation Instructions - Wall Mounted

- A) Ensure adequate threaded nipple is exposed.
- B) Cut to length to suit spout.
- C) Apply thread tape.
- D) Screw on outlet.
- E) Do not over tighten.

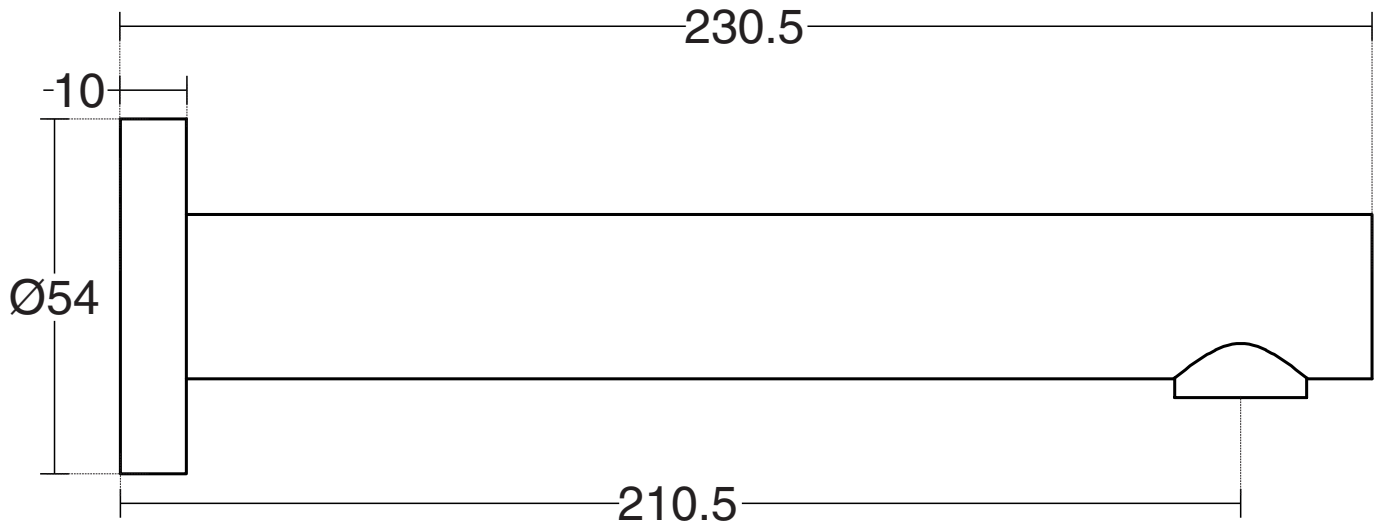

#### Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

**Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.**

