


Alape Metaphor Semi Inset Basin White

INSTALLATION INSTRUCTIONS


NOTE: Please use adhesive supplied for installation.

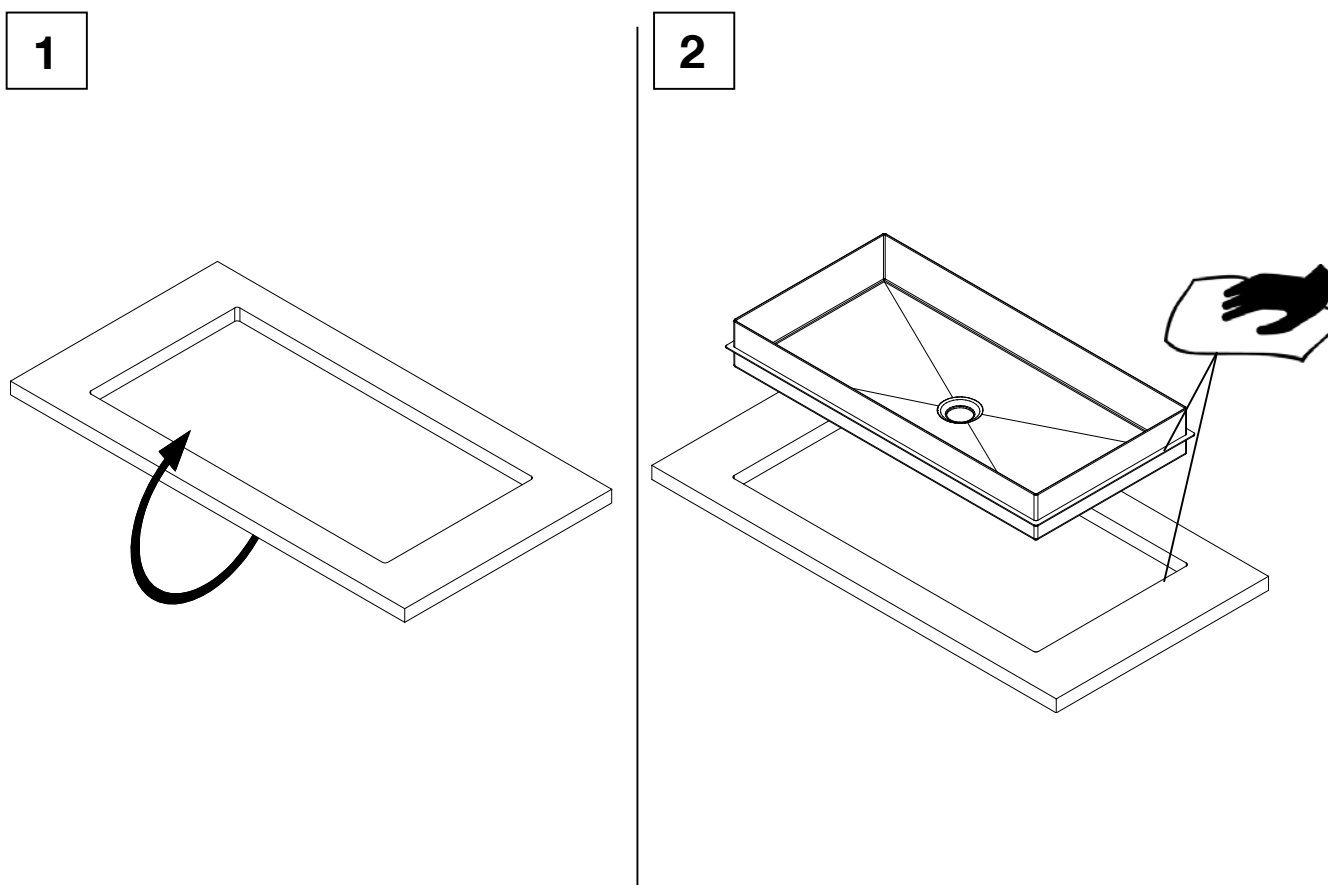




Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.

Alape Metaphor Semi Inset Basin White


3

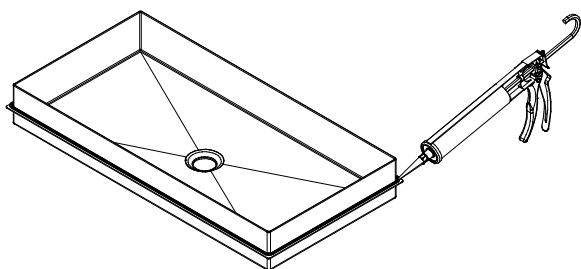




4

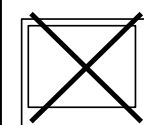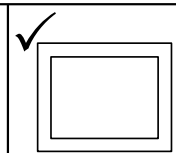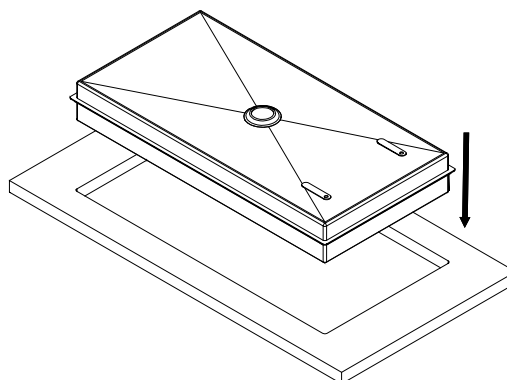

5

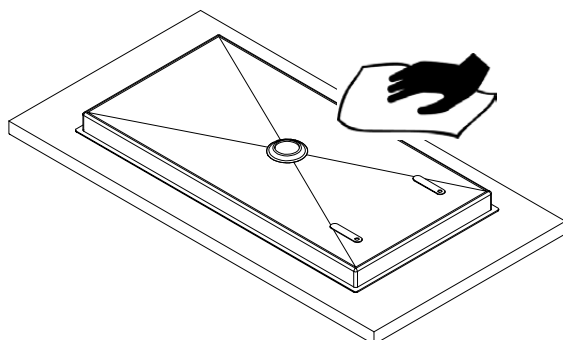


6

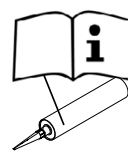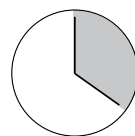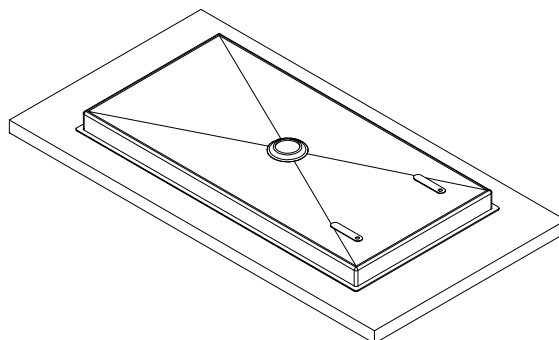



Alape Metaphor Semi Inset Basin White

7


NOTE: Please ensure that the adhesive is cured before turning over the benchtop

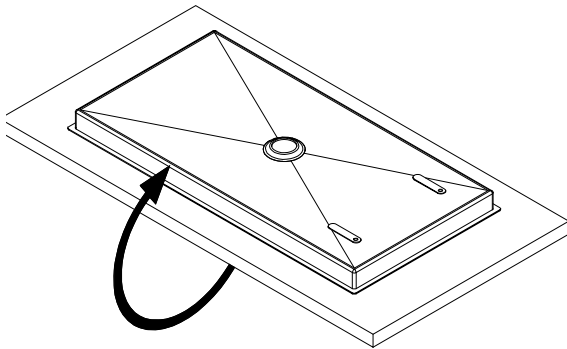

8

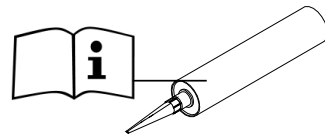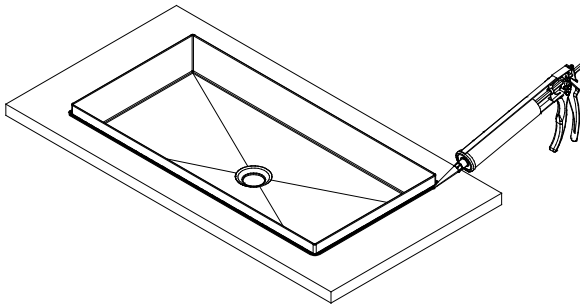

9

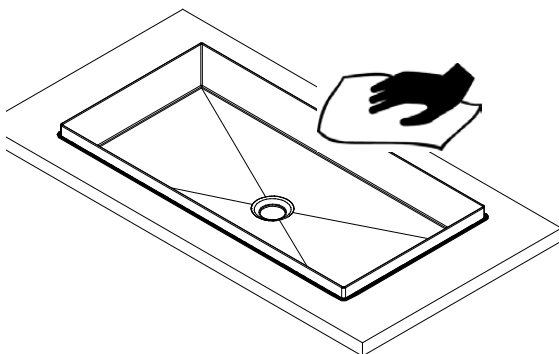

10

