

# KADO


## Kado Lux Wall Basin with Shelf 580 x 440mm 1 Taphole White

### INSTALLATION INSTRUCTIONS:

#### NOTE

If fixing to timber framed walls or partitioning, the wall should be reinforced with a noggin to receive the fixing bolts.

1. Drill holes into the wall at the desired height and fixing centres and install the fixing bolts supplied (refer to Figure 1)
2. Fit selected tapware to the basin. Fit the selected non-overflow waste to the basin ensured it is sealed with flexible sealant on top
3. Carefully align the basin complete with fittings onto the protruding bolts
4. Insert nylon bushes and locking nuts supplied and partially tighten the lock nuts to hold the basin into positions. Make minor adjustments at this stage and ensure basin is level and then fully tighten the lock nuts. Do not overtighten
5. If desired, all visible external edges can be joint sealed using flexible sealant, ensuring to wipe off any excess

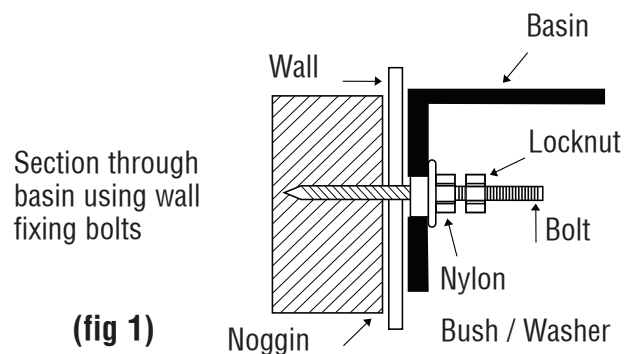

### CLEANING RECOMMENDATIONS:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

**Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference**