

Alape[®]


Alape Circa Freestanding Basin 400mm White (Wall Attached)

INSTALLATION INSTRUCTIONS

Note: If fixing to timber framed walls or partitioning, the walls must be reinforced with noggins to receive fixing bolts/screws.
The basin can also be floor mounted

Please allow sufficient height for installation of tapware on wall.

- 1 Drill four holes into the wall for the dowels at the required height and fixing centres. Insert dowels (1) and wood-to-metal dowels (2). Secure wall attachment element to wall with nuts (4) and metal flat washers (3).
- 2 Mount bottle trap (5) and adaptor (7) onto the wall attachment element.
- 3 Slide on the rubber edging trim all around the bottom lip of the basin. Depending on the basin model, the trim may have to be shortened. Lift washstand with its recess over the adaptor and position washstand relative to the wall.
- 4 To secure the washstand, tighten drain valve by using the installation wrench (6). If desired all visible external edges can be joint sealed using flexible sealant ensuring to wipe off any excess.

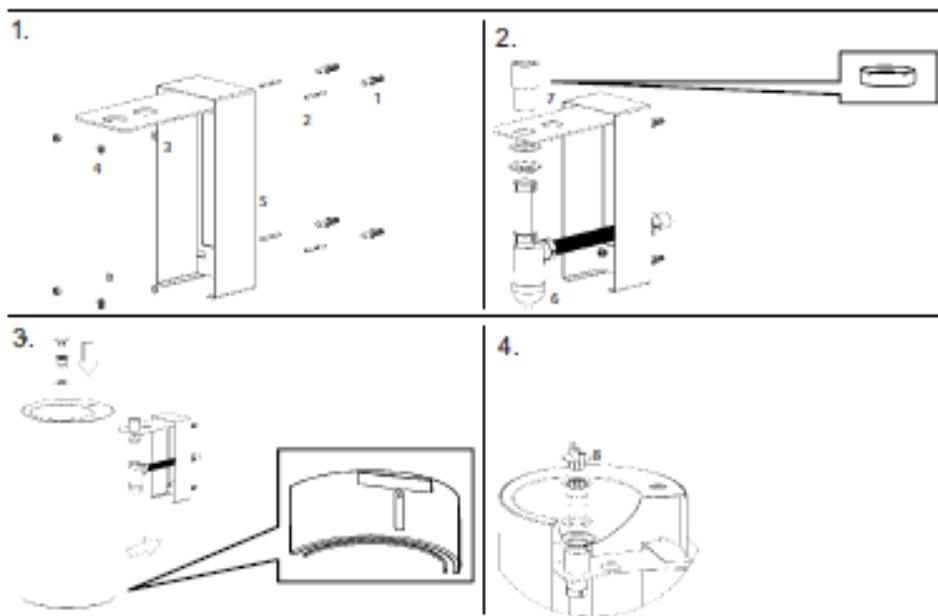

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.