


## Alape Sondo Counter Basin 400mm & 450mm

### INSTALLATION INSTRUCTIONS

1. In a suitable position on the countertop, cut a diameter 45 mm hole.
  2. Using 45mm hole mark arc on benchtop for 245mm (400) or 260mm (450) with cardboard strip supplied
- NB: - if wall mounted tapware is to be used, consideration should be made to length of outlet and positioning of basin on bench top  
 - if tapware is to be bench mounted allow suitable bench top width for fitting tapware  
 - use large base spacer (1) ID 233 x 15mm (400) & ID 260mm x 15mm tall (450) on bench top centrally over marked cutout (Step 2) to final basin location
3. Fit rubber waste seal (5) inside vessel waste hole, if it has not been factory fitted
  4. Sit basin centrally on large basin spacer (1) on marked arc (step 2) & guide waste top (4) through the waste hole sealing ring (5) & the drilled hole from above
  5. Fit rubber washer (7) and nylon washer (6) to waste top (4) & screw union nut (8) from below counter basin. Cut waste top (4) to length if required
  6. Align counter basin carefully so it sits straight and level and tighten into place to prevent movement
  7. Make connection from waste to waste pipe in wall using 40mm trap
  8. Thoroughly check for leaks

NOTES: 40mm Trap assembly to vessel waste fits benchtops upto maximum thickness = 40mm

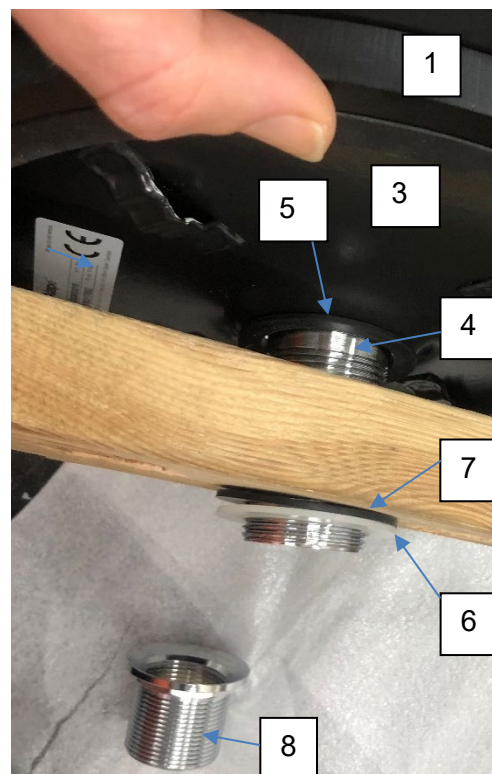

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.