


Pure Elemental Wall Top Assembly

SUSSEX

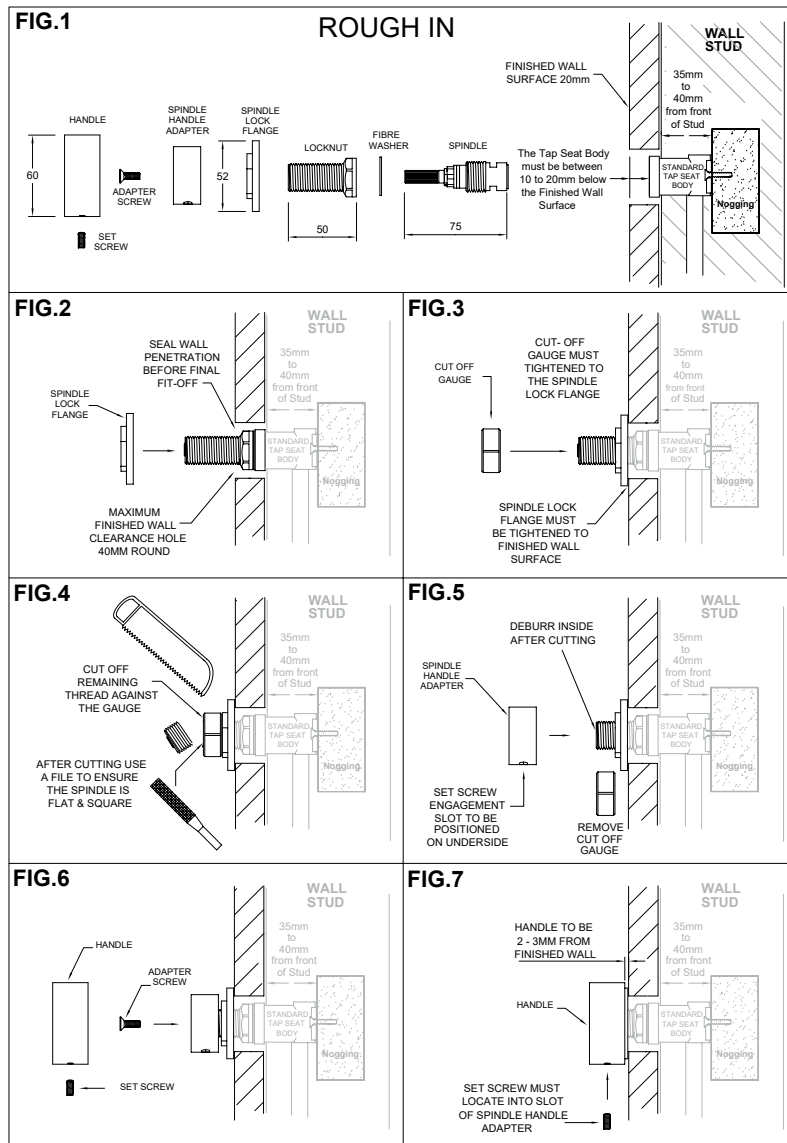

Product codes:

MPWTA.01-E

Rough In (New Wall Breech):

- A standard Plumbing Wall Breech (not supplied) is to be used in conjunction with this Tapware.
- Secure a nogging 35 - 40mm back from the front of the stud. (See Fig.1)
- Attach the Wall Breech to the nogging.
- Ensure the Breech Tap Seat Bodies are square and parallel between the Wall Studs.
- To allow the Tapware to fit correctly the thickness of the finished Wall coverings must be calculated prior to "Rough in".
- The Tap Seat Body of the Breech should be 10 to 20mm back from the finished wall coverings. (See Fig.1)

Rough In (Using Existing Breech, changing tapware only):

- Remove the old Spindles and clean surrounding area.
- Use a re-seating tool to dress the Seat, ensure the Spindle Seat is clean, flat and free of any debris.
- Water inlet lines must be completely flushed prior to fitting the Spindles.
- The distance from the Finished Wall Surface to the top of the Tap Seat must be between 10 to 20mm (See Fig.1)
- If the Tap Seat body is not within the dimensions shown in Fig.1. Alternative Spindles may be required.

NOTE: Seat or Breech Body extensions are NOT to be used in conjunction with this Tapware. Failure to adhere will void warranty.

Fit Off:

- Carefully unpack the Tapware; note some parts have been combined for packaging purposes.
- Separate all parts as shown in Fig.1
- Install the Spindles hand-tight until the seal of the Spindle firmly makes contact with the seat.
- Using an appropriate spanner tighten the Spindle another 1/8th of a turn. Do not over-tighten.

NOTE: Over-tightening the Spindles could damage the ceramic discs and in turn, void the manufacturer's warranty.

- Place the Fibre washer over the seated Spindle and fit the Spindle Locknut. (Tighten well). (Fig.1).
- Seal the wall around the Spindle and fit the Spindle Locking Flange to meet the Finished Wall Surface. (Fig.2)
- Screw "Cut-off" Gauge to the remaining threads of the Locknut (See Fig.3)
- Using an appropriate saw, cut off the remaining thread against the "Cut-off" Gauge. (See Fig.4)
- Important, after cutting leave the Gauge in position and use a file to ensure the Spindle end is flat and square, (See Fig.4)
- Remove the "Cut-off" Gauge and de-burr any sharp edges from the inside of the locknut. (See Fig.5)
- Attach the Spindle Handle Adapter and ensure the Set screw engagement slot is positioned underside. (See Fig.5)
- Fit and tighten the Adapter Screw to secure the Spindle handle Adapter. (See Fig.6)
- Attach Handle to Spindle Handle Adapter. (See Fig.6)
- Align the Handle so that the Set screw locates into the engagement Slot. (See Fig.7)
- Fine tune the Handle position and then tighten the Set Screw using a 2.5mm Allen Key. (Tighten well)
- Note the Handle should have 2-3mm clearance from the Finished Wall Surface.
- After completing the installation, establish water supply, check function of Tapware and ensure no water leaks.

Plumbers note:

Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2021
Recommended working water pressure 300 - 500 Kpa. Maximum water temperature is 65°C
Please ensure a copy of the Installation Instructions are left with the end user for future reference.



www.reece.com.au



While we aim to ensure the specifications shown are correct at time of printing, Sussex Taps reserves the right to make modifications without prior notice. Always use the physical product for accurate measurements. Dimensions are subject to change without notice. All measurements are shown in millimetres. This product complies with lead free requirements.

Copyright © Sussex Taps