




Alape WT Square Freestanding Basin with Square Bowl & Fixing Kit 450mm White

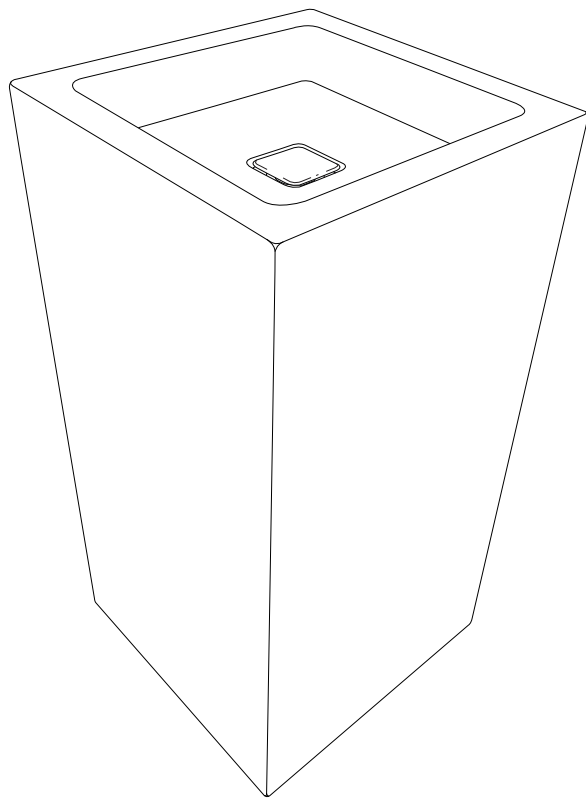


Components Supplied

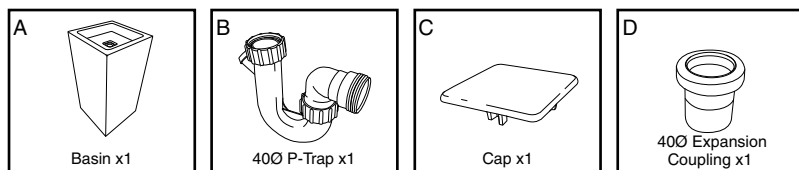

Recommended Components (Not Supplied)

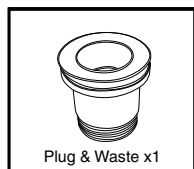


Tools Required


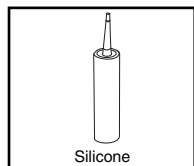


Alape[®]


- Fit recommended Waste **(1)** to the underside and top of Basin.
- Fit Square Cap **(2)** into top of Waste in place of push button supplied with waste.

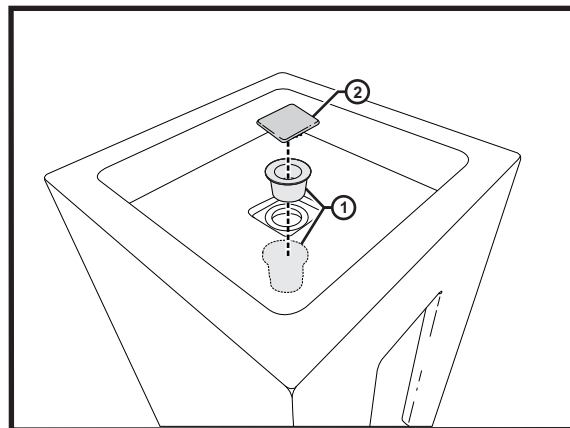

- Assemble supplied P-Trap **(1)** to 40mm waste thread **(2)** under Basin.
- Cut a length of 40Ø mm PVC pipe **(3)** and insert into P-Trap **(1)**.
- File down exposed end of 40Ø mm PVC **(3)** to fit Expansion Coupling.

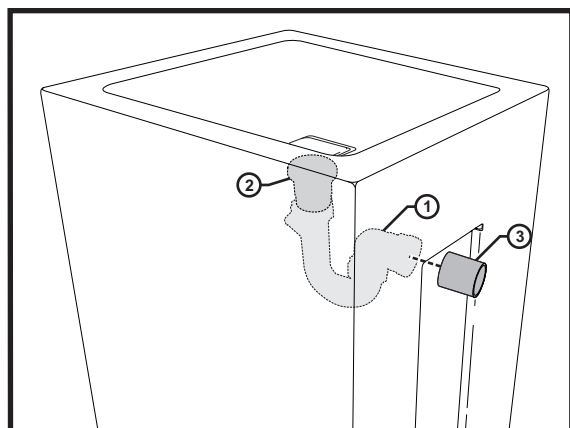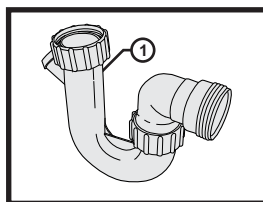

- Lubricate Expansion Coupling **(1)** seal.
 - Align 40mm PVC pipe **(2)** with Expansion Coupling **(1)** on wall to locate Basin against wall.
 - Check and mark location of Expansion Coupling **(1)** for connection into waste pipe prepared in wall.
 - Ensure height of 40mm PVC pipe is not more than 705mm maximum off floor. This will ensure waste pipe clears basin access panel cut out.
 - Test fit lower basin rubber beneath Basin but use only if floor surface allows basin to be pushed back to wall.
 - Apply silicon to rear of Basin and complete installation.
- Note: When installation is complete be sure to check for leaks.**

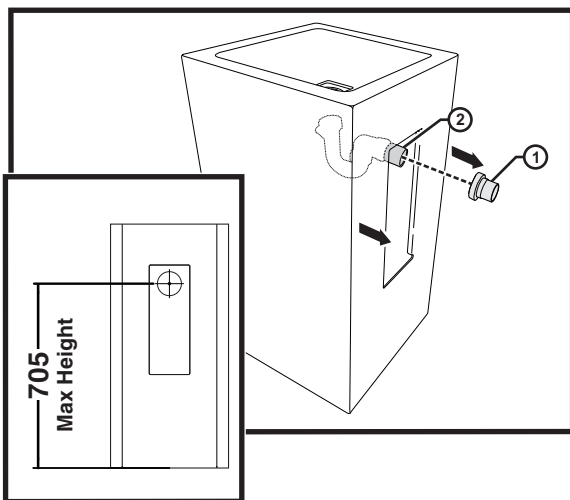

Complete Ensure a copy of the Installation Instruction is left with the end user for future reference.

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

