


TASCA LINEN CABINET

WALL HUNG

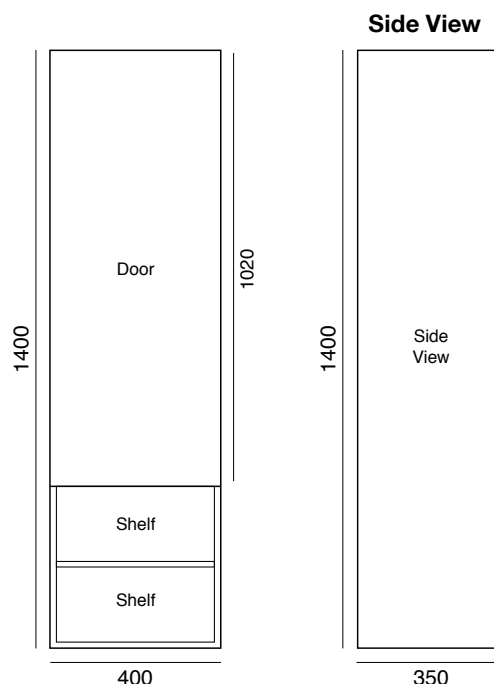

SPECIFICATIONS

Recommended use	Domestic / Multi Residential
Colour Availability	Gloss white or black / matte white or black or a choice of six NAVurban finishes: Tablelands, Fremantle, Blackheath, Fitzroy, The Oaks & Yarra Walnut – see swatches below:
	     
	Dulux colours in gloss or matte finish available at an additional charge
Interior finish:	CIBO light grey 'Zincworks' moisture resistant (MR) MDF
Fixing requirement:	Wall hung – a licensed (Plumber/Builder) installer is required
Dimensions:	400 x 1400mm x 350mm Incorporates cupboard with three adjustable glass shelves and two exposed shelves at base of cabinet.
Mechanisms	Soft-closing door available with LHS or RHS hinge.

All dimensions are provided in millimetres and are subject to accepted manufacturing variations.

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

Dimensions are nominal measurements only

To see the complete CIBO range go to www.reece.com.au/bathrooms

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 5

INSTALLATION INSTRUCTIONS

PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (or PICK UP), PRIOR TO INSTALLATION.

A visual inspection must be made of the product on delivery (or pick up), by the person receiving it, prior to installation. Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately, to advise of your concerns (prior to installation).

**For detailed Installation Instructions visit
www.cibodesign.com.au**

1. Carefully remove door and drawer(s) where applicable and store safely.
2. Unwrap shelves and place to one side.
3. If linen cabinet has mirrored back(s) then remove the mirror and store carefully.
4. Once placement of cabinet has been determined, drill fixing holes through back of cabinet.
5. Secure cabinet to wall (installer to determine appropriate fixings) and cover with caps provided.
6. If cabinet has a mirrored back, replace ensuring mirror is flush against back of cabinet. We do not recommend mirrors to be glued in place, as this creates problems for future removal.
7. Replace shelves at required height.
8. Replace door and drawer(s) where applicable and adjust hinges if necessary.
9. Once door and drawer(s) are lining up correctly, we recommend sealing (along the back edge and down the sides) against the wall with bathroom quality silicone.
10. Spray soapy water on silicone joint (between the wall and cabinet) to stop silicone sticking to the wall, then wipe off excess silicone and soapy water.