


mizu

Mizu Drift 40mm Plug & Wastes - Non-Overflow and Overflow

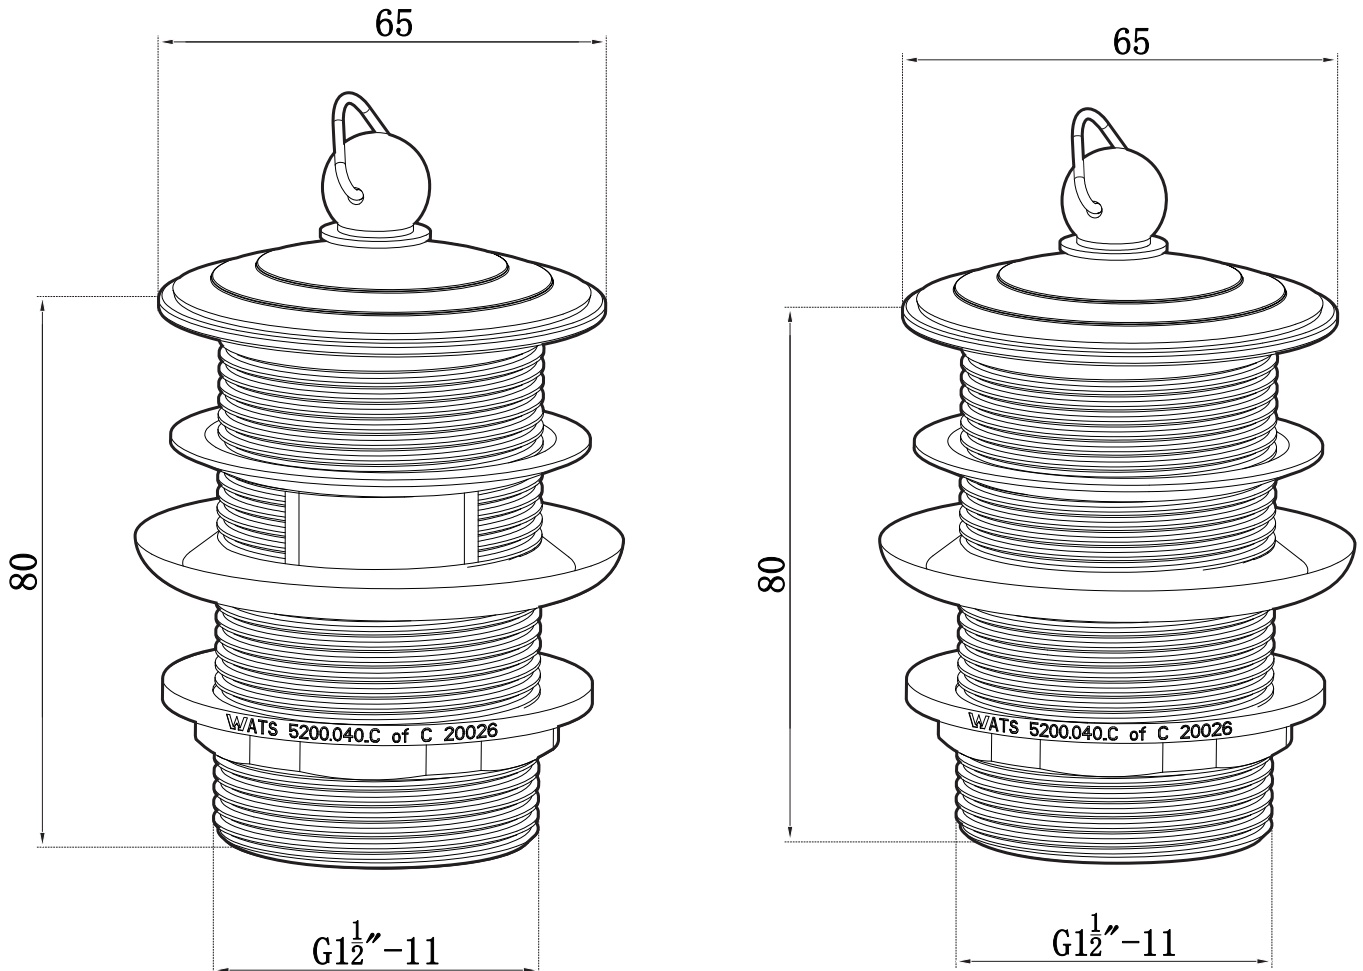

Installation

1. Apply a thin bead of non acetic silicone around the outlet hole opening of the basin.
2. Fit the waste body into the hole, if waste has an overflow ensure slotted section of the waste is pointed towards the overflow slot of the basin.
3. Underneath the basin, apply the silicone based sealing washer onto the thread then place and screw backing nut onto the waste body and firmly tighten.
4. Do not over tighten on ceramic basins.
5. Allow sufficient time for the silicone to cure.
6. Fit the waste trap and check for any leaks.
7. Ensure there is no silicone residue left on surface of waste.

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

