



## Milli Pure Hi Rise Shower Square


# INSTALLATION GUIDE

Tapware is to be installed by a Licenced Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500kpa.  
Maximum water temperature is 65 deg.C.

### Fit Off

- Remove Inlet Fitting by loosening the Set Screws.
- Ensure the wall penetration is sealed prior to connecting any fittings.
- Apply thread tape or appropriate sealant to Water Feed Thread and attach Inlet Fitting using 10mm Allen key.
- Fit the Hi-Rise Shower Arm as assembled onto the Inlet Fitting, secure by tightening the Set Screws.
- Attach Shower Head.
- Test function and water flow.
- Check for water leaks.

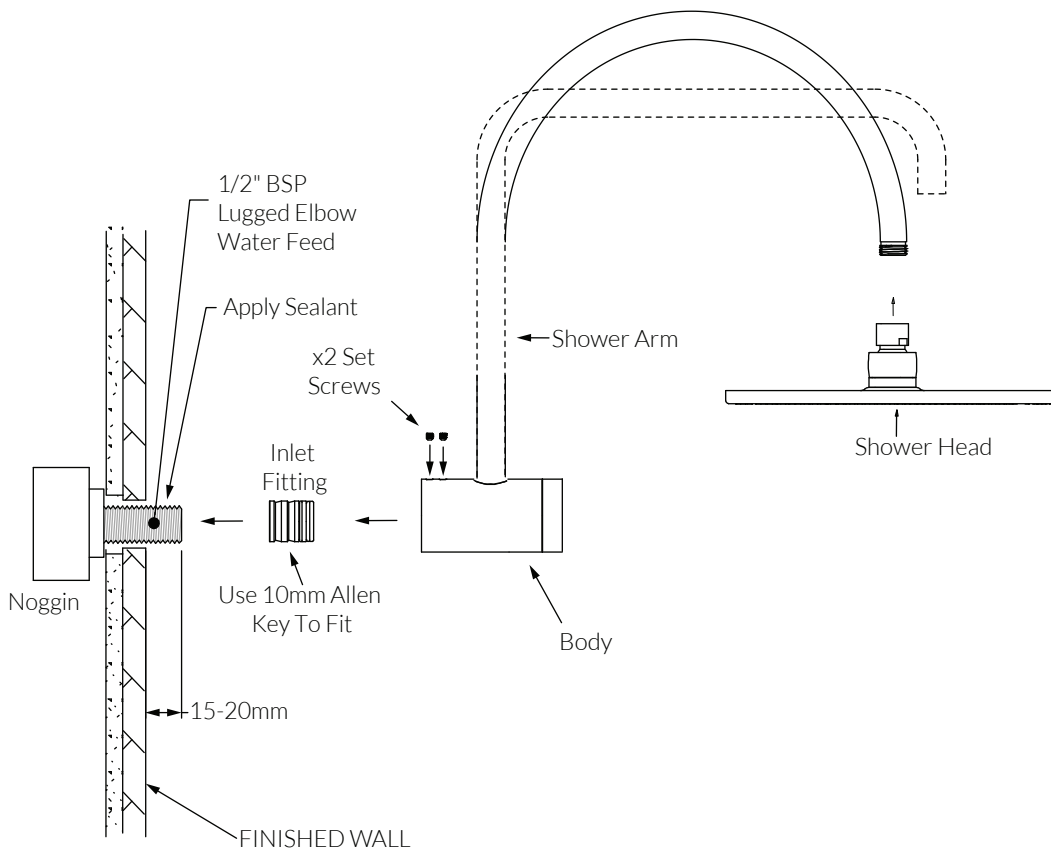

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference