

KADO

Installation Instructions

KADO ARC TIMBER MIRROR CABINET

PRIOR TO INSTALLATION

A licensed tradesperson must install your Rifco Mirror Cabinet

It is the responsibility of the purchaser to examine and check the mirror cabinet for suitability and damage BEFORE installation.

Once the mirror cabinet has been installed, no claims for damage or incorrect goods can be made.

Please check all goods for damage and notify point of purchase of any damage/missing products.

Ensure bathroom is well ventilated and not in direct contact with water.
This product is made from moisture resistant material but is NOT waterproof so care must be taken to ensure it does not get wet.

It is important to make sure the wall is plumb and square.
If it is not, the wall will need to be packed out so the cabinet doors will function correctly.

INSTALLATION INSTRUCTIONS


1. Lay cabinet on its back on a soft surface (eg a bed, or carpeted floor) so the mirrors are facing the ceiling.
2. Carefully remove doors by unclipping them from the cabinet as per images below and ensure that they will be safe and secure during the next steps of installation.

No claims for damages will be recognised after after doors are removed from cabinet.



3. Secure the cabinet to the wall by using the appropriate screws. (Not supplied) Use a spirit level to not only ensure that the cabinet is straight and that your bathroom wall is level

Position fixings as shown below:

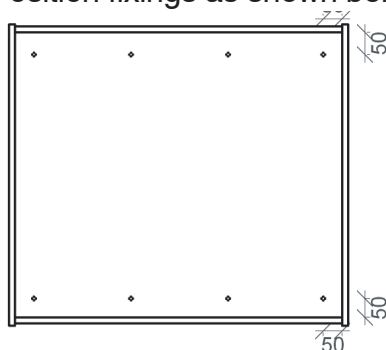

Rifco recommends the following minimum;

- 450 & 600 wide cabinets – 3 per row
- 750 & 900 wide cabinets – 4 per row
- 1200 wide cabinets – 5 per row
- 1500 wide cabinets – 6 per row
- 1800 wide cabinets - 7 per row

4. Carefully attach the doors back onto the cabinet. Remove the protective packaging and re-adjust the cabinet doors (if required) with a screwdriver. Finally, ensure that all screws are tight and not loose.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference