


## Base Inset Laundry Troughs

### INSET INSTALLATION INSTRUCTIONS

**Note:**


If wall mounted tapware is to be used, consideration should be made to length of outlet and positioning of the trough on bench top.

1. Use the template provided to trace the cut-out on both the benchtop and underlay / timber lining.
2. Cut out the bench top.
3. Apply silicone sealant around the underside edge of the sink.
4. Position the sink into the benchtop and apply even pressure to the frame until the sink is as close to the benchtop surface as possible.
5. Install all securing clips.
6. Tighten the sink to the benchtop and ensure no gaps exist between sink and benchtop.
7. Remove excess silicone residue.

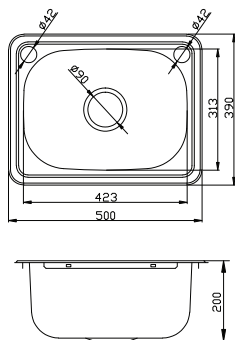


**9504715**

**Inset Mini Laundry Trough**

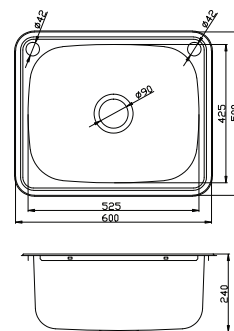


**9504716**

**Inset Laundry Trough**

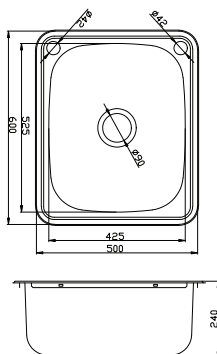

**9504717**

**Inset Compact Laundry Trough**

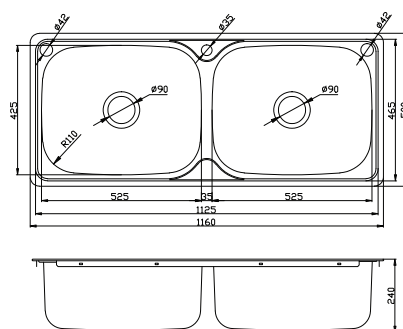

**9504718**

**Inset Double Laundry Trough**

Please ensure a copy of the installation instructions is left with the end user for future reference