


## Kado Lux 415 Vanity Basin

### INSTALLATION INSTRUCTIONS

1. Position the supplied cut out template onto the benchtop as desired and mark around.
2. Cut hole into benchtop according to the template size.
3. Fit selected tapware and waste to basin.
4. Apply waterproof sealant (not supplied) to the rim of the basin and to the benchtop.
5. Drop basin into hole in benchtop and press firmly all around to achieve good seal.
6. Remove surplus sealant.

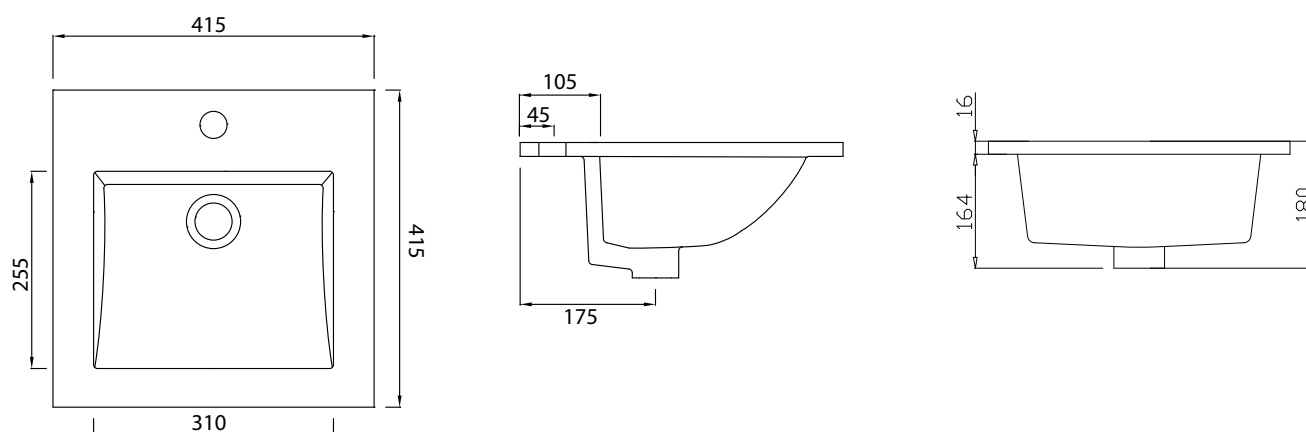

Dimensions are nominal measurements only.

**Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference**

**Published 21/07/2020**