

INSTRUCTION SHEET 1 (CAGE ONLY)


FIXINGS SUPPLIED.

M6x16L



8x (For 600mm & 800mm High)
12x (For 1200mm & 1600mm High)

M6x35L




6x

M6
Wrench 1x

1

SLIDE LEFT AND RIGHT SIDE PANELS INTO MOUNTING HOLES ON FRONT PANEL

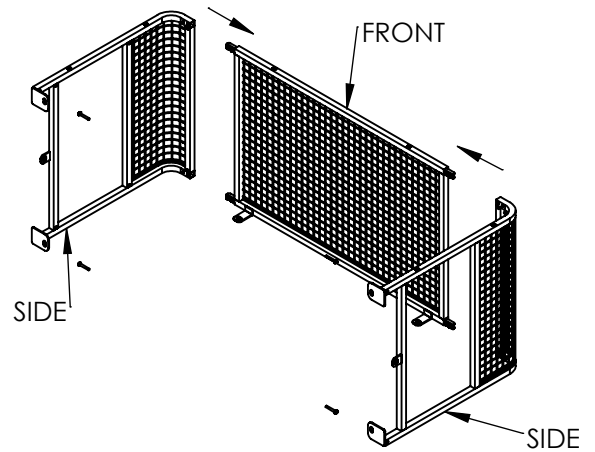


2

USING SCREWS PROVIDED, SCREW SIDES AND FRONT TOGETHER. DO NOT FULLY TIGHTEN AT THIS STAGE


M6x16L

8x (For 600mm & 800mm High)
12x (For 1200mm & 1600mm High)

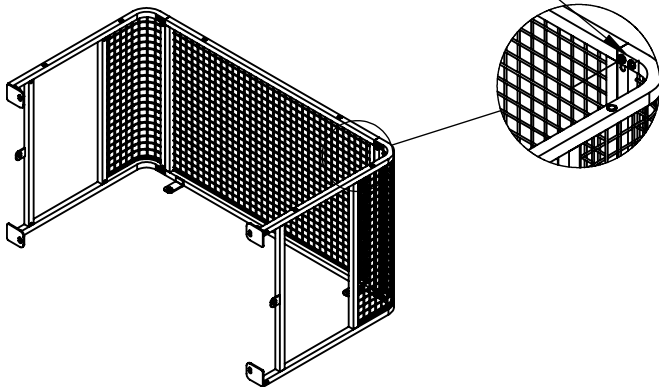


3

JOIN TOP PANEL TO SIDES AND FRONT, ENSURE GROUND FIXING LUGS ON FRONT IS AT THE BOTTOM. TIGHTEN ALL SCREWS ON TOP AND ON SIDES AND FRONT.

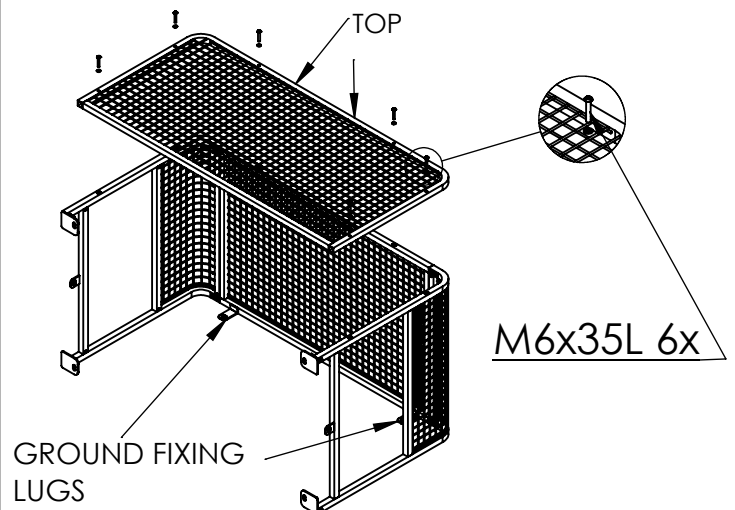

4

DOOR MAY BE PADLOCKED THROUGH EYELETS PROVIDED OR SCREWED SHUT WITH METAL DRILLING SCREWS (Metal drilling screws not provided)

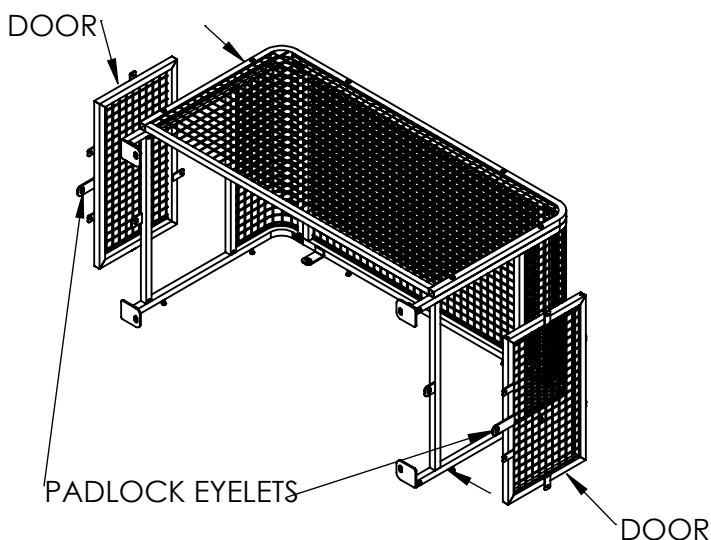

5

FINISHED

