


CLASSIC EXPOSED TELEPHONE BATH/SHOWER SET LEVER HANDLE

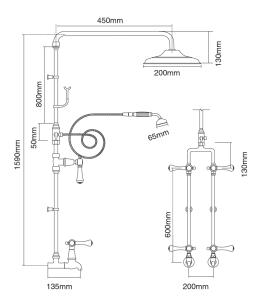

Dimensions are nominal measurements only.

SPECIFICATIONS	
Recommended Use	Domestic, hotel and commercial.
Colour Availability	Chrome, Brass Gold.
Handle Options	Cross Handle, Lever, Porcelain Lever.
Pressure Rating	As per AS/NZS3500 pressure must be limited to 500kPa on any new home, extension or renovation.
	For best performance and longer life we recommend 150-500kPa.
	Hot and cold water inlet pressure should be equal.
Temperature Rating:	80°C maximum continuous working temperature.



To see the complete KADO range go to www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS


We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty- refer to Warranty Conditions.









KADO CLASSIC EXPOSED TELEPHONE BATH/SHOWER SET LEVER HANDLE



Chrome Brass Gold



KADO CLASSIC EXPOSED TELEPHONE BATH/SHOWER SET LEVER HANDLE

INSTALLATION INSTRUCTIONS

IMPORTANT INFORMATION, please read before starting installation.

- 1. This tapware may come partially assembled. This is for packaging purposes only.
- 2. It is the plumbers responsibility to ensure that all assembled components and threaded joins are checked for correct assembly prior to installing.
- 3. All threaded joins are to be taped with suitable plumbers tape or sealed with a recommended sealing compound.
- 4. Prior to installation, the tapware must be pressure tested using the appropriate testing equipment.
- 5. Prior to installation, the installer is responsible for ensuring installation of the correct plumbing fittings and the set out distances are correct for the product supplied.

IMPORTANT INFORMATION: please read before starting installation. A Licensed Plumber must install this product.

- 1. It is the plumber's responsibility to ensure that all assembled components and threaded joints are checked for correct assembly prior to installing.
- 2. All threaded joints are to be taped with suitable plumbers tape or sealed with a recommended sealing compound.
- 3. Prior to installation, the tapware must be pressure tested using the appropriate testing equipment.
- 4. Prior to installation, the installer is responsible for ensuring installation of the correct plumbing fittings and the set out distances are correct for the product supplied.

The following diagram is an installation guideline using an example of an exposed tapware for your installation reference. The product you have purchased may have similar but different configurations.

