


Kado Lux Frameless Rectangle Shower Panel 900mm, 1000mm, 1200mm

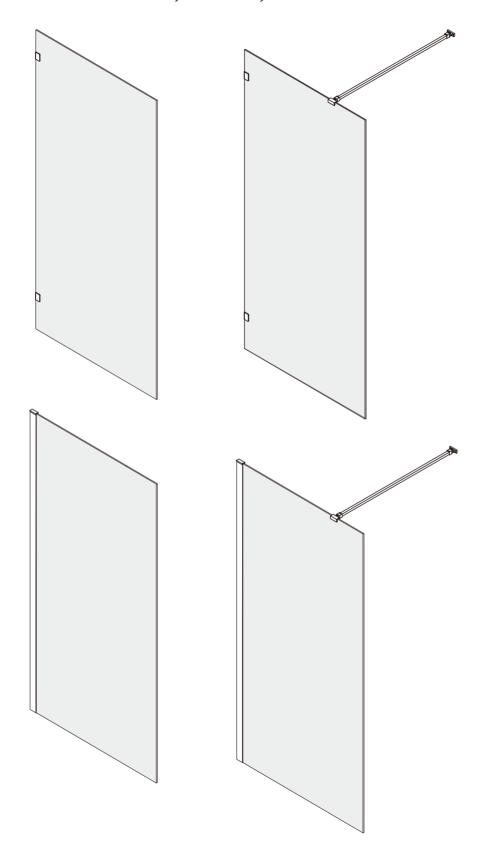



Important - Pre-Installation Instructions


- Please read this entire instruction book before commencing installation.
- A licensed tradesman must be used for the installation.
- Instructions to install a Shower Base with this Screen/Panel are included with the Base.
- These Shower Screens/Panels can also be installed directly onto a tiled floor.
- Ensure there is a gasket between all glass and metal components.
- Leave the plastic protectors on the glass corners until the last possible moment and handle with care.
- In cold climates, warming the gaskets and seals with hot water or a hairdryer will assist installation.


Tools Required

- Use the correct type of drill bit for the material being drilled, with 6mm required for anchor fixing and 3mm used for screwing directly into the wall studs.
- As with all toughened glass, take care while handling and wear safety goggles and gloves for personal protection.
- Use of a non-acidic silicone is recommended.

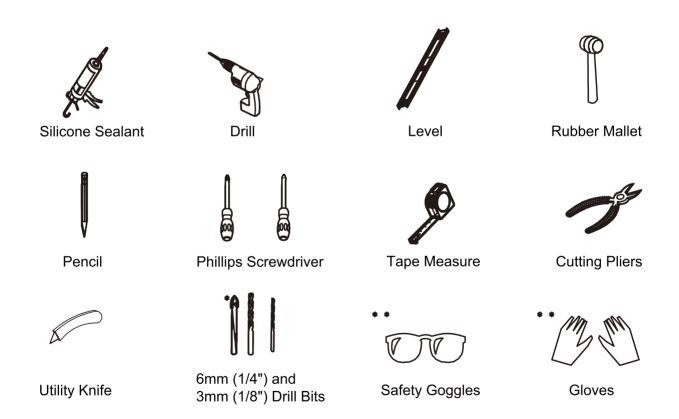

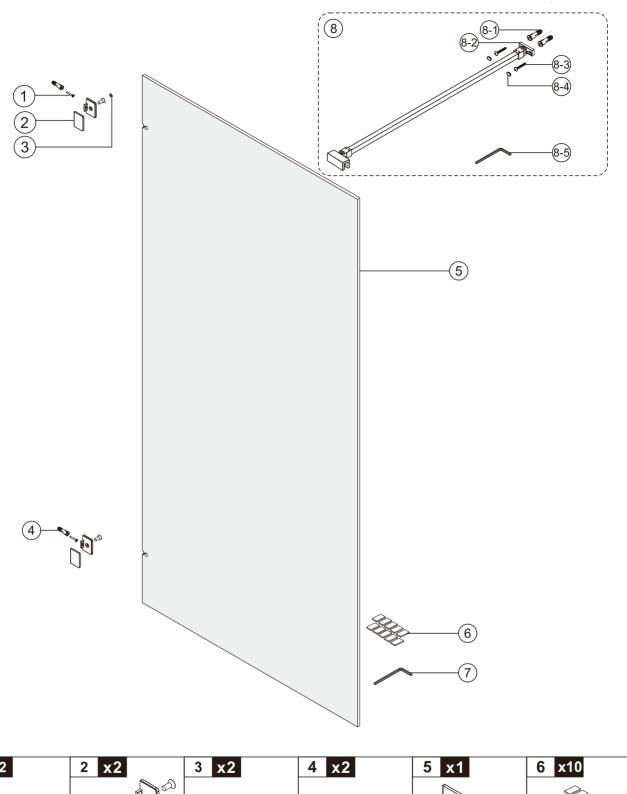


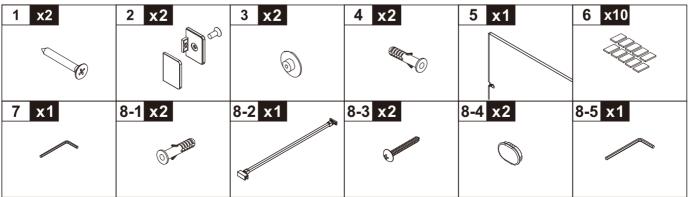


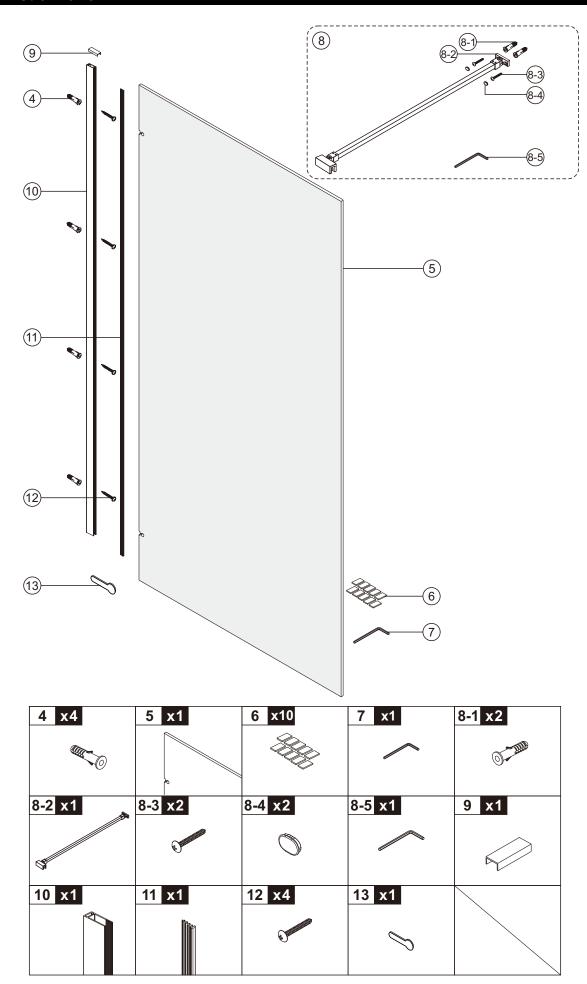


Determining Wall Clip / Wall Channel Location

When commencing step 1 on the following page, please refer to this drawing and the tabulated dimensions for your size of system to assist in the correct location of the wall clips or wall channel.

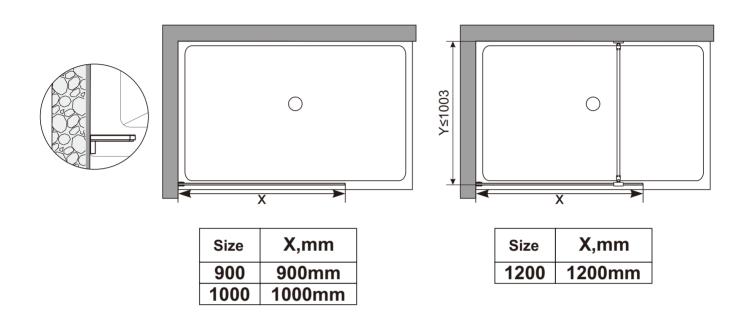

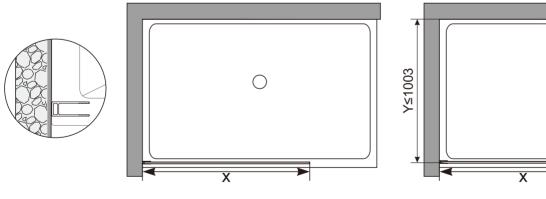


Size	X,mm
900	906~921mm
1000	1006~1021mm




 \bigcirc


A-1

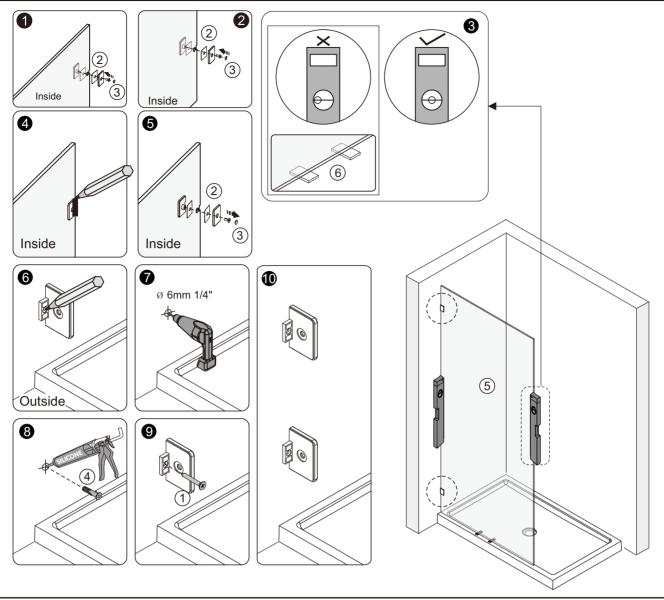


A-2

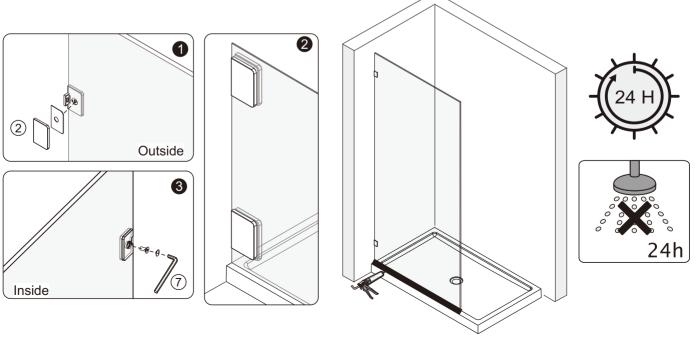


B-1

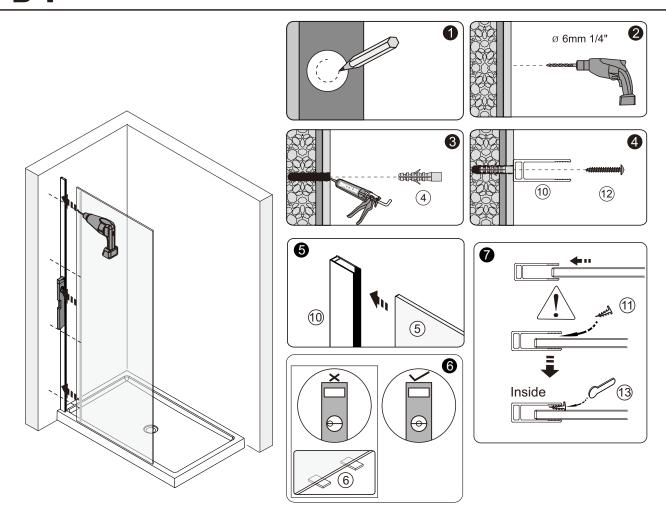

B-2

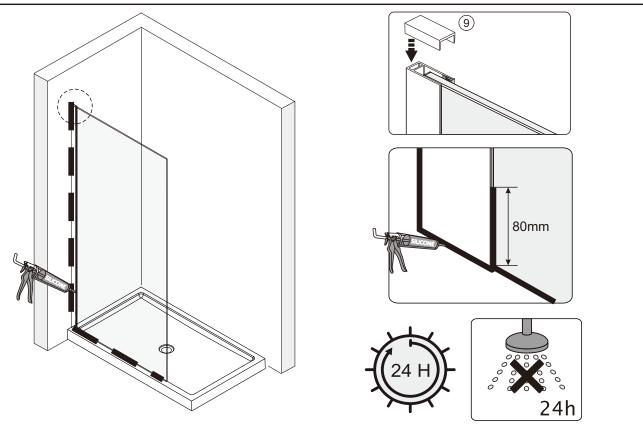

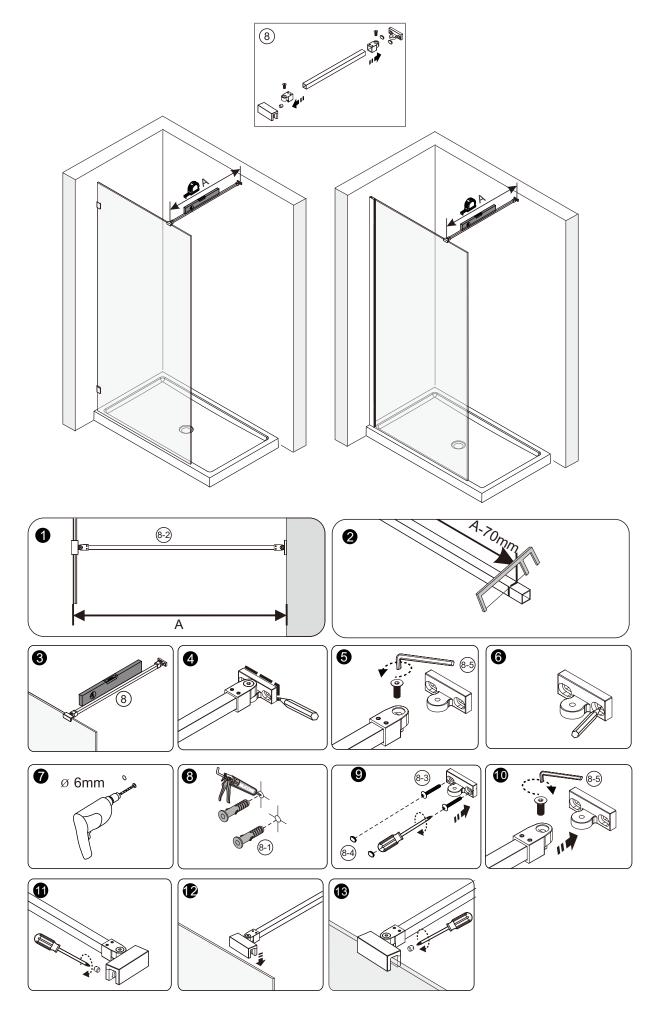



Kado Lux Frameless Rectangle Shower Panel 900mm, 1000mm, 1200mm

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

