


Posh

Installation Instructions

Posh Domaine MKII Shower Screen 1200mm

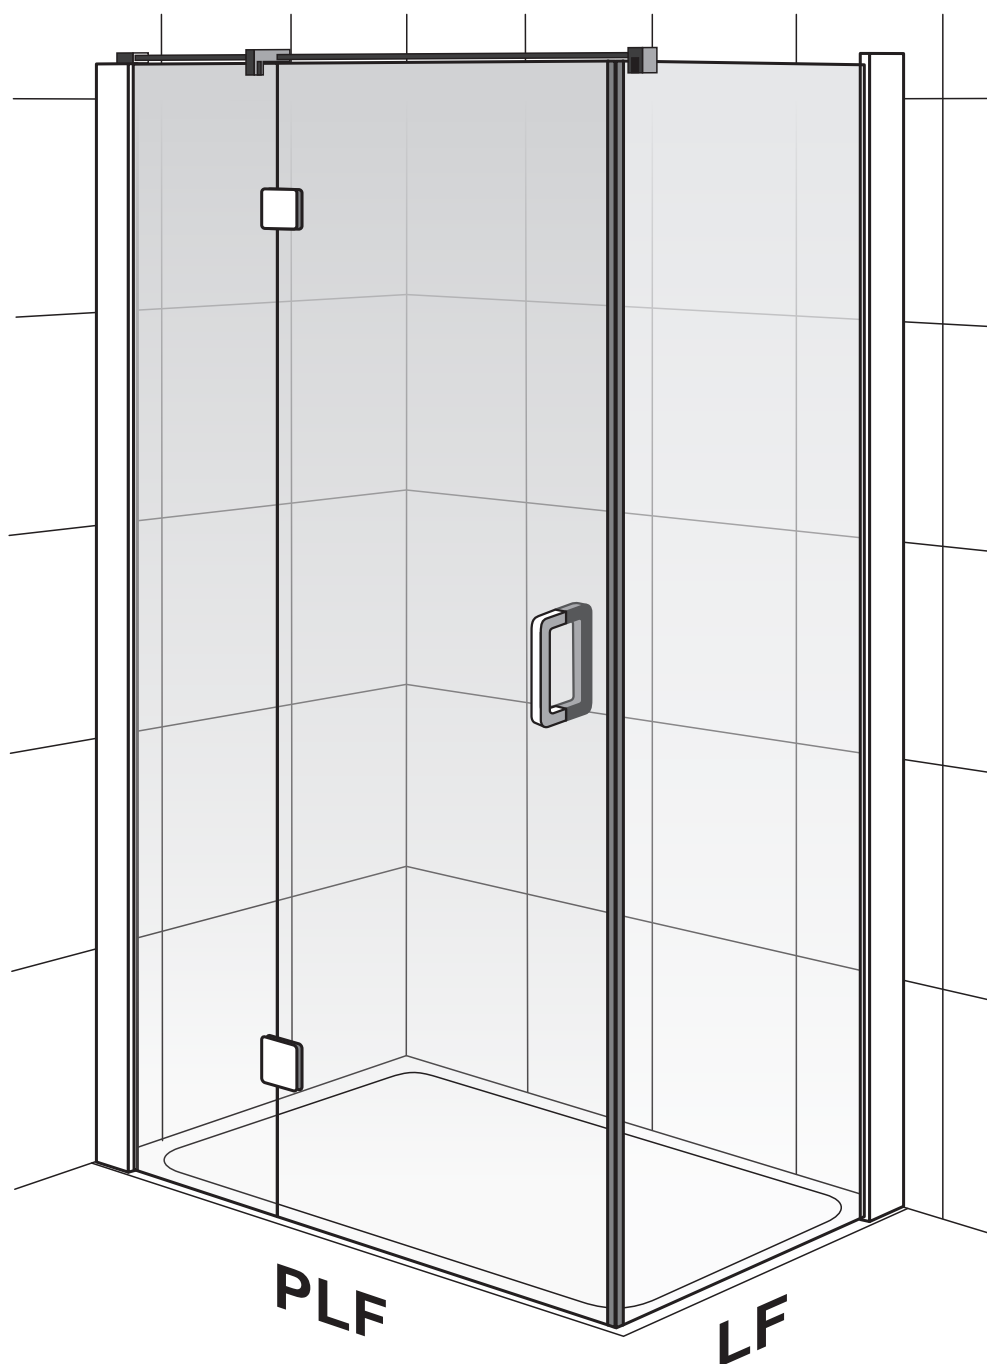


Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference

reece™



Page 1 of 4

Posh Domaine MKII Shower Screen 1200mm



1

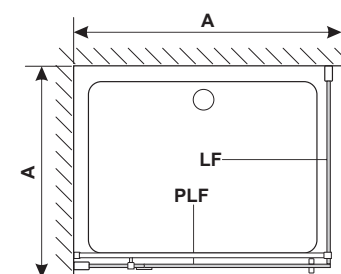




	A (mm)		A (mm)
PLF 1200	1160 ÷ 1185	LF 900	860 ÷ 885

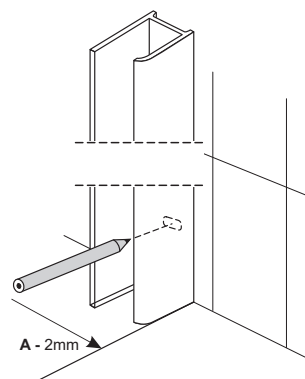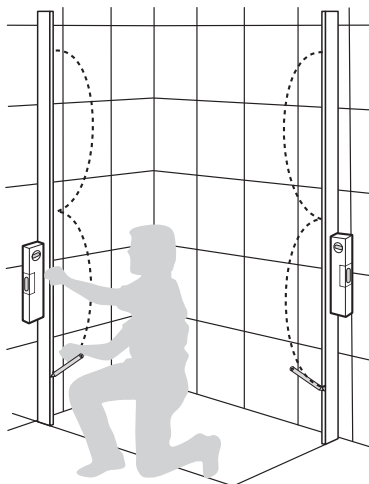




2

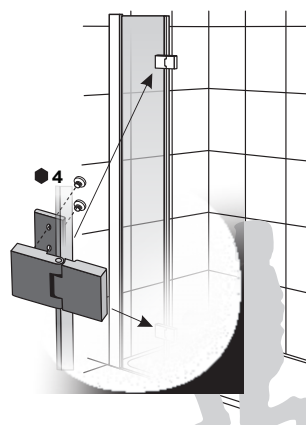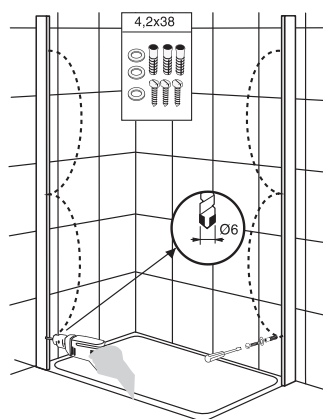

3

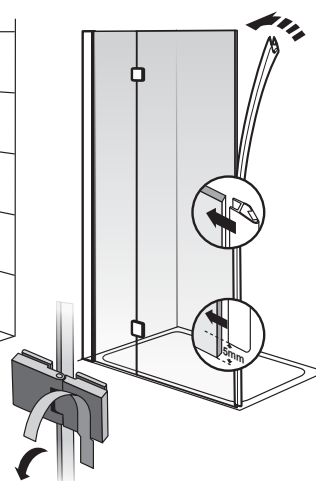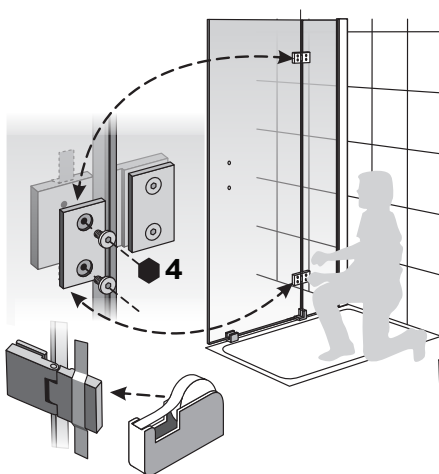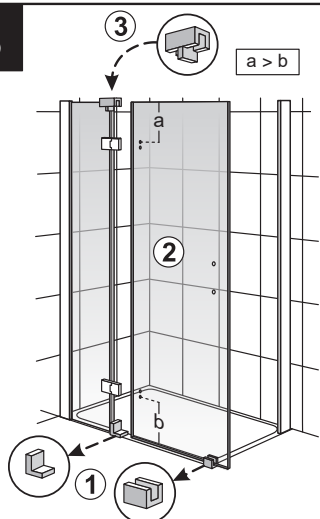





Posh Domaine MKII Shower Screen 1200mm

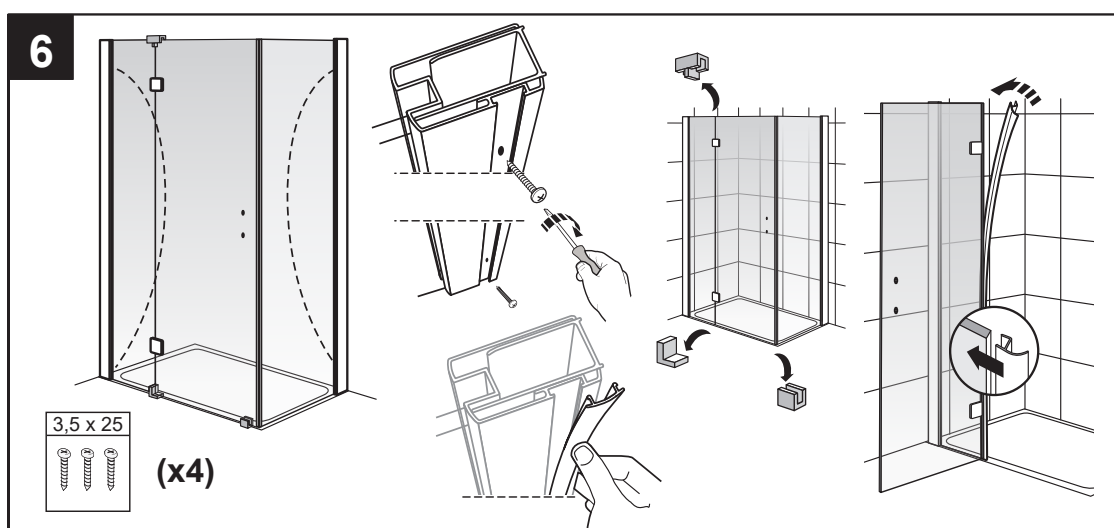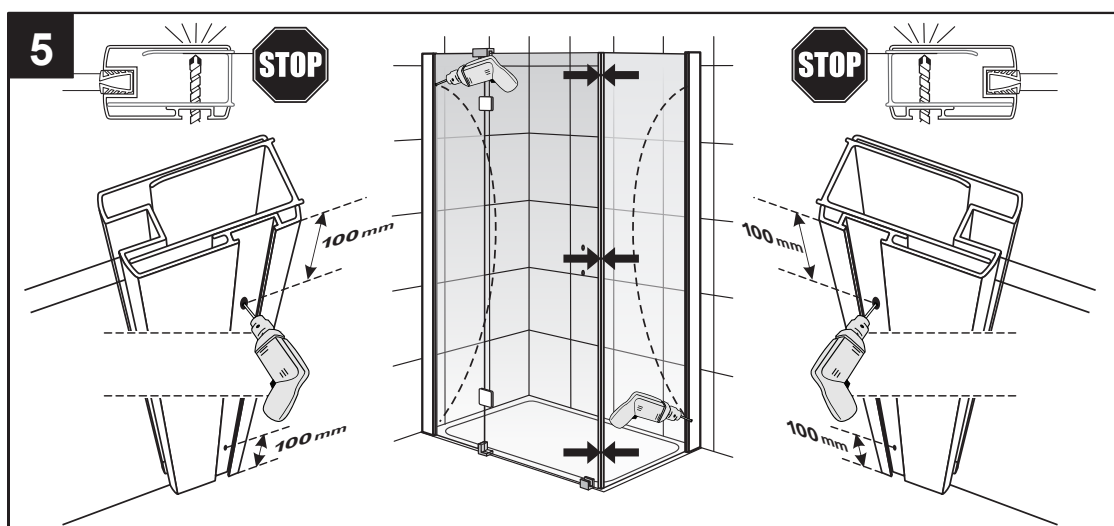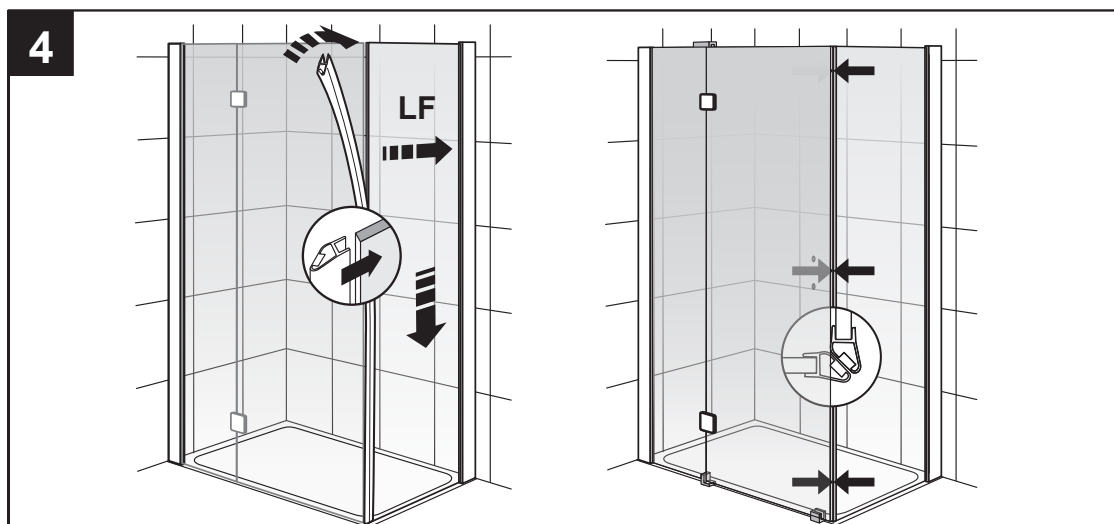

Posh

Installation Instructions

Posh Domaine MKII Shower Screen 1200mm

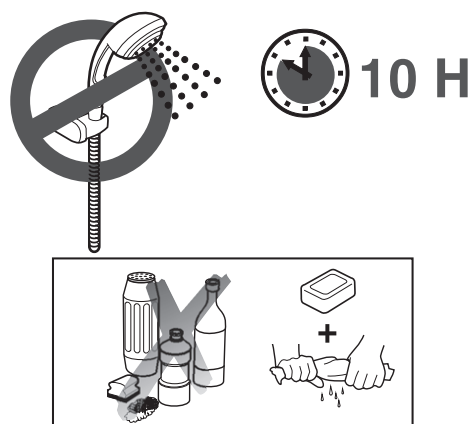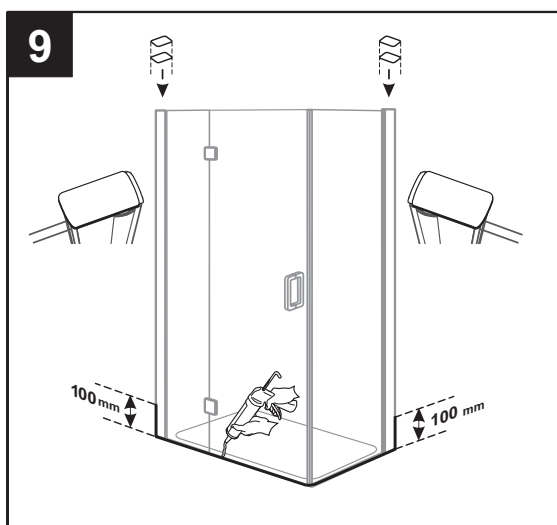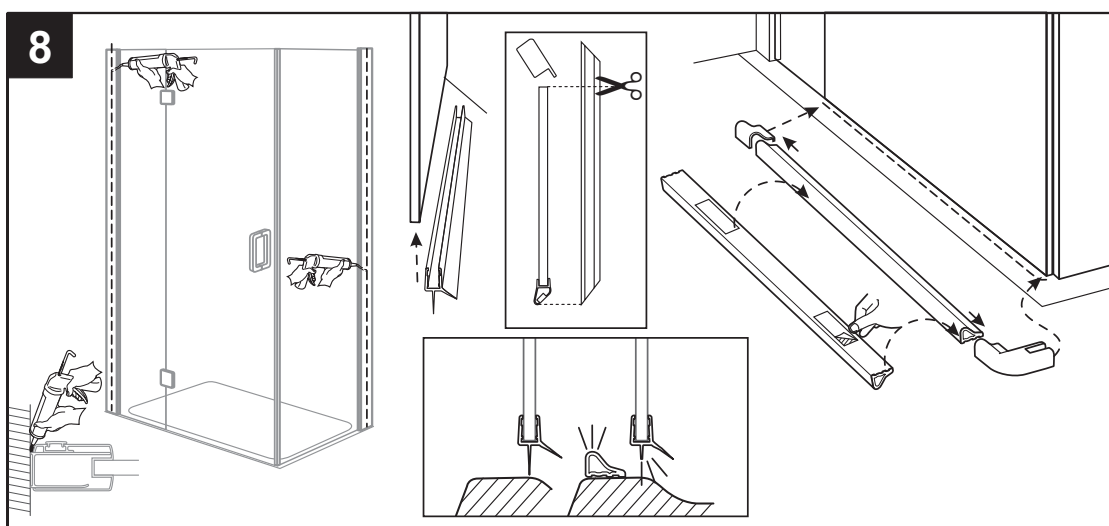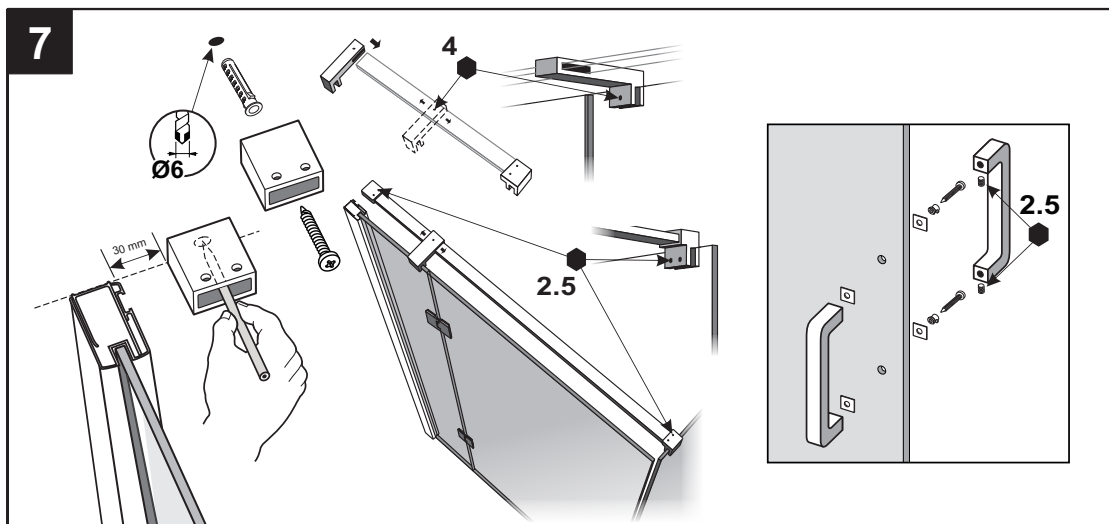

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference

reece