




Milli Pure Diverter

Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500 kpa.
Maximum water temperature is 65 deg.c.

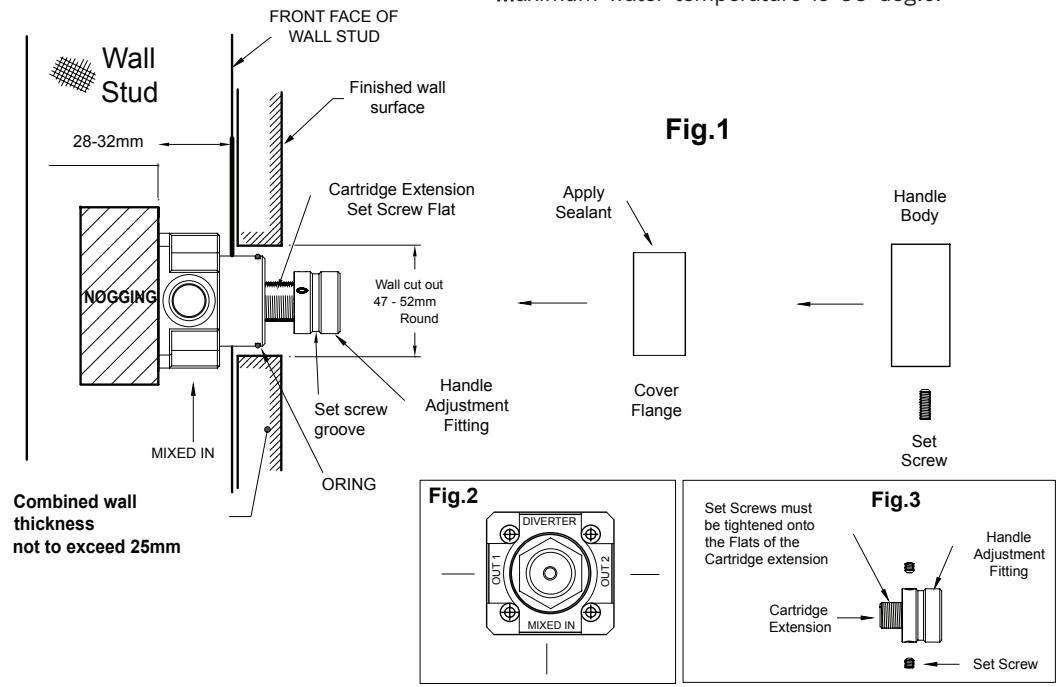

ROUGH IN PLUMBING

- Prior to installing, calculate the finished wall thickness to ensure enough adjustment is available when fitting the Handle.
- The Diverter is supplied with a plastic cover to protect the Diverter during Plastering and Tiling.
- The "Mixed In" and Outlet ports are marked on the shoulder of the Diverter body to indicate the correct connection.

Note: Do not cross connections between "Mixed In" and Outlet ports (See Pipe Connections)

- Set a Nogging between 28 - 32mm back from the face of the wall stud. (see Fig. 1).
- Using the screws provided, fix the Diverter to the Nogging.
- Ensure the Diverter is aligned square and well secured.
- Flush all water feed lines. Pipes and fittings must be free from any dirt and debris before connecting to the Diverter.
- Once all water fittings are connected, check Hot/Cold water flow by operating the Diverter.
- Check for any water leaks.
- Once all checks have been made, leave the Diverter in the closed position and replace the protective cover.
- Store remaining parts in a safe place until wall coverings have been completed and final fit-off is required (Dress finishing)

DRESS FINISHING AND HANDLE ADJUSTMENT

Prior to fit off ensure the correct size cut out around the Diverter has been achieved.(see Fig.1)
Remove the protective Cover from the Diverter. Ensure the Oring is intact and the installation is clean and free from any debris.
Apply sealant to the outside of the Cover Flange and fit to the Diverter.

Fit the Handles onto the Adjustment Fitting.
If adjustment is required, remove the Handles and loosen the Set Screws of the Adjustment Fitting.
Wind the Adjustment Fitting to reduce or increase the gap between the Wall and the Handle. (see Fig.2)

NOTE: Extensions may be acquired if correct installation can not be achieved.(Contact manufacturer)

Once the gap from the Wall to the Handle is between 2-3mm, remove the Handle and tighten the Set Screws of the Adjustment Fitting.
When securing the Handle adjustment Fitting, ensure the Set Screws are tightened onto the flats of the Cartridge Extension. (see Fig.2)
Do not tighten the Set Screws on the threads of the Cartridge Extension.
Fit the Handle so the Set Screw is positioned at the bottom.(tighten well)

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference