







## Roca Meridian Back to Wall Bidet

### INSTALLATION INSTRUCTIONS

**NOTE:** It is recommended that a short trap is used for installation.

Waste setout measurement will depend on waste used.

Cover is optional, if cover is used it **MUST** be installed before Bidet is fixed to the wall.

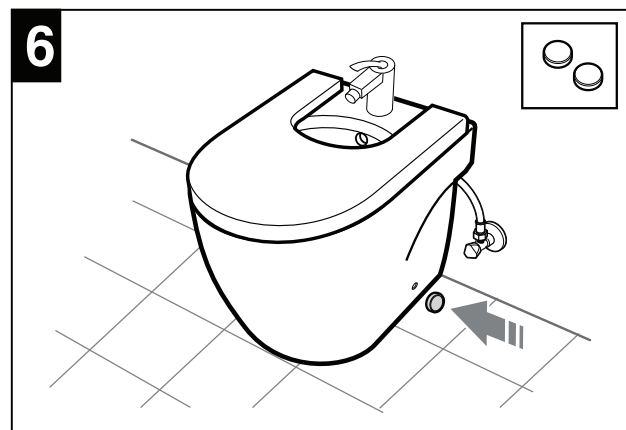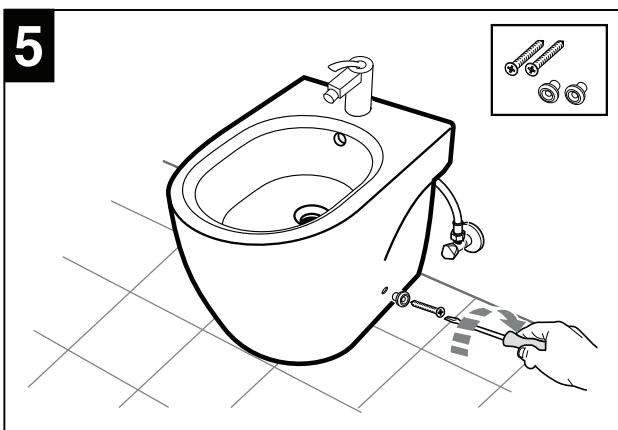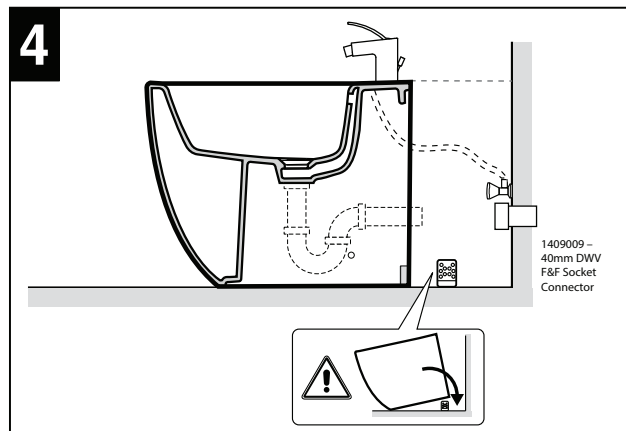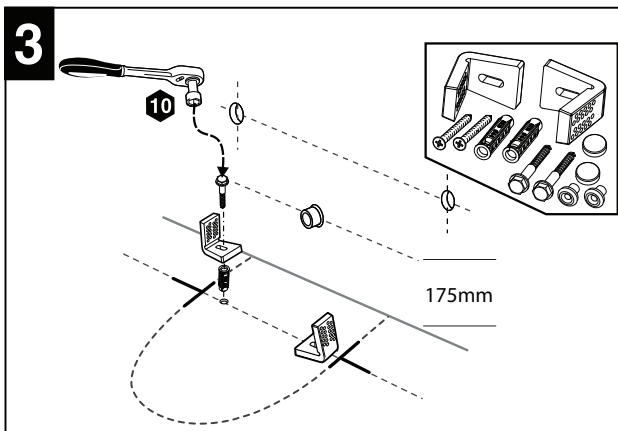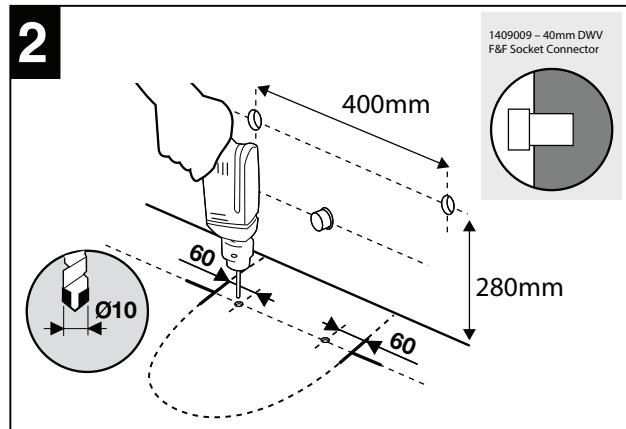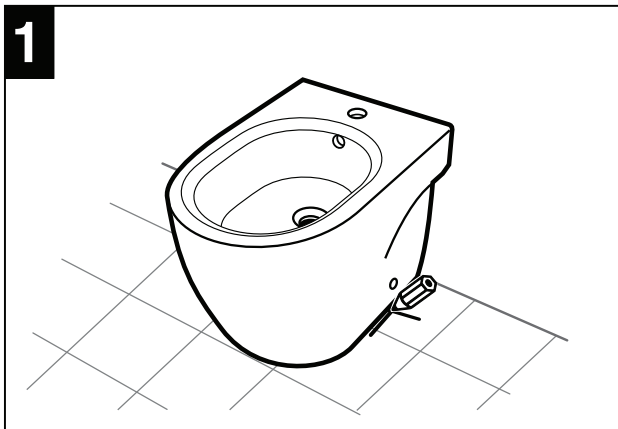

**Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference**

Published 27/09/2021