



1

Cut a mounting hole 35mm in diameter. There must be a minimum 12mm width of flat around the hole.

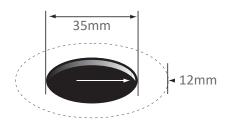


2

Screw the Red Marked Hose into Copper extentions marked with RED TAPE.
And Blue hose into remaining copper extension.



3


Feed the Hoses and Rod through the mounting hole and place mixer into position.



4

Underneath the Mounting Hole, feed the Rubber Mounting Gasket then the Mounting Plate onto the Threaded Rod.


Firmly fasten the Lock Nut using the provided Lock Nut Spanner.

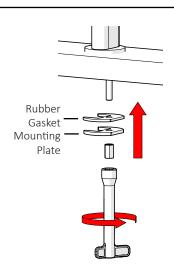

5

Connect hoses to the water supply.

Test and check for leaks.

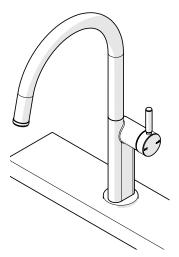

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:

- Gravity-fed water systems
- \bullet Some instantaneous hot water systems

Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

